
## CHASEN

Designed by Patricia Urquiola, 2007

F1636009

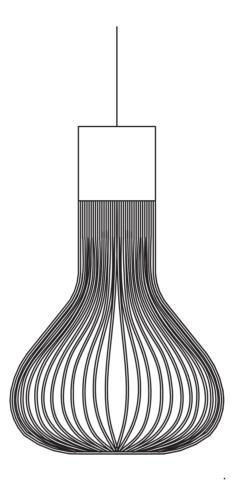

## FLOS

EN

**CHASEN** F1636009



01. RA3690209 – White ceiling rose assembly 02. RF1636009 – White diffuser assembly


EΝ

**CHASEN** F1636009

RA3690209

WHITE CEILING ROSE ASSEMBLY



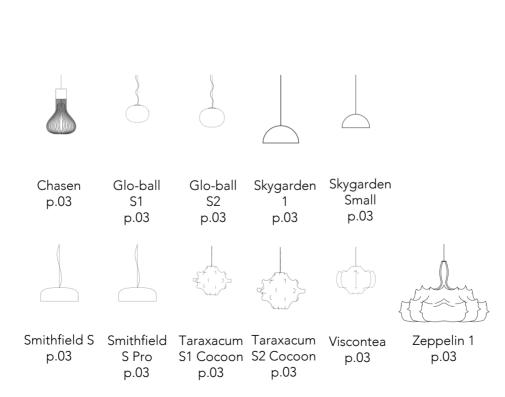


EN

## **CHASEN** F1636009

## RA3690209

WHITE CEILING ROSE ASSEMBLY

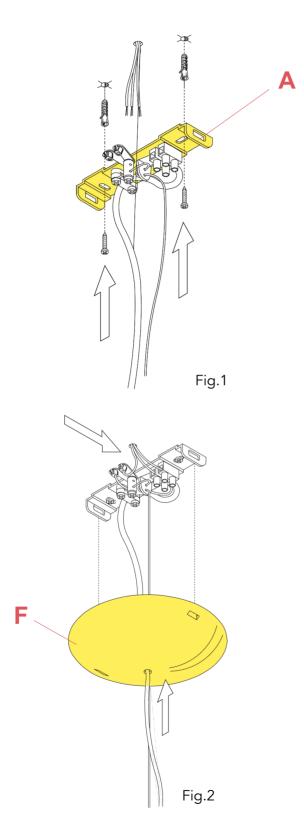

Fix the wall fixture (A) with the appropriate expansion bolts. **NOTE:** Select and employ screw anchors which are suited to the surface where the appliance is to be installed.

Connect the power cable to the terminal box (not supplied with the spare-part). Mount the ceiling-rose (F).

EΝ

**CHASEN** F1636009

RF1636009 WHITE DIFFUSER ASSEMBLY



EΝ

**CHASEN** F1636009

RF1636009 WHITE DIFFUSER ASSEMBLY

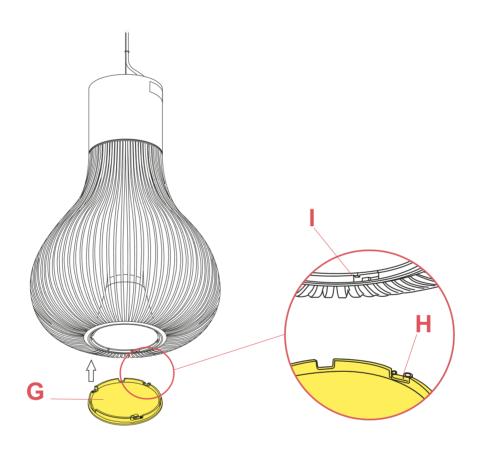


Fig.1

Insert the diffuser (G) in the diffuser ring ensuring to position the three hooks (H) of the diffuser in correspondence of the appropriate made openings (I) of the ring, as shown in the image, and then lock the diffuser by rotating clockwise the knobs present on the diffuser (G).