
FLOS

2097/50


Designed by Gino Sarfatti, 1958

A1502031

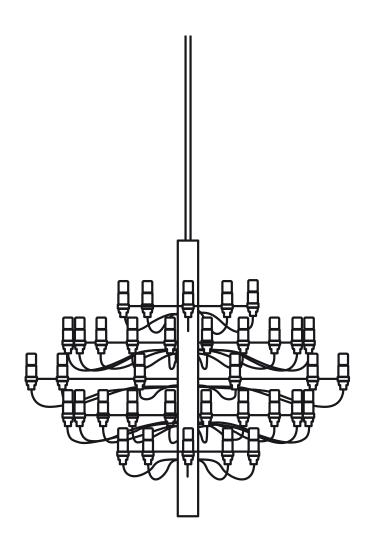

EN

2097/50 A1502031

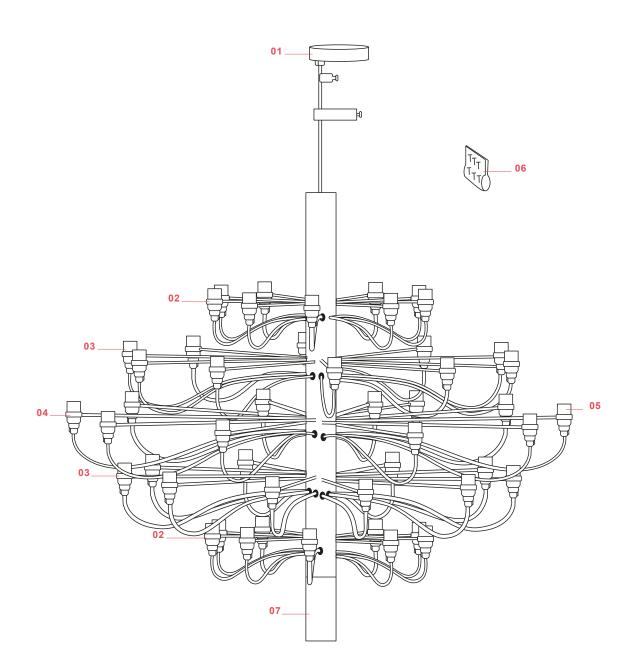

- 01. RL7060700 Ceiling rose
- 02. RF26022 Opal black short arm (200mm)
- 03. RF26024 Opal black medium arm (375mm)
- **04. RF26025** Opal black long arm (475mm)
- **05. RL7050100** E14 lamp holder
- 06. RF1400100 Opal black screw kit
- 07. RF1400300 Opal black lower cap

2097/50 A1502031


RL7060700 CEILING ROSE



2097/50 A1502031

ΕN

RL7060700 CEILING ROSE

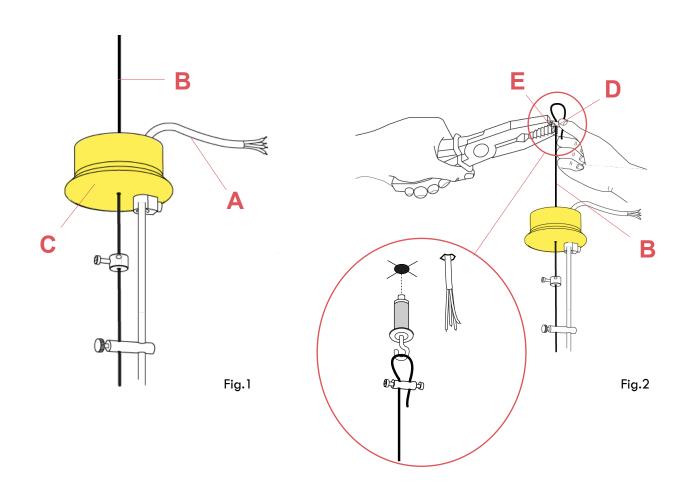

Insert the power supply cable (A) and the steel wire (C) through the ceiling rose (C). Adjust and then cut the steel wire (B) to the length desired. Insert the steel wire (B) through the clamp (D) so as to form a loop. Tighten screw (E).

2097/50 A1502031

RL7060700

CEILING ROSE

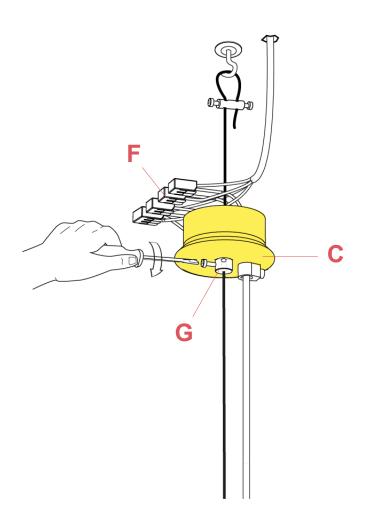


Fig.3

Connect the power supply cord to the terminal block (F). The apparatus has been designed for double wall switch: Neutral wire = BLUE. 1st phase wire for 1st wall switch = BROWN.

If you choose to utilize only on single wall switch it is necessary to bridge the brown wire with the black wire. Push the ceiling rose (C) into position and lock it through the cable clamp (G).

2097/50 A1502031

RF26022


OPAL BLACK SHORT ARM (200mm)



2097/50 A1502031

RF26022

OPAL BLACK SHORT ARM (200mm)

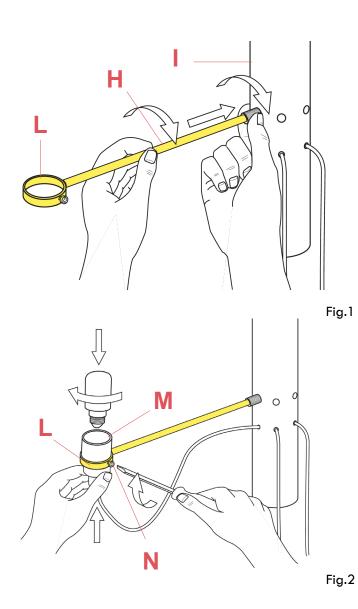

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).

2097/50 A1502031

RF26024


OPAL BLACK MEDIUM ARM (375mm)



2097/50 A1502031

RF26024

OPAL BLACK MEDIUM ARM (375mm)

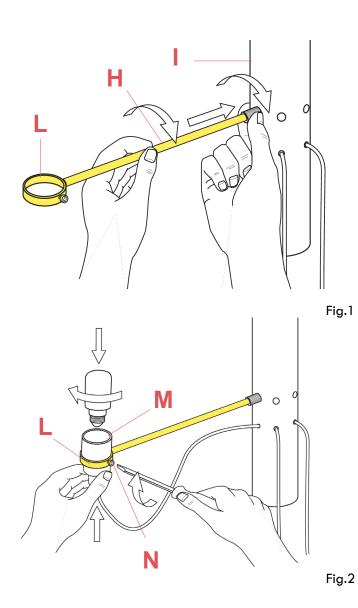

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).

2097/50 A1502031

RF26025


OPAL BLACK LONG ARM (475mm)



2097/50 A1502031

RF26025

OPAL BLACK LONG ARM (475mm)

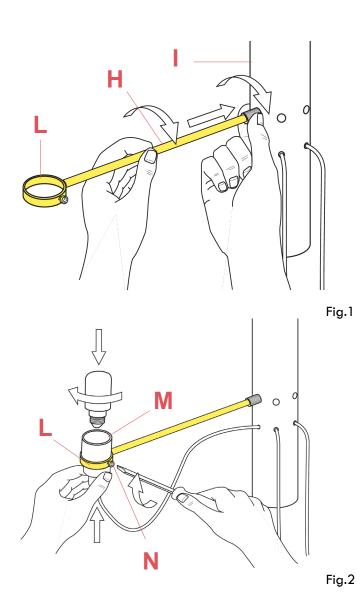

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).

FLOS


REV. 1 DATE 07/06/2021

ΕN

2097/50 A1502031

RL7050100 E14 LAMP HOLDER




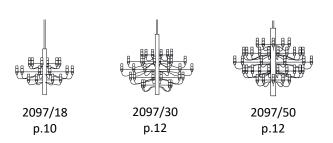

2097/50 A1502031

RL7050100

E14 LAMP HOLDER

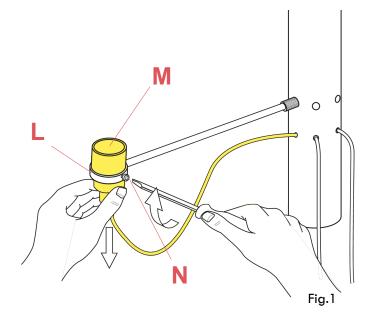

Unfasten the screw (N) and free the lamp holder (M) from the ring of the arm (L) present on the lamp fixture.



Fig.2

Loosen the screw (A) of the cable clamp on the spare-part kit and also the one present on the lamp fixture.

EN

2097/50 A1502031

RL7050100 E14 LAMP HOLDER



Fig.3



Fig.4

Push down the brass central contact (B) of the fitting of the spare part kit and also on the fitting of the lamp fixture.

2097/50 A1502031

RL7050100 E14 LAMP HOLDER

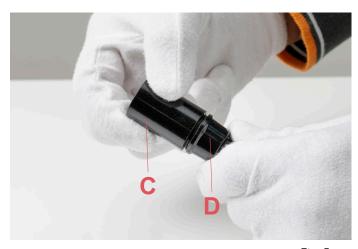


Fig.5

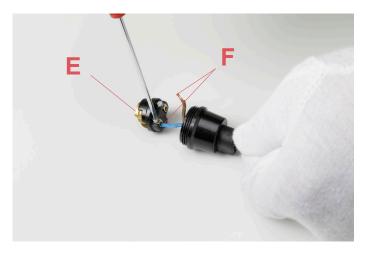


Fig.6

Unfasten the sleeve (C) from the support (D) of the spare-part kit and also on the lamp fixture.

Disconnect the electrical wires (F) from the fitting (E) on the spare-part kit and also on the lamp fixture. Remove all the components from the electrical cable.

2097/50 A1502031

RL7050100 E14 LAMP HOLDER

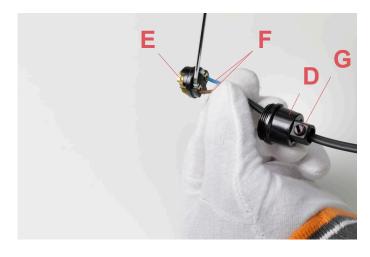




Fig.7

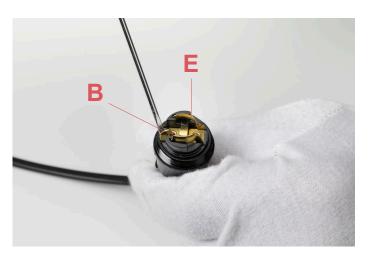


Fig.9

Fig.8

Assemble now the new spare-part:

Insert through the electrical cable the cable clamp (G) and the support (D).

Connect the wires (F) on the fitting (E) respecting the polarities.(Fig.7)

Insert the fitting (E) inside the support (D).(Fig.8)

Lift-up the brass central contact (B) on the fitting (E). (Fig.9)

Fasten the sleeve (C) on the support (D).(Fig.5 page 15)

Lock the cable by fastening the screw (A) of the cable clamp.(Fig.2 page 13)

Once replaced the lamp holder it is necessary to insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).(Fig.1 page 13)


REV. 1 DATE 07/06/2021

ΕN

2097/50 A1502031

RF1400100 OPAL BLACK SCREW KIT



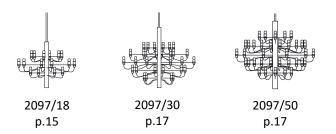

REV. 1 DATE 07/06/2021

ΕN

2097/50 A1502031

RF1400300 OPAL BLACK LOWER CAP

