


# 2097/50

Designed by Gino Sarfatti, 1958

A1501059

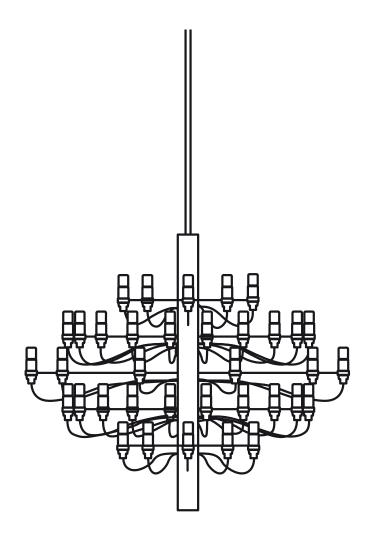




# 2097/50

ΕN

A1501059

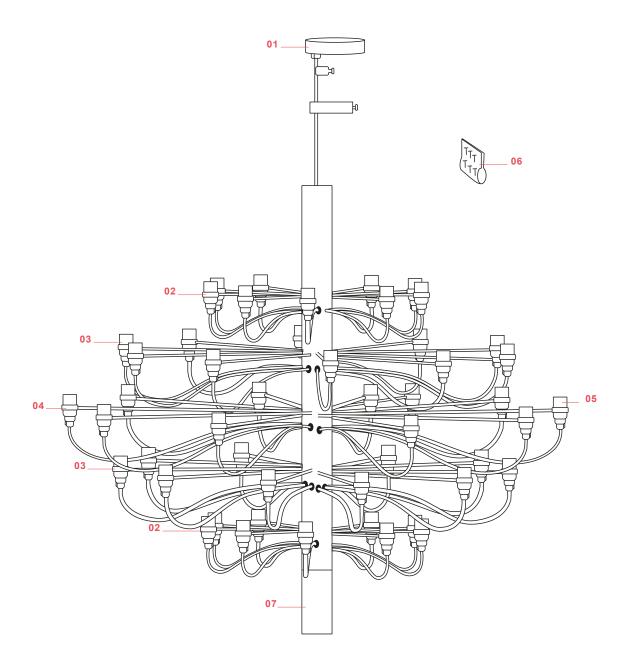

- $\textbf{01. RL7060700} \ \text{Ceiling rose}$
- **02. RL7060459** Brass short arm (200mm)
- **03. RL7060558** Brass medium arm (375mm)
- **04. RL7060659** Brass long arm (475mm)
- **05. RL7050100** E14 lamp holder
- **06. RL7050759** Brass screw kit
- **07. RL7060158** Brass lower cap



ΕN

# RL7060700

**CEILING ROSE** 






#### ΕN

### RL7060700

**CEILING ROSE** 

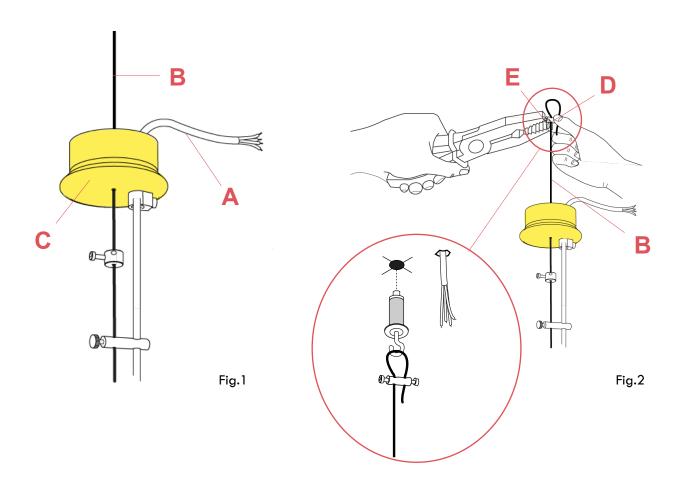

Insert the power supply cable (A) and the steel wire (C) through the ceiling rose (C).

Adjust and then cut the steel wire (B) to the length desired.

Insert the steel wire (B) through the clamp (D) so as to form a loop. Tighten screw (E).

ΕN

### RL7060700

**CEILING ROSE** 

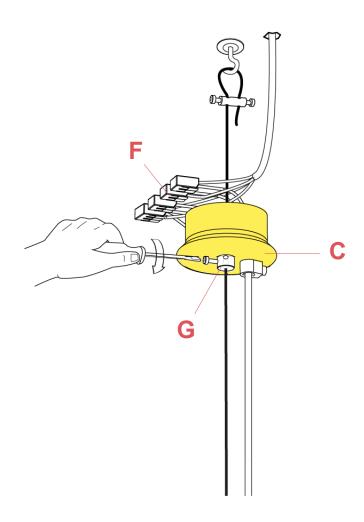


Fig.3

Connect the power supply cord to the terminal block (F). The apparatus has been designed for double wall switch:

Neutral wire = BLUE.

1st phase wire for 1st wall switch = BROWN.

2nd phase 2nd wall switch = BLACK.

If you choose to utilize only on single wall switch it is necessary to bridge the brown wire with the black wire.

Push the ceiling rose (C) into position and lock it through the cable clamp (G).



ΕN

## RL7060459

BRASS SHORT ARM (200mm)






#### ΕN

### RL7060459

BRASS SHORT ARM (200mm)

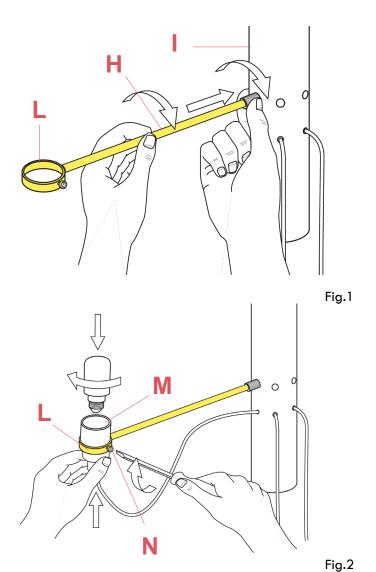

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).



ΕN

## RL7060558

BRASS MEDIUM ARM (375mm)






#### ΕN

### RL7060558

**BRASS MEDIUM ARM (375mm)** 

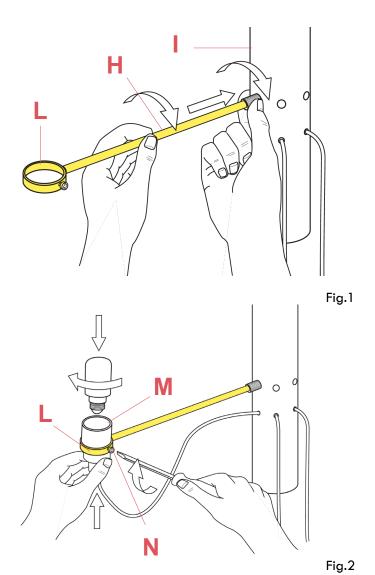

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).



ΕN

## RL7060659

BRASS LONG ARM (475mm)






#### ΕN

### RL7060659

BRASS LONG ARM (475mm)

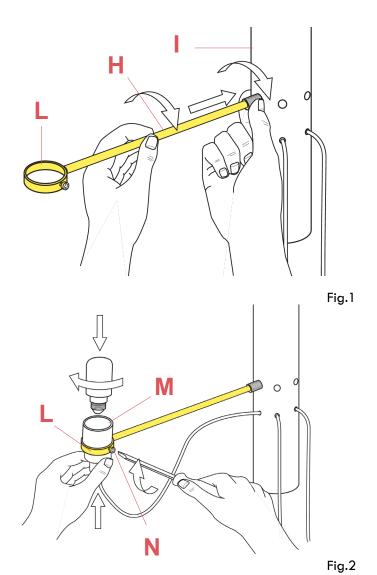

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).



ΕN

# RL7050100

E14 LAMP HOLDER





2097/1 p.10



2097/30 p.12




2097/50 p.12

#### ΕN

### RL7050100

E14 LAMP HOLDER

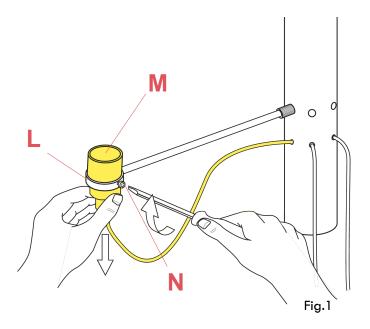

Unfasten the screw (N) and free the lamp holder (M) from the ring of the arm (L) present on the lamp fixture.

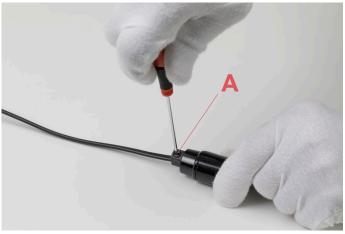


Fig.2

Loosen the screw (A) of the cable clamp on the spare-part kit and also the one present on the lamp fixture.

ΕN

# RL7050100

E14 LAMP HOLDER



Fig.3



Fig.4

Push down the brass central contact (B) of the fitting of the spare part kit and also on the fitting of the lamp fixture.

#### ΕN

### RL7050100

E14 LAMP HOLDER



Fig.5

Unfasten the sleeve (C) from the support (D) of the spare-part kit and also on the lamp fixture.

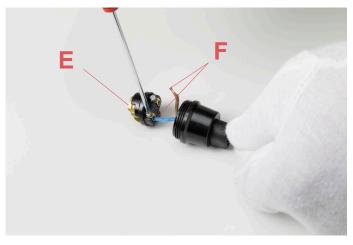


Fig.6

Disconnect the electrical wires (F) from the fitting (E) on the spare-part kit and also on the lamp fixture. Remove all the components from the electrical cable.

ΕN

2097/50 A1501059

# RL7050100

E14 LAMP HOLDER

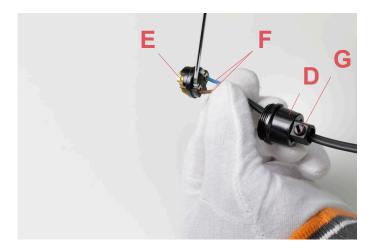




Fig.7 Fig.8



Fig.9

Assemble now the new spare-part:

Insert through the electrical cable the cable clamp (G) and the support (D).

Connect the wires (F) on the fitting (E) respecting the polarities.(Fig.7)

Insert the fitting (E) inside the support (D).(Fig.8)

Lift-up the brass central contact (B) on the fitting (E). (Fig.9)

Fasten the sleeve (C) on the support (D).(Fig.5 page 15)

Lock the cable by fastening the screw (A) of the cable clamp.(Fig.2 page 13)

Once replaced the lamp holder it is necessary to insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).(Fig.1 page 13)




#### ΕN

## RL7050759

BRASS SCREW KIT



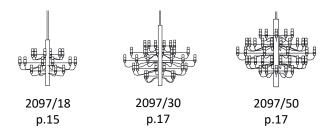



ΕN

# RL7060158

**BRASS LOWER CAP** 

