


GLO-BALL BASIC 1

Designed by Jasper Morrison, 1998

F3021000

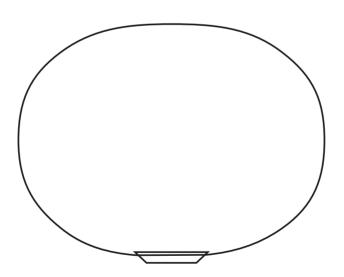





GLO-BALL BASIC 1

ΕN

F3021000

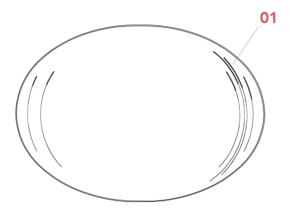

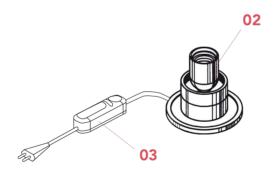

01. F3050061 – White diffuser

02. RF2500200 – Lamp holder assembly

03. RF32262 - Led dimmer 1004P LFP100-240V 4-150WHL 4-25W




ΕN

F3050061

WHITE/GREY DIFFUSER 1



Diameter of the fixing metal ring Glo-Ball 1

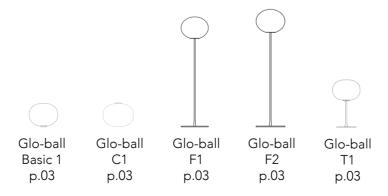


WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

F3050061

WHITE/GREY DIFFUSER 1

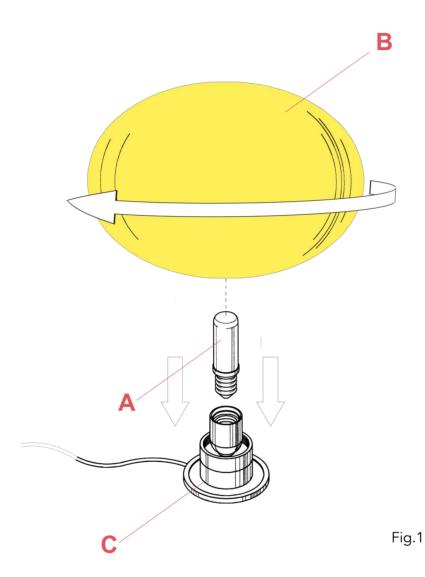

Insert the bulb (A). Position the diffuser (B) on the support (C) and secure it, turning it clockwise.




ΕN

RF2500200

LAMP HOLDER ASSEMBLY



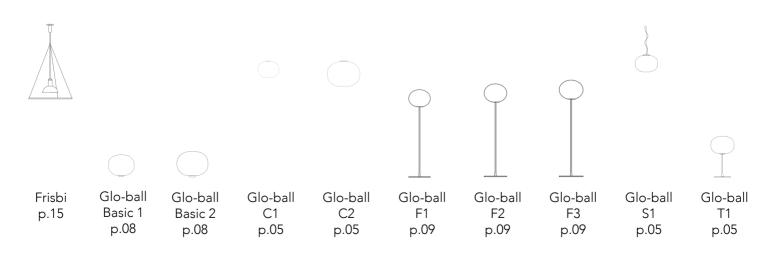

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.1



Fig.2

Remove the base cover (A) by turning the assembly upside down, insert a flat headed screw driver inside one of the openings and then force it to open.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.3

Remove the cable clamp (B) by unfastening the 2 screws.



Fig.4

Pull the electrical cable (C) in away that when removing the lamp holder you have some spare extension cable. This operation is done for an easier removal of the lamp holder.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.5

Turn the assembly around.

Remove the lamp holder.

Insert a flat headed screw driver inside the opening of the lateral clamp and unhook the lamp holder (D) from the support. Repeat the same operation also for the opposite side.

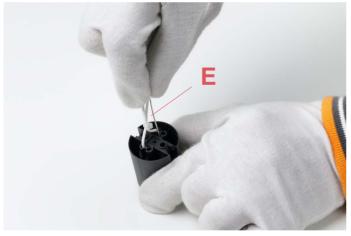


Fig.6

Remove the lamp holder from its support and disconnect the electrical wires by pressing the push terminals with a paper clip (E) or something similar.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.7



Fig.8

Cut-off the cable tie (F) and remove the cable isolator (G) from the electrical cable.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.9

Unfasten the locking screw (H) by utilizing a tiny flat headed screw driver.



Fig.10

Remove the lamp holder support (I) by unfastening it from the assembly.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY





Fig.11

Fig.12



Fig.13

Assemble now the new spare-part: Tighten the lamp holder support (I) onto the assembly and then fasten the locking screw (H) by utilizing a flat headed screw driver. Insert the isolator (F).

ΕN

RF2500200

LAMP HOLDER ASSEMBLY

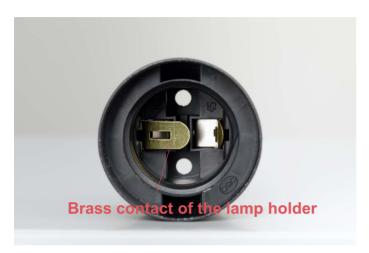


Fig.14



Fig.15

Connect the electrical wires to the lamp holder by utilizing always the paper clip. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

ΕN

RF2500200

LAMP HOLDER ASSEMBLY



Fig.14



Fig.15

Now reassembly the lamp:

Hook the lamp holder (D) on the support (I). Turn up-side down the assembly around and pull back the electrical cable (C).(Fig.4 page 7)

Position the electrical cable) between the two threaded holes and fix the cable clamp (B) by fastening the 2 screws.(Fig. 3 page 7)

Position the cover base (A) on top of the assembly (the holes of the cover must correspond with the plastic pins of the assembly) and then push down on the cover so that it clicks onto the assembly.(Fig.2 page 6)




ΕN

RF32262

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



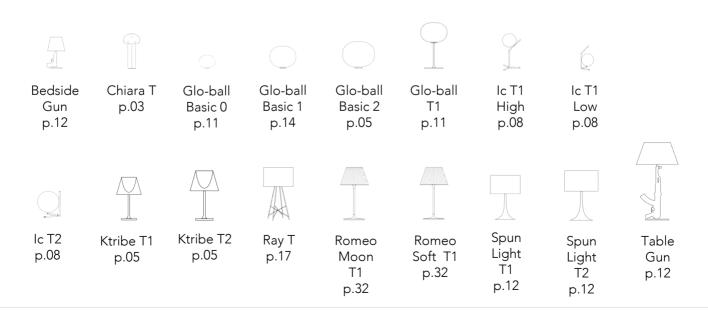

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF32262

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



Fig.1



Fig.2

Open the dimmer box of the damaged dimmer.


For the opening, it is necessary to remove the n°2 screws using a star screw driver.

Lift-up the dimmer casing from the dimmer base;

ΕN

RF32262

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W

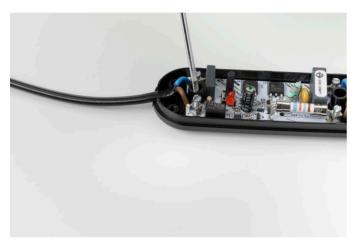

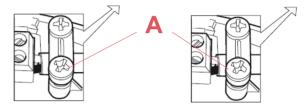


Fig.3.1

Fig.3

Remove the cable clamps by unfastening the 4 screws (A) and disconnect the wires from the terminal blocks through a tiny flat headed screw driver;



Replace the dimmer and connect the wires. When connecting the wires it is necessary to respect the polarities ($L = Brown \ and \ N = Blue$) to the terminal box.

Lock the electrical cables by fastening the screws (A) of the cable clamps and make sure to block the isolation of the electrical cable.

Close the dimmer box.

It is necessary to place the casing on top and press down until it locks in.

it is necessary to insert the n°2 screws using a star screw driver

Fig.4