
Designed by Achille and Pier Giacomo castiglioni, 1954

F3772003

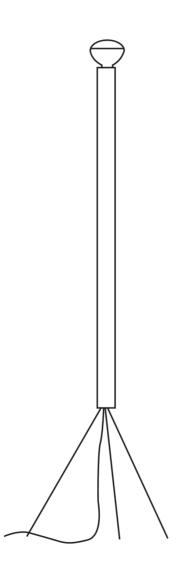

FLOS

EN

LUMINATOR DIM

F3772003

01. RF3770231 – Black leg with OR ring

02. RF28045 – Led 220/240V 40-250W 4-100W Rondò dimmer

EN

LUMINATOR DIM F3772003

RF3770231 BLACK LEG WITH OR RING

EN



BLACK LEG WITH OR RING

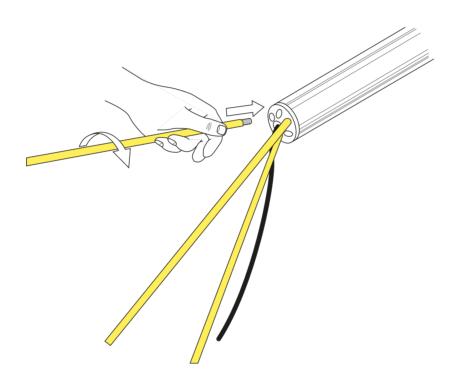


Fig.1


Fasten the leg to the lamp body.

EN

RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER



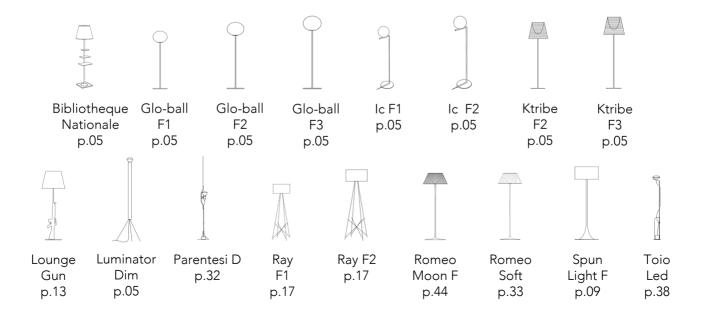

EN

RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER







Fig.2

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box;

Unfasten the screw that locks the triangle terminal cover;

EN

RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER



Fig.3



Fig.4

Turn the dimmer box and remove the terminal cover;

Unfasten the three screws of the cable clamps;

EN

RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box.

Assemble now the new dimmer: Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.