


# **MISS K**

Designed by Philippe Starck, 2003

F6255031

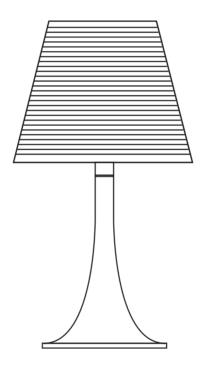




**MISS K** 

ΕN

F6255031

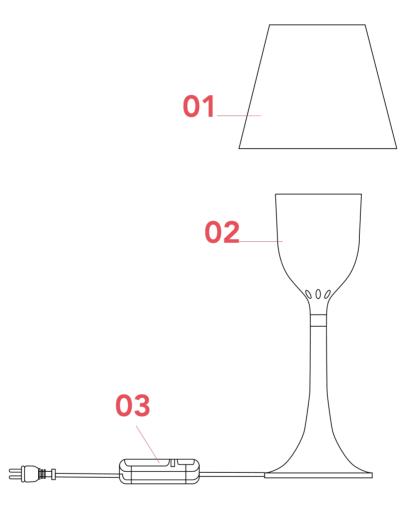

01. RF6255009 – Fumè diffuser

02. RF11791 – Internal diffuser

**03. RF28206** – Led dimmer 1004P LFP100-240V 4-150WHL




### ΕN

## RF6255009

FUMÈ DIFFUSER ASSEMBLY



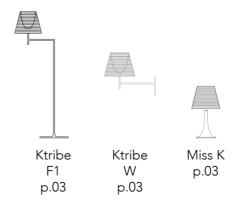

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

## RF6255009

FUMÈ DIFFUSER ASSEMBLY

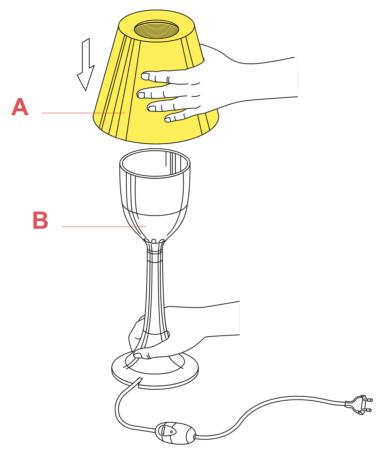


Fig.1

Lock the external diffuser (A) to the inner diffuser (B) by forcing (pushing) it to clicks-on.



ΕN

## RF11791

INTERNAL DIFFUSER



ΕN

## RF11791

INTERNAL DIFFUSER

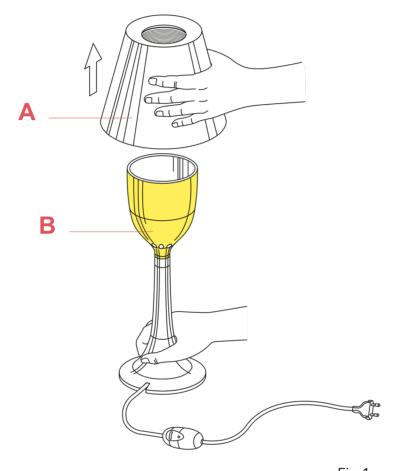


Fig.1

Remove the external diffuser (A) from the internal diffuser (B).

ΕN

## RF11791

INTERNAL DIFFUSER

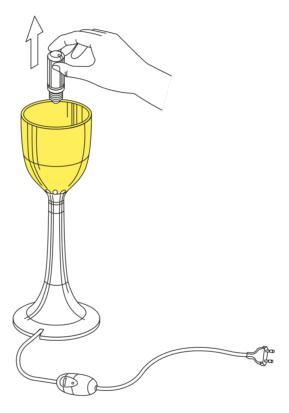


Fig.2

Remove the lamp bulb.

ΕN

## RF11791

INTERNAL DIFFUSER



Fig.3

Unfasten the 2 screws (C) inside the lamp holder (D).

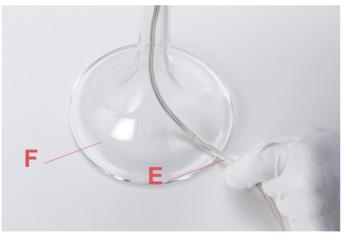


Fig.4

Push through the lamp base (F) some spare electrical cable (E).

ΕN

## RF11791

INTERNAL DIFFUSER

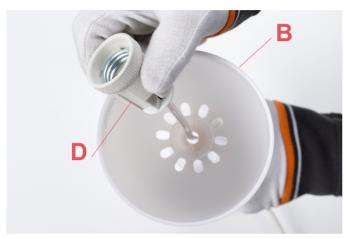


Fig.5

Extract the lamp holder (D) from the internal diffuser (B).

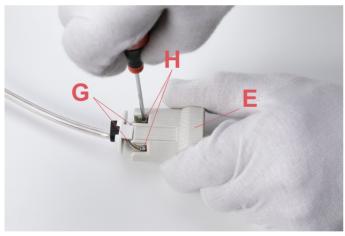


Fig.6

Disconnect the electrical wires (G) from the terminals (H) of the lamp holder (D).

#### ΕN

### RF11791

INTERNAL DIFFUSER

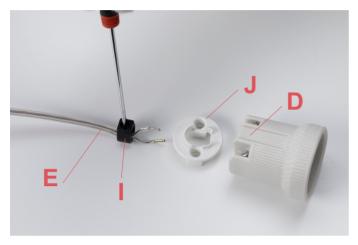


Fig.7



Fig.8

Unfasten the screw of the cable clamp (I). Slide-off from the electrical cable (E) the lamp holder (D), lamp holder support (J) and cable clamp (I). (Fig.7)

Unfasten the internal diffuser (B) from the lamp base (F). (Fig.8)

Assemble now the new spare-part: Fasten the internal diffuser (B) on the lamp base (F). (Fig.8)

Insert through the electrical cable (E), the cable clamp (I) and the lamp holder support (J).

Connect the wires to the terminals (H) of the lamp holder (D) respecting the polarities and fasten the screw of the cable clamp (I). (Fig.7)

Insert the lamp holder (D) in his apposite position inside the internal diffuser (B). (Fig.5 page 9)

Pull-out the excess cable (E) present inside the lamp base (F). (Fig.4 page 9)

ΕN

## RF11791

INTERNAL DIFFUSER

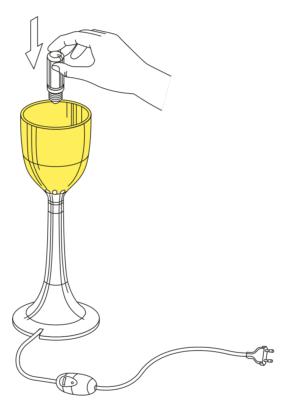



Fig.9

Install the lamp bulb.

ΕN

## RF11791

INTERNAL DIFFUSER

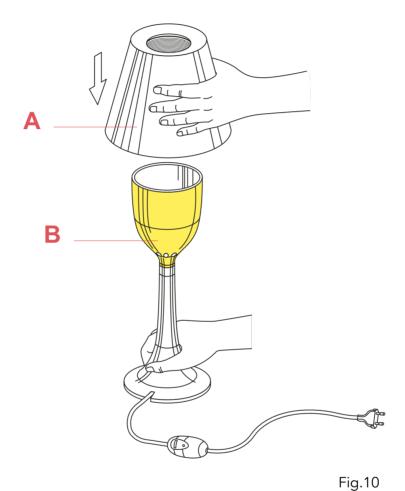

Install the external diffuser (A) on the internal diffuser (B).




ΕN

### **RF28206**

LED DIMMER 1004P LFP100-240V 4-150WHL



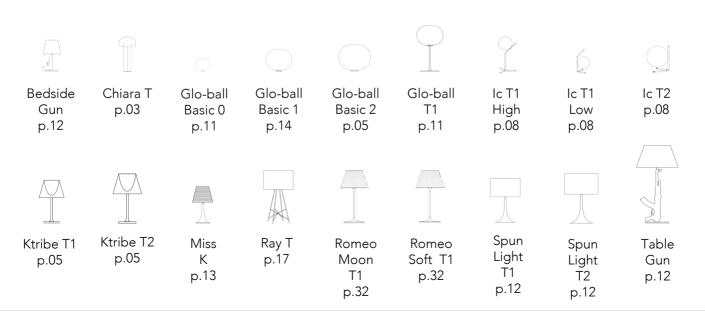

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

### ΕN

## RF28206

LED DIMMER 1004P LFP100-240V 4-150WHL



Fig.1



Fig.2

Open the dimmer box of the damaged dimmer.


For the opening, it is necessary to remove the n°2 screws using a star screw driver.

Lift-up the dimmer casing from the dimmer base;

#### ΕN

### **RF28206**

LED DIMMER 1004P LFP100-240V 4-150WHL

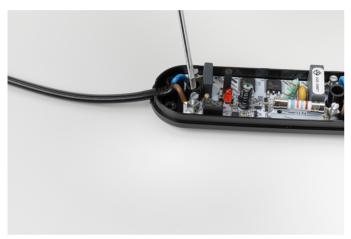

 


Fig.3.1

Fig.3



Fig.4

Remove the cable clamps by unfastening the 4 screws (A) and disconnect the wires from the terminal blocks through a tiny flat headed screw driver;

Replace the dimmer and connect the wires. When connecting the wires it is necessary to respect the polarities ( $L = Brown \ and \ N = Blue$ ) to the terminal box.

Lock the electrical cables by fastening the screws (A) of the cable clamps and make sure to block the isolation of the electrical cable.

### Close the dimmer box.

It is necessary to place the casing on top and press down until it locks in.

it is necessary to insert the n°2 screws using a star screw driver