
MISS K


Designed by Philippe Starck, 2003

F6255000

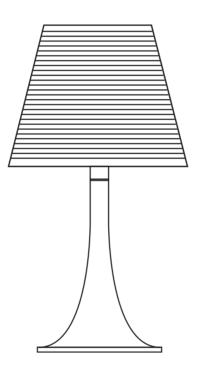

EN



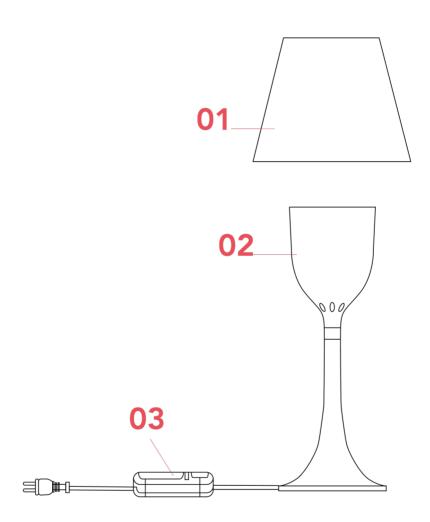

01. RF6255001 - Silver diffuser assembly

02. RF11791 – Internal diffuser

03. RF32924 – Led dimmer 1004P LFP100-240V 4-150WHL


REV. 1 DATE 25/06/2021

EN

MISS K F6255000

RF6255001 SILVER DIFFUSER ASSEMBLY



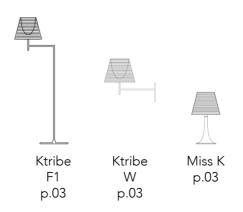

MISS K F6255000

RF6255001 SILVER DIFFUSER ASSEMBLY

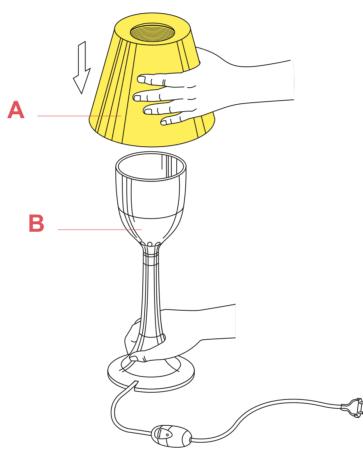


Fig.1

Lock the external diffuser (A) to the inner diffuser (B) by forcing (pushing) it to clicks-on.

REV. 1 DATE 25/06/2021

EN

MISS K F6255000

RF11791 INTERNAL DIFFUSER



MISS K F6255000

RF11791 INTERNAL DIFFUSER

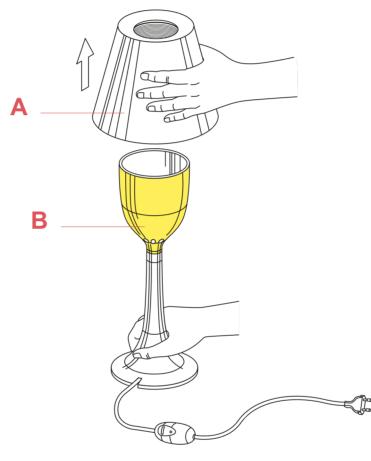


Fig.1

Remove the external diffuser (A) from the internal diffuser (B).

EN

MISS K F6255000

RF11791 INTERNAL DIFFUSER

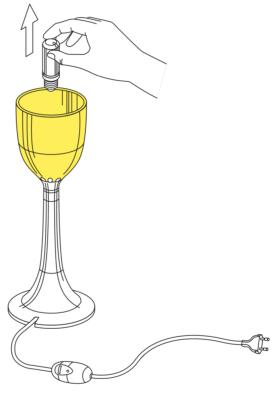


Fig.2

Remove the lamp bulb.

EN

MISS K F6255000

RF11791 INTERNAL DIFFUSER



Fig.3

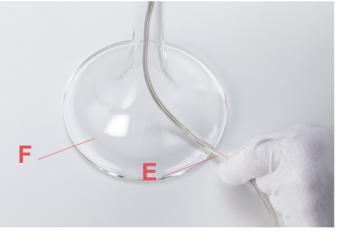


Fig.4

Unfasten the 2 screws (C) inside the lamp holder (D).

Push through the lamp base (F) some spare electrical cable (E).

MISS K F6255000

RF11791 INTERNAL DIFFUSER

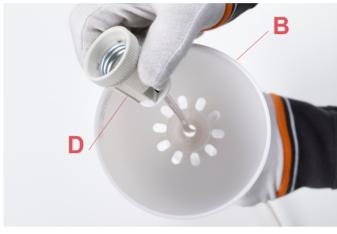


Fig.5

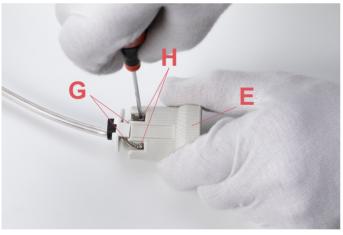


Fig.6

Extract the lamp holder (D) from the internal diffuser (B).

Disconnect the electrical wires (G) from the terminals (H) of the lamp holder (D).

EΝ

MISS K F6255000

RF11791 INTERNAL DIFFUSER

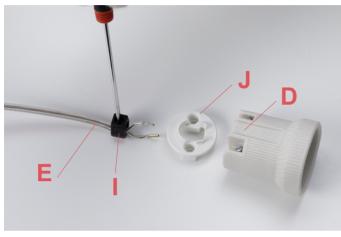


Fig.7



Fig.8

Unfasten the screw of the cable clamp (I). Slide-off from the electrical cable (E) the lamp holder (D), lamp holder support (J) and cable clamp (I). (Fig.7)

Unfasten the internal diffuser (B) from the lamp base (F). (Fig.8)

Assemble now the new spare-part: Fasten the internal diffuser (B) on the lamp base (F). (Fig.8)

Insert through the electrical cable (E), the cable clamp (I) and the lamp holder support (J).

Connect the wires to the terminals (H) of the lamp holder (D) respecting the polarities and fasten the screw of the cable clamp (I). (Fig.7)

Insert the lamp holder (D) in his apposite position inside the internal diffuser (B). (Fig.5 page 9)

Pull-out the excess cable (E) present inside the lamp base (F). (Fig.4 page 9)

EN

MISS K F6255000

RF11791 INTERNAL DIFFUSER

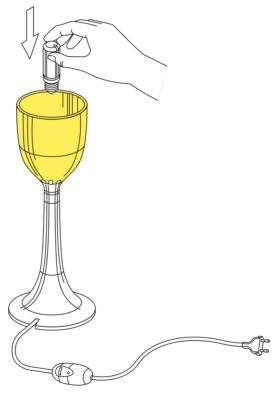


Fig.9

Install the lamp bulb.

MISS K F6255000

RF11791 INTERNAL DIFFUSER

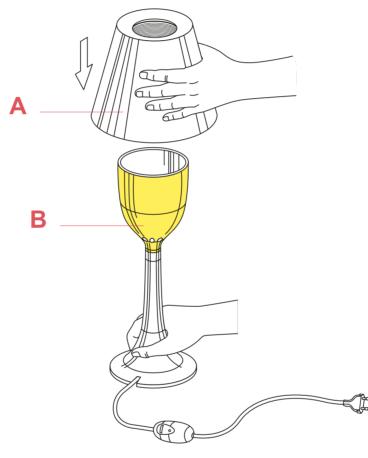


Fig.10

Install the external diffuser (A) on the internal diffuser (B).

REV. 0 DATE 25/06/2021

EN

MISS K F6255000

RF32924

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



REV. 1 DATE 25/06/2021

EN

MISS K F6255000

RF32924

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W







Fig.2

Open the dimmer box of the damaged dimmer.

For the opening, it is necessary to remove the n°2 screws using a star screw driver.


Lift-up the dimmer casing from the dimmer base;


MISS K F6255000

EN

RF32924

 LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W

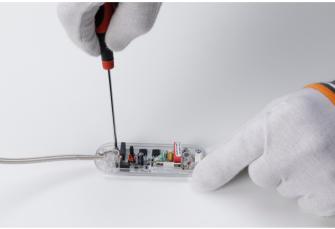





Remove the cable clamps by unfastening the 4 screws (A) and disconnect the wires from the terminal blocks through a tiny flat headed screw driver;

Replace the dimmer and connect the wires. When connecting the wires it is necessary to respect the polarities (L = Brown and N = Blue) to the terminal box. Lock the electrical cables by fastening the screws (A) of the cable clamps and make sure

to block the isolation of the electrical cable.

Close the dimmer box.

It is necessary to place the casing on top and press down until it locks in.

it is necessary to insert the n°2 screws using a star screw driver



Fig.4