


# **BIBLIOTHEQUE NATIONALE**

Designed by R. & Philippe Starck, 2013

F1011004

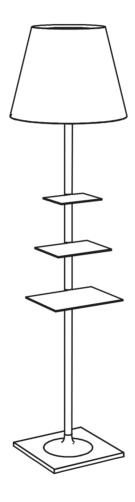




## **BIBLIOTHEQUE NATIONALE**

ΕN

F1011004

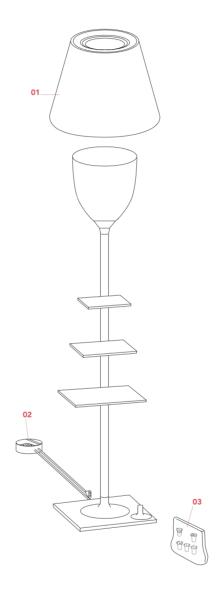

**01. F6278004** – Aluminized silver diffuser assembly

**02. RF28045** – Led rondò dimmer 220-240V 40-250W 4-100W

03. RF05574 – Kit of n. 5 black feet pads for base



#### **BIBLIOTHEQUE NATIONALE**

F1011004

### F6278004

ALUMINIZED SILVER DIFFUSER ASSEMBLY





Bibliotheque Nationale p.03



Ktribe T2 p.03



Ktribe F2 p.03



#### **BIBLIOTHEQUE NATIONALE**

F1011004

## F6278004

ALUMINIZED SILVER DIFFUSER ASSEMBLY

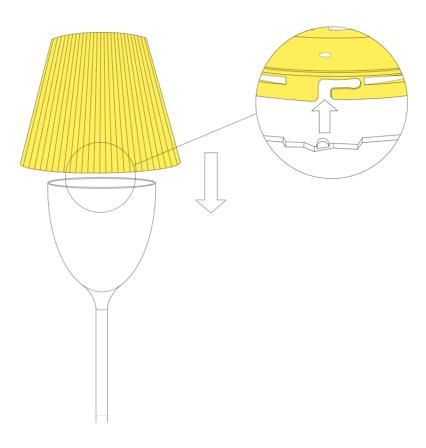


Fig.1

Install the external diffuser (A) onto the internal diffuser (B) being careful to make the three pins (C) in the internal diffuser correspond with the relative housings (D) in the external diffuser. Once carried out this operation it is necessary to lock the external diffuser by turning it slightly clockwise.




### **BIBLIOTHEQUE NATIONALE**

F1011004

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



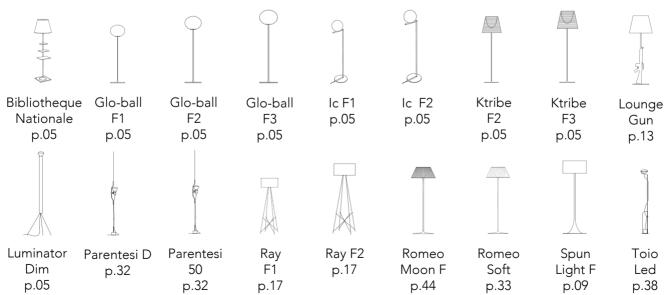



#### **BIBLIOTHEQUE NATIONALE**

F1011004

### **RF28045**

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.1



Fig.2

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box (refer to fig.1);

Unfasten the screw that locks the triangle terminal cover (refer to fig.2);



#### **BIBLIOTHEQUE NATIONALE**

F1011004

### RF28045

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.3



Fig.4

Turn the dimmer box and remove the terminal cover (refer to fig. 3);

Unfasten the three screws of the cable clamps (refer to fig. 4);



#### **BIBLIOTHEQUE NATIONALE**

F1011004

### **RF28045**

LED 220/240V 40-250W 4-100W RONDO' DIMMER



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box (refer to fig. 6).

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.



### **BIBLIOTHEQUE NATIONALE**

F1011004

## RF05574

KIT OF QUANTITY 5 BLACK FEET PADS FOR BASE





#### **BIBLIOTHEQUE NATIONALE**

F1011004

### RF05574

KIT OF QUANTITY 5 BLACK FEET PADS FOR BASE

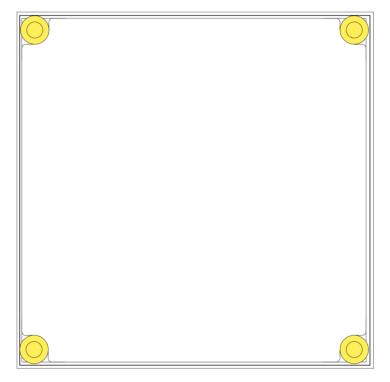


Fig.1

Glue the feet (A) to the base by utilizing glue. We advise to utilize the Loctite 454 glue.