


265

Designed by Paolo Rizzato, 1973


A0300009

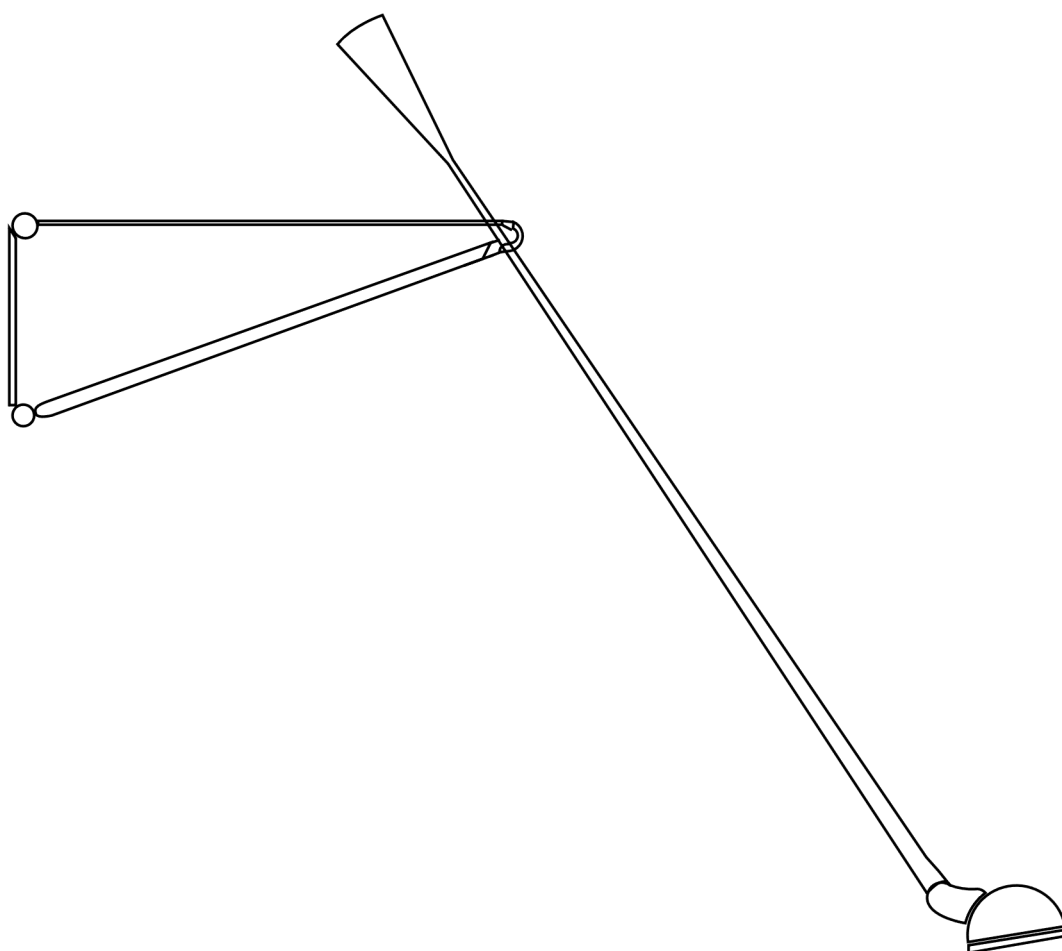

265

A0300009

EN

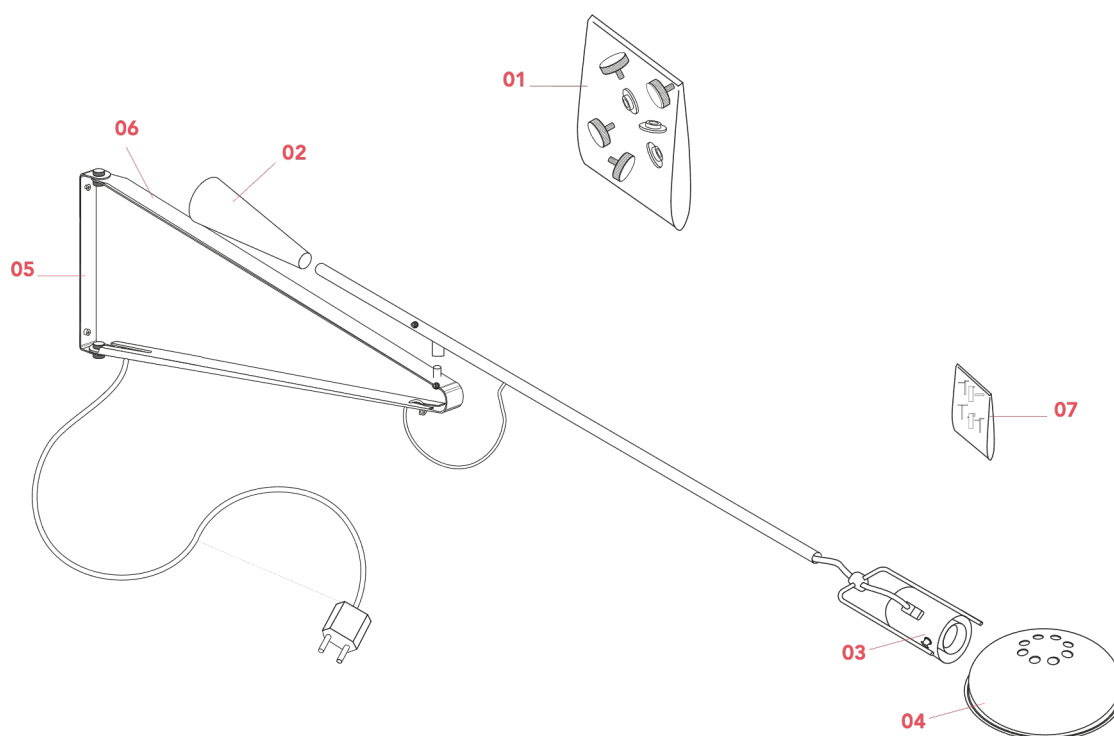


- 01. RA0300200 – Screw kit for wall attachment
- 02. RF01855 – White counterweight
- 03. RF01395 – White lamp holder with reflector support assembly
- 04. RF00784 – White reflector
- 05. RF02565 – White wall attachment
- 06. RF02563 – White triangle bracket support
- 07. RF11719 – Screws bag group STM3X3 10 pieces.

265 A0300009


EN

RA0300200

SCREW SET FOR WALL ATTACHMENT

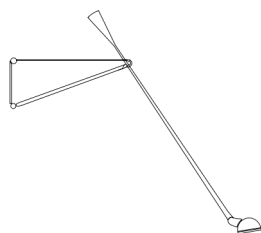

265
p.03

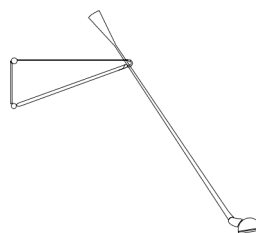

265
Chromatica
p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

265 A0300009

EN

RA0300200

SCREW SET FOR WALL ATTACHMENT

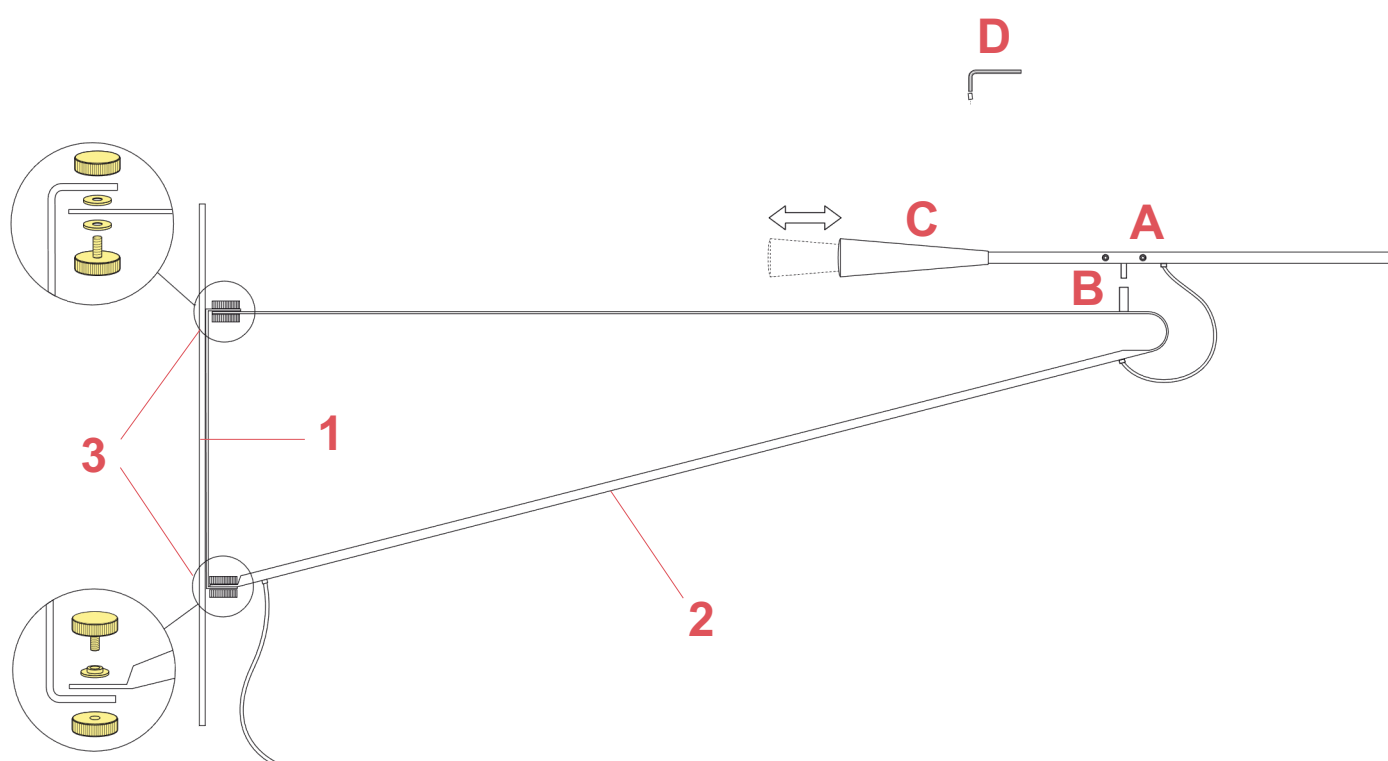


Fig.1

Assemble wall bracket (1) to the wall and lamp support (2) with grained knobs (3) positioning the nylon washers in the indicated order.

Assemble the lamp stem arm to the support (2) by inserting the pin (A) into the sleeve (B).

Once install the lamp-bulb you note that the arm stem is not straight, balance it through the counterweight. When balanced lock the screw (C) by utilizing the key (D).


WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

265 A0300009

EN

RF01855

WHITE COUNTERWEIGHT

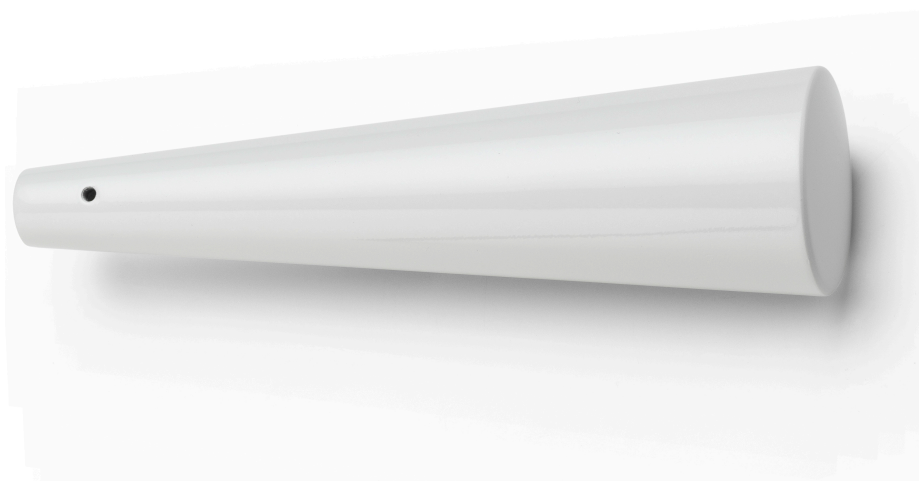

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF01855

WHITE COUNTERWEIGHT

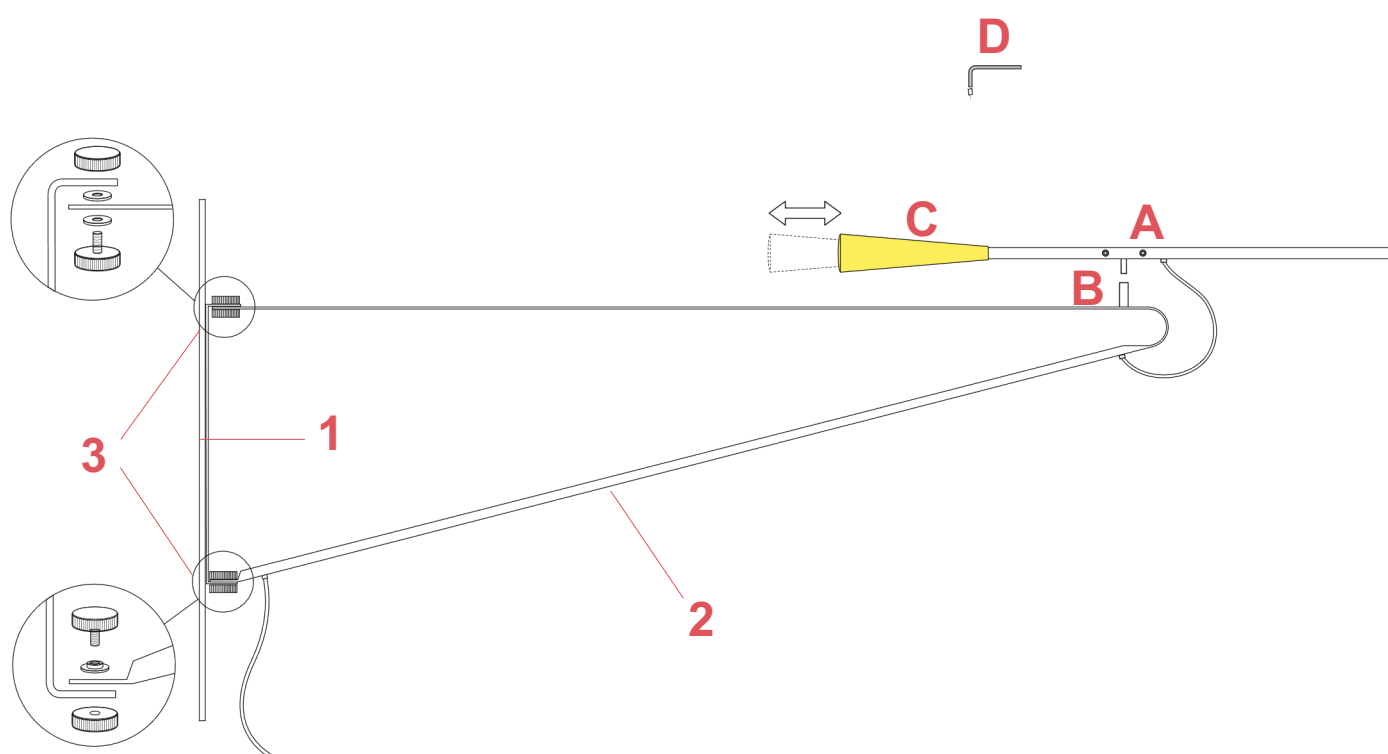


Fig.1

Assemble wall bracket (1) to the wall and lamp support (2) with grained knobs (3) positioning the nylon washers in the indicated order.

Assemble the lamp stem arm to the support (2) by inserting the pin (A) into the sleeve (B). Once install the lamp-bulb you note that the arm stem is not straight, balance it through the counterweight. When balanced lock the screw (C) by utilizing an Allen key (D).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF01395

WHITE LAMP HOLDER WITH REFLECTOR SUPPORT AND ELECTRICAL CABLE ASSEMBLY



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF01395

WHITE LAMP HOLDER WITH REFLECTOR SUPPORT AND ELECTRICAL CABLE ASSEMBLY

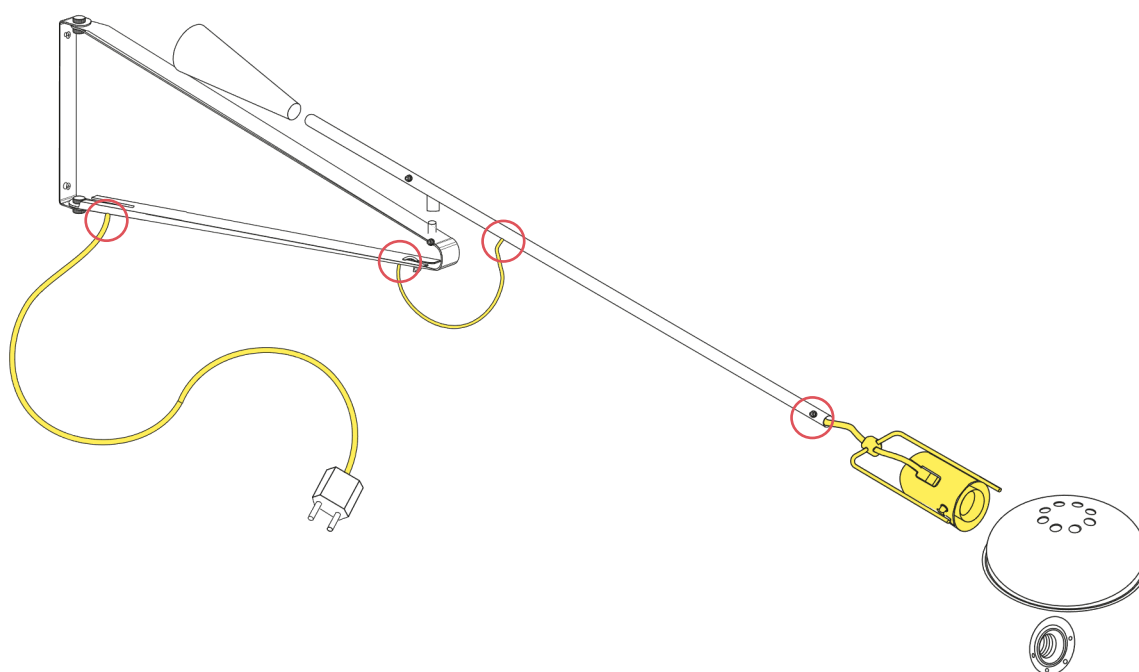


Fig.1

To assemble the reflector assembly (highlighted in yellow in the image), it is necessary to loosen all the 4 screws of the cable tighteners (refer to red circle in the image), then insert the cable in the stem (we recommend to start by inserting the electrical cable from the reflector hand side). Once inserted the cable in the stem it is necessary to insert the cable inside the triangle bracket.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

265 A0300009

EN

RF00784

WHITE REFLECTOR



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF00784

WHITE REFLECTOR

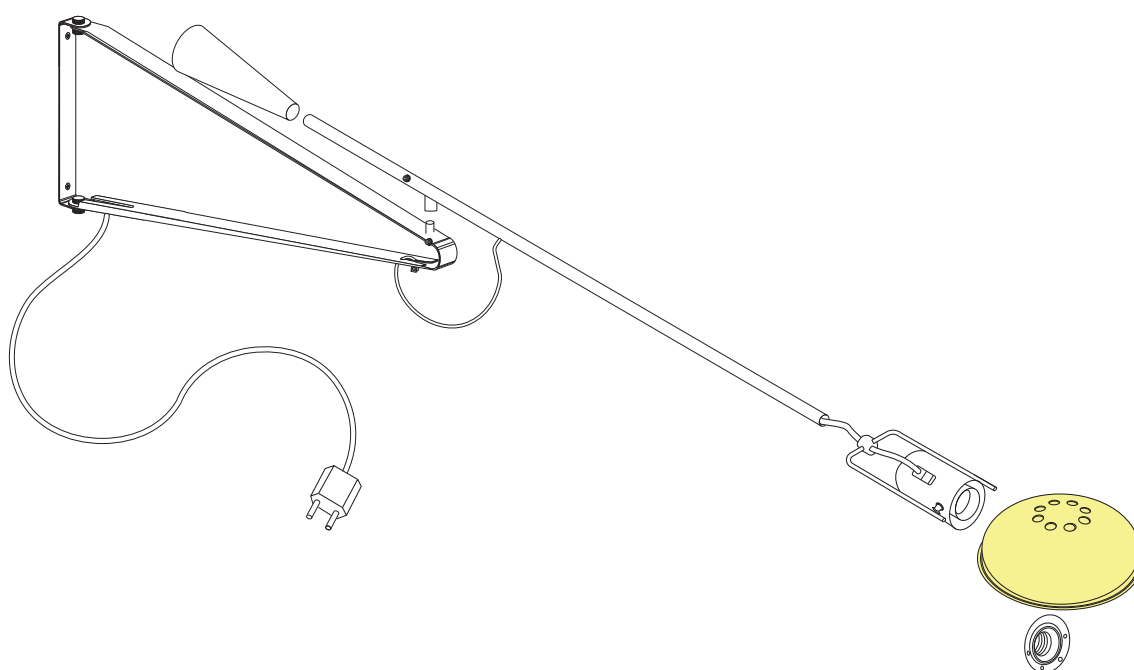


Fig.1

Assemble the reflector by position it
on the support and then lock the nut
by rotating it clockwise.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF02565

WHITE WALL ATTACHMENT



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF02565

WHITE WALL ATTACHMENT

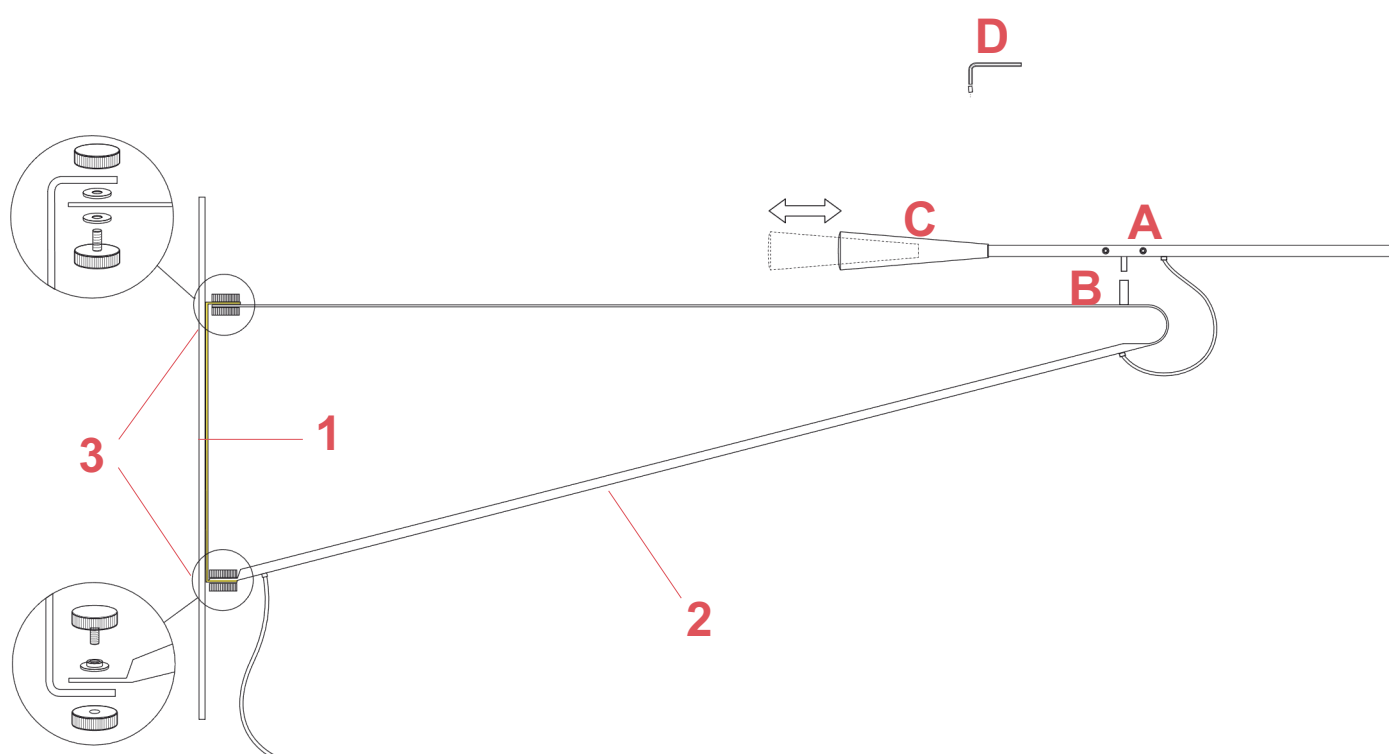


Fig.1

Assemble wall attachment (1) onto the wall and lamp support (2) with grained knobs (3) positioning the nylon washers in the indicated order. Assemble the lamp stem arm to the support (2) by inserting the pin (A) into the sleeve (B). Once install the lamp-bulb you note that the arm stem is not straight, balance it through the counterweight. When balanced lock the screw (C) by utilizing the key (D).


WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

265 A0300009

EN

RF02563

WHITE TRIANGLE STEM SUPPORT

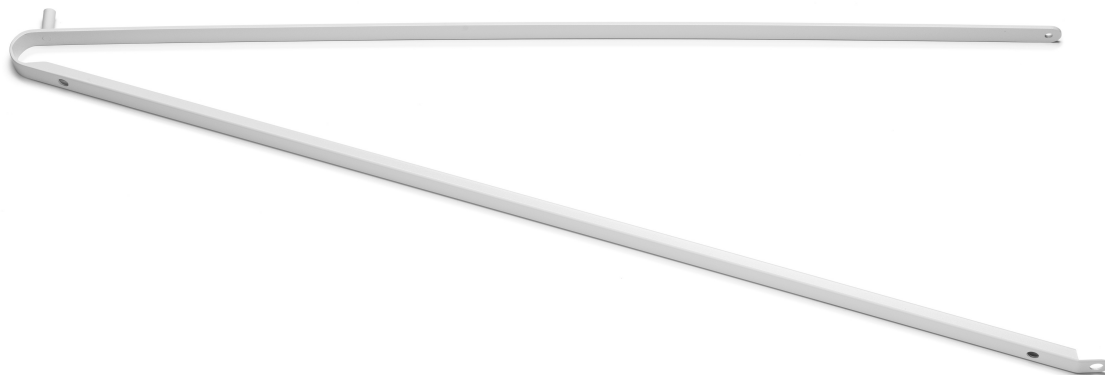

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009

EN

RF02563

WHITE TRIANGLE STEM SUPPORT

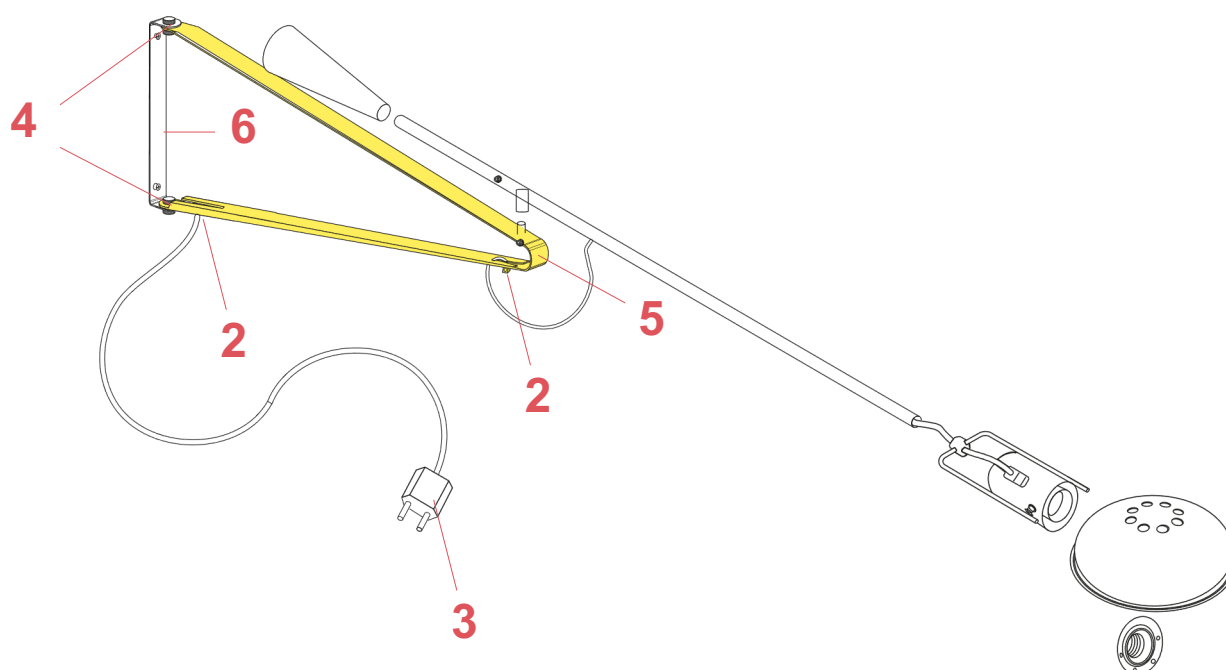


Fig.1

To assemble the triangle stem support (highlighted in yellow in the image), it is necessary:

Disconnect the wires in the plug (3) in a way to free the cable from the plug;

Remove the triangle support (5) from the wall attachment (6) by unfastening the upper and lower screws (4);

Unfasten the two cable clamps (2) screws and slide the electrical cable out from the cable clamps on the triangle support.

Replace the triangle support and re-assemble back all the components.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.


©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

265 A0300009


EN

RF11719

SCREWS BAG GROUP STM3X3 CE C.10 PIECES

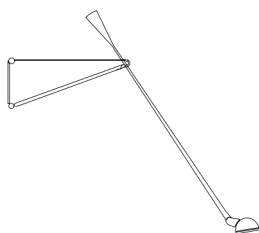

265
p.15

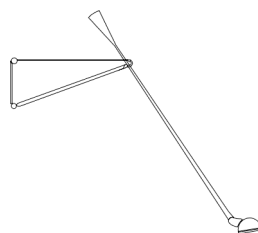

265
Chromatica
p.15

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.