
# FLOS

## **AIM SMALL**

Designed by R. & E. Bouroullec, 2014


F0095009




# FLOS

ΕN

**AIM SMALL** F0095009

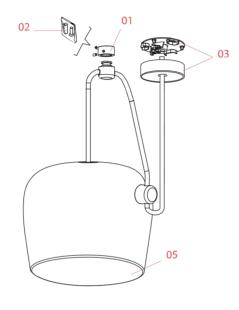


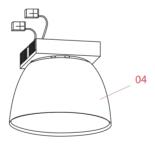

- 01. RF0090109 White ceiling attachment assembly
- 02. RF06749 N° 3 screws for white version
- 03. RF1555009 White ceiling rose assembly
- 04. RF0095100 Sink/chip Led/Reflector assembly
- 05. RF0095500 Opal diffuser


#### AIM SMALL F0095009

**RF0090109** CEILING ATTACHMENT ASSEMBLY

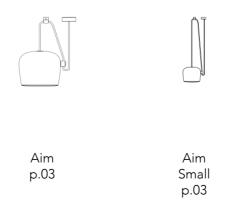

#### AIM SMALL F0095009

**RF0090109** CEILING ATTACHMENT ASSEMBLY

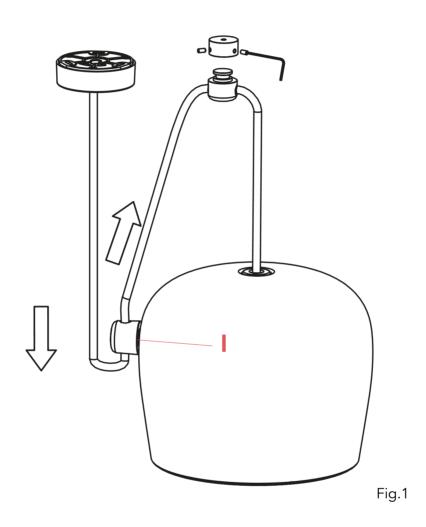

Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).


REV. 1 DATE 14/12/2021

EN

#### AIM SMALL F0095009

RF0090109

CEILING ATTACHMENT ASSEMBLY

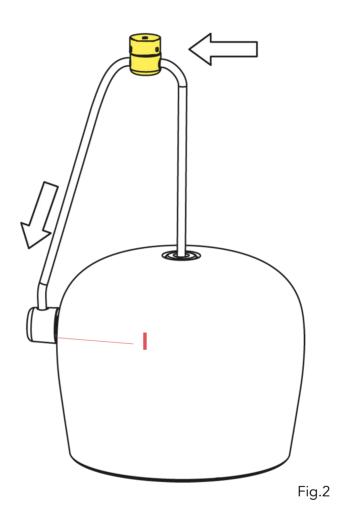


Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).

AIM SMALL F0095009

EN

# RF0090109

CEILING ATTACHMENT ASSEMBLY

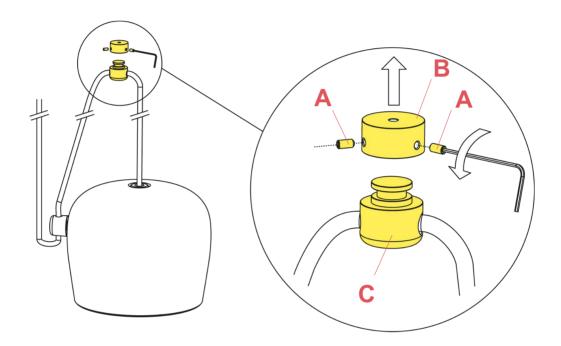



# Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).

AIM SMALL F0095009

EN

## RF0090109

CEILING ATTACHMENT ASSEMBLY

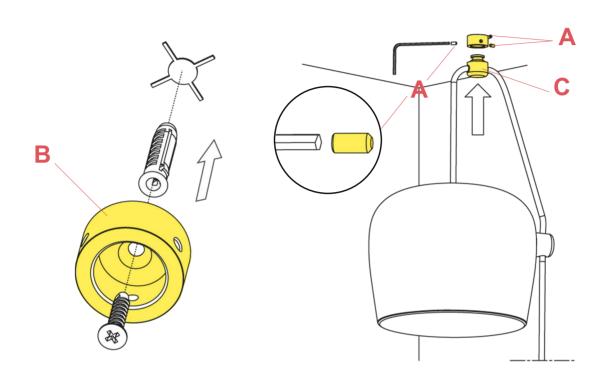


Fig.4

Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs. NOTE: utilize screws and plugs suitable for the mounting surface. Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.


**AIM SMALL** F0095009

EN

RF06749

KIT OF QUANTITY 3 M4 SCREWS




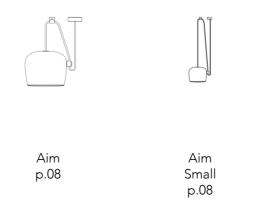

**AIM SMALL** F0095009

### RF06749

KIT OF QUANTITY 3 M4 SCREWS

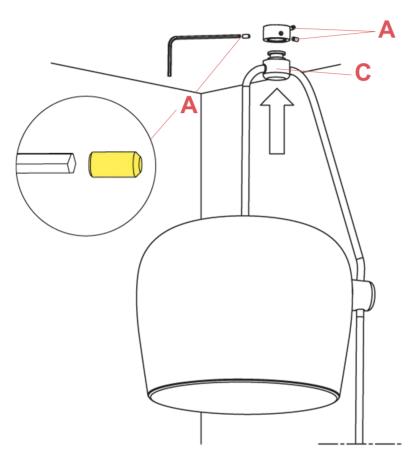



Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

**AIM SMALL** F0095009

RF1555009 CEILING ROSE ASSEMBLY



EΝ

AIM SMALL F0095009

RF1555009 CEILING ROSE ASSEMBLY

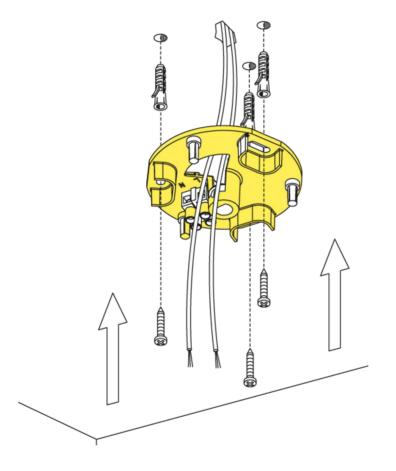


Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

NOTE: Choose screw plugs that are suitable for the type of mounting surface.

REV. 1 DATE 14/12/2021

EN

**AIM SMALL** F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

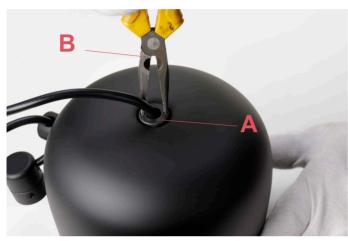


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

ΕN

AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

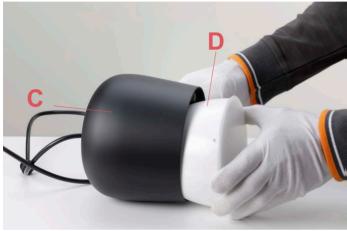


Fig.3

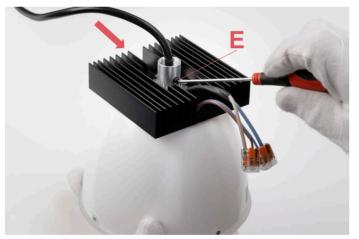


Fig.4

Unscrew the screw (E).

internal body (D).

Lift-up the varnished body (C) from the

FLOS

REV. 1 DATE 14/12/2021

EN

AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.5



Fig.6

Disconnect the cables from the clamps (F).

Loosen the electrical cable from the sink.

#### **AIM SMALL** F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.7



Fig.8

Remove the diffuser.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

Unscrew the 4 screws (G) from the white reflector.

AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

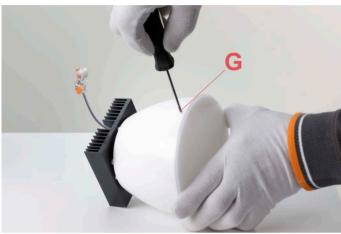


Fig.9

Screw the 4 screws (G) to the white reflector.

NOTE! Do not screw so fast!!!

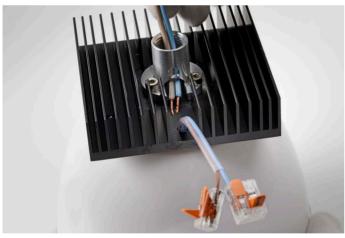


Fig.10

Insert the electrical cable in the sink.

ΕN

#### AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.11

Connect the cables to the new clamps (H).

**NOTE!** Respect the polarity of the cables.



Fig.12

Screw the screw to fix the electrical cable.

#### AIM SMALL F0095009

### RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.13

Fig.14

Insert the new internal body (D) in the varnished body (C).

Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)

**AIM SMALL** F0095009

RF0095500

AIM SMALL OPAL DIFFUSER



### 

#### AIM SMALL F0095009

RF0095500

AIM SMALL OPAL DIFFUSER



Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

#### **AIM SMALL** F0095009

RF0095500 AIM SMALL OPAL DIFFUSER



Fig.3



Fig.4

Lift-up the varnished body (C) from the internal body (D).

Unscrew the 3 screws (G) from the white reflector.

#### AIM SMALL F0095009

RF0095500 AIM SMALL OPAL DIFFUSER



Fig.5



Fig.6

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Remove the diffuser.

Do not screw so fast!!!

NOTE!

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)