


## **AIM SMALL**

Designed by R. & E. Bouroullec, 2014

F0095023

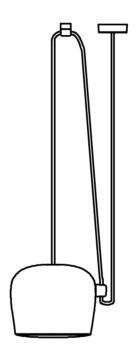




### **AIM SMALL**

ΕN

F0095023

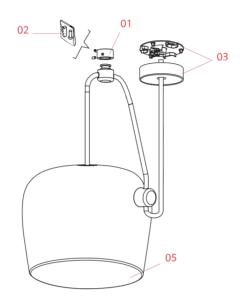



- 01. RF0090123 Dark Grey/ steel blue ceiling attachment assembly
- $\textbf{02. RF06750} N^{\circ} \text{ 3 screws for black, dark grey/steel blue, ivy green, natural anodized versions}$
- 03. RF1555030 Black ceiling rose assembly
- **04.** RF0095100 Sink/chip Led/Reflector assembly
- **05. RF0095500** Opal diffuser



ΕN

## RF0090123

DARK GREY/STEEL BLUE CEILING ATTACHMENT ASSEMBLY








Aim p.03 Aim Small p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

### RF0090123

**CEILING ATTACHMENT ASSEMBLY** 

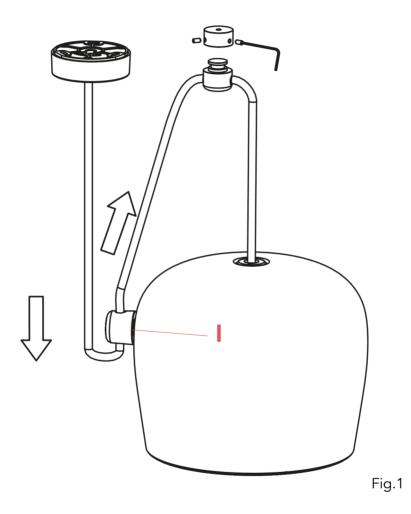


Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).

ΕN

### RF0090123

**CEILING ATTACHMENT ASSEMBLY** 

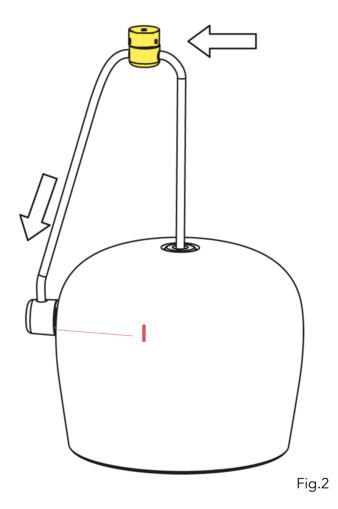

Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).

ΕN

### RF0090123

**CEILING ATTACHMENT ASSEMBLY** 

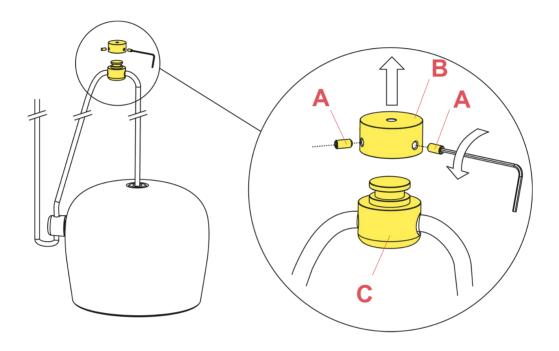


Fig.3

Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).

ΕN

### RF0090123

**CEILING ATTACHMENT ASSEMBLY** 

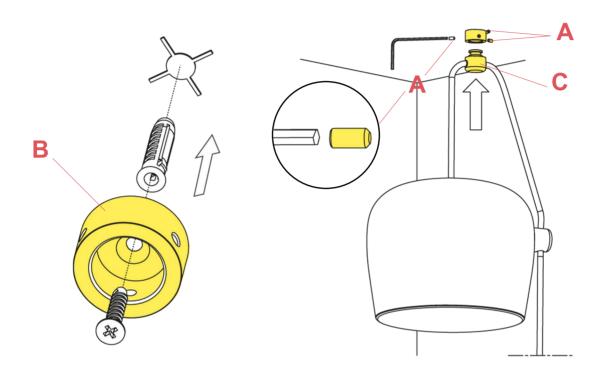


Fig.4

Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs.

NOTE: utilize screws and plugs suitable for the mounting surface.

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.



ΕN

## RF06750

KIT OF QUANTITY 3 M4 SCREWS











Aim p.08 Aim Small p.08

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

### RF06750

KIT OF QUANTITY 3 M4 SCREWS

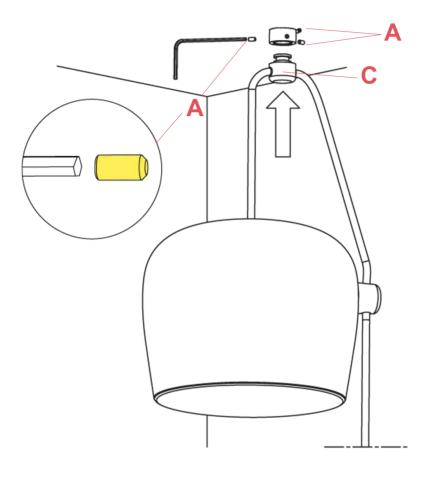


Fig.1

Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).



ΕN

## RF1555030

**CEILING ROSE ASSEMBLY** 





ΕN

### RF1555030

**CEILING ROSE ASSEMBLY** 

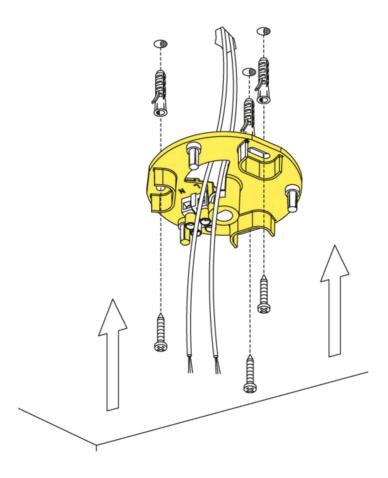


Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

NOTE: Choose screw plugs that are suitable for the type of mounting surface.



ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

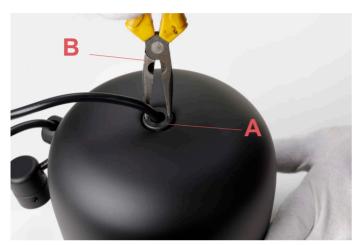


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

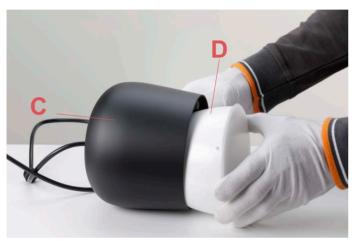


Fig.3

Lift-up the varnished body (C) from the internal body (D).

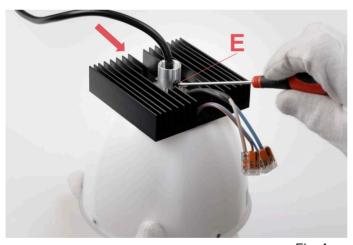


Fig.4

Unscrew the screw (E).

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.5

Disconnect the cables from the clamps (F).



Fig.6

Loosen the electrical cable from the sink.

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.7

Unscrew the 4 screws (G) from the white reflector.



Fig.8

Remove the diffuser.

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.9

Screw the 4 screws (G) to the white reflector.

#### NOTE!

Do not screw so fast!!!



Fig.10

Insert the electrical cable in the sink.

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.11

Connect the cables to the new clamps (H).

#### NOTE!

Respect the polarity of the cables.

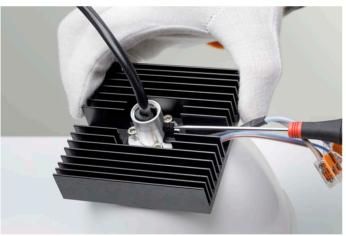


Fig.12

Screw the screw to fix the electrical cable.

#### ΕN

## RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.13

Insert the new internal body (D) in the varnished body (C).



Fig.14

Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)



ΕN

## RF0095500

AIM SMALL OPAL DIFFUSER



ΕN

## RF0095500

AIM SMALL OPAL DIFFUSER



Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

#### ΕN

# RF0095500

AIM SMALL OPAL DIFFUSER



Fig.3

Lift-up the varnished body (C) from the internal body (D).



Fig.4

Unscrew the 3 screws (G) from the white reflector.

ΕN

### RF0095500

AIM SMALL OPAL DIFFUSER



Fig.5

Remove the diffuser.

NOTE!

Do not screw so fast!!!



Fig.6

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)