
AIM SMALL

Designed by R. & E. Bouroullec, 2014


F0095054




FLOS

EN

AIM SMALL F0095054

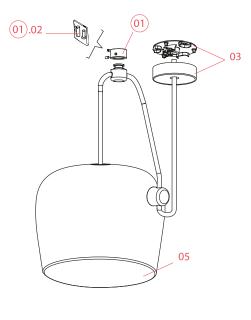

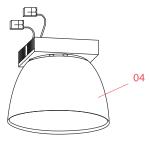

01. RF0090154 - Natural anodized ceiling attachment assembly

02. RF06750 – N° 3 screws for black, dark grey/steel blue, ivy green, natural anodized versions

03. RF1555030 - Black ceiling rose assembly

04. RF0095100 - Sink/chip Led/Reflector assembly

05. RF0095500 – Opal diffuser


AIM SMALL F0095054

EN

RF0090154

CEILING ATTACHMENT ASSEMBLY



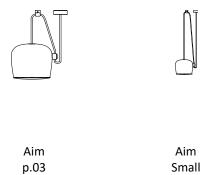


p.03

AIM SMALL F0095054

RF0090154

CEILING ATTACHMENT ASSEMBLY

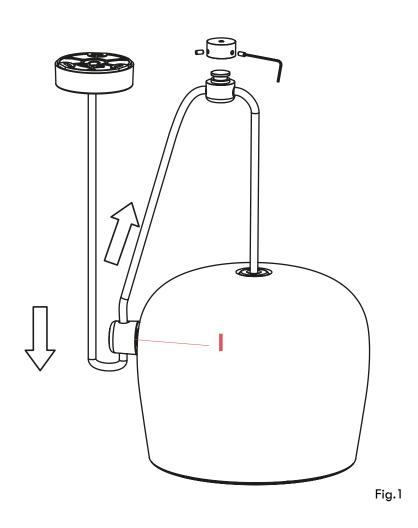

Free the electrical feed cable from the ceiling rose. Slide out the electrical feed cable from the cable gland (I).

EN

AIM SMALL F0095054

RF0090154

CEILING ATTACHMENT ASSEMBLY

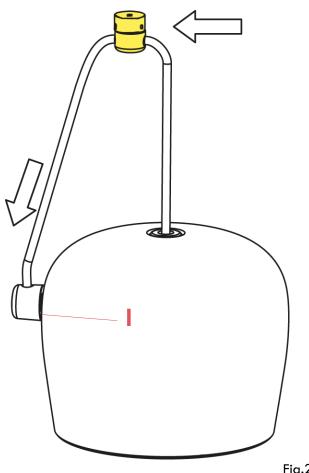



Fig.2

Insert the cable through the hole ceiling attachment (C) and through the cable gland hole (I).

AIM SMALL F0095054

RF0090154

CEILING ATTACHMENT ASSEMBLY

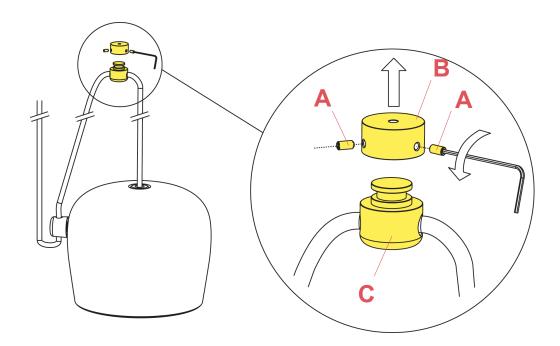




Unfasten the 3 screws (A) of the bearing ceiling attachment (B) by utilizing an Allen key and separate it from the cable gland (C).

EN

AIM SMALL F0095054

RF0090154

CEILING ATTACHMENT ASSEMBLY

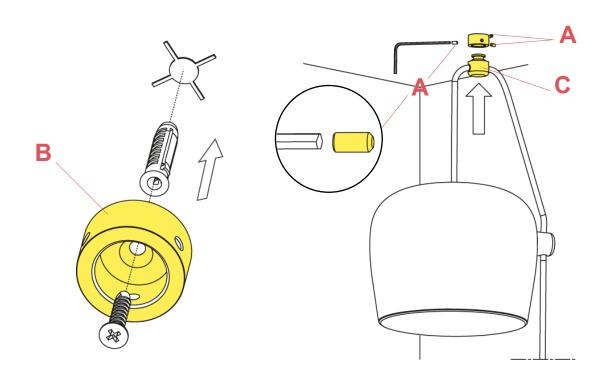



Fix the bearing ceiling attachment (B) to the desired point of the ceiling with screws and plugs. **NOTE**: utilize screws and plugs suitable for the mounting surface. Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

Connect back the electrical cable to the terminal present in the ceiling rose respecting the wire polarities.


AIM SMALL F0095054

FLO

RF06750

KIT OF QUANTITY 3 M4 SCREWS



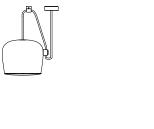


Aim p.08 Aim Small p.08

AIM SMALL F0095054

RF06750

KIT OF QUANTITY 3 M4 SCREWS

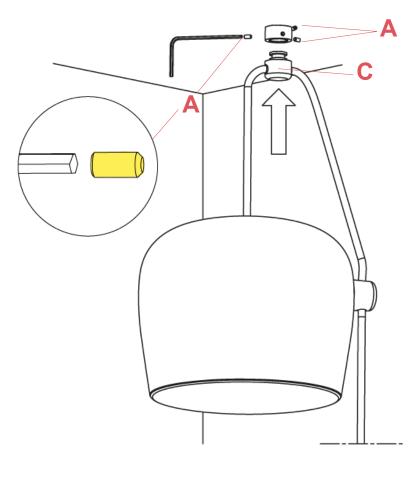



Assemble the cable gland (C) to the ceiling attachment (B) and lock it with the 3 screws (A).

AIM SMALL F0095054

RF1555030 CEILING ROSE ASSEMBLY





AIM SMALL F0095054

RF1555030 CEILING ROSE ASSEMBLY

Fig.1

Install the wall fitting to the ceiling with screws and plugs, ensuring that the power wires pass through the central hole.

NOTE: Choose screw plugs that are suitable for the type of mounting surface.

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL





AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

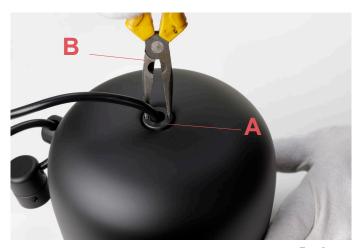


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

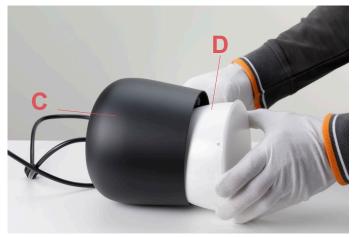


Fig.3

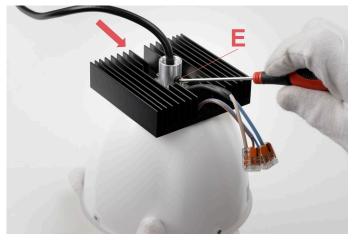


Fig.4

Unscrew the screw (E).

Lift-up the varnished body (C) from the internal body (D).

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

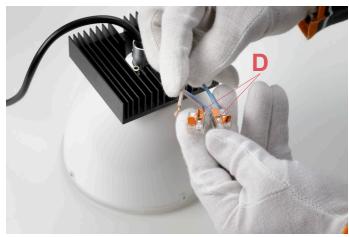


Fig.5



Fig.6

Disconnect the cables from the clamps (F).

Loosen the electrical cable from the sink.

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.7



Fig.8

Remove the diffuser.

Unscrew the 4 screws (G) from the white reflector.

EN

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL

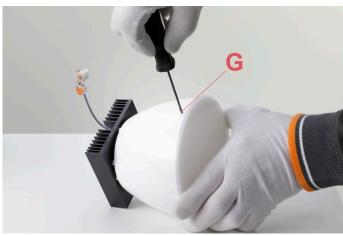


Fig.9

Screw the 4 screws (G) to the white reflector.

NOTE!

Do not screw so fast!!!



Fig.10

Insert the electrical cable in the sink.

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.11

Connect the cables to the new clamps (H).

NOTE!

Respect the polarity of the cables.



Fig.12

Screw the screw to fix the electrical cable.

AIM SMALL F0095054

RF0095100

SINK/CHIP LED/REFLECTOR ASSEMBLY AIM SMALL



Fig.13



Fig.14

Insert the new internal body (D) in the varnished body (C).


Re-assemble the Joint (A). Screw the joint (A) with a pair of pliers (B).(Fig.1 page 13)

AIM SMALL F0095054

EN

RF0095500

AIM SMALL OPAL DIFFUSER



AIM SMALL F0095054

RF0095500

AIM SMALL OPAL DIFFUSER

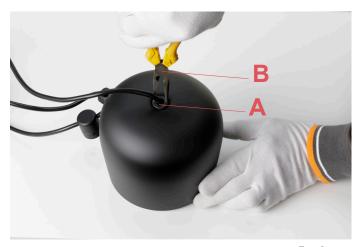


Fig.1



Fig.2

Remove the joint (A) by unfastening it with a pair of pliers (B).

AIM SMALL F0095054

RF0095500

AIM SMALL OPAL DIFFUSER



Fig.3



Fig.4

Lift-up the varnished body (C) from the internal body (D).

Unscrew the 3 screws (G) from the white reflector.

AIM SMALL F0095054

RF0095500

AIM SMALL OPAL DIFFUSER



Fig.5



Fig.6

Remove the diffuser. **NOTE!** Do not screw so fast!!!

Insert the new internal body (D) in the varnished body (C).(Fig.3 page 22)

Re-assemble the Joint (A).(Fig.1 page 21)

Screw the joint (A) with a pair of pliers (B).(Fig.1 page 21)