

# **BELLHOP F**

Designed by E. Barber & J. Osgerby, 2021

F1070026






#### **BELLHOP F**

ΕN

F1070026

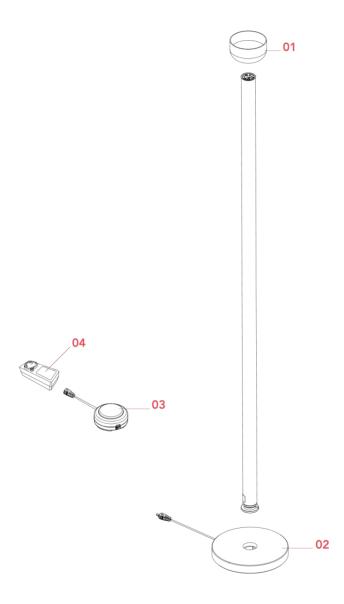

01. F1073009B - White reflector

**02. F1072009B** – Bellhop F base

03. RF30216 – Switch dimmer assembly 700 mA

**04. RF3320400** – 48V Power supply unit with plug kit



ΕN

# F1073009B


WHITE REFLECTOR



ΕN

## F1073009B

WHITE REFLECTOR

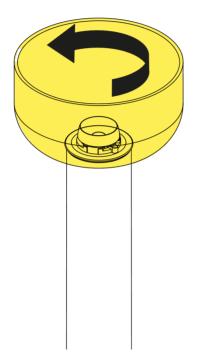

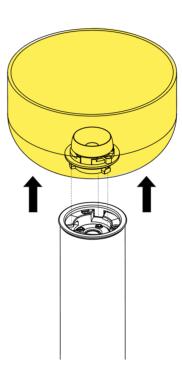


Fig.1

Remove the old reflector from the body lamp. Assemble now the new spare parts.



ΕN

# F1072009B

BASE



ΕN

## F1072009B

BASE

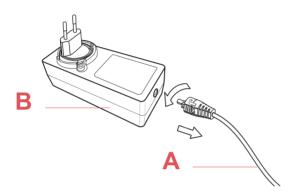


Fig.1

Remove the plug (A) from the power unit (B).

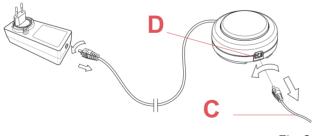


Fig.2

Disconnect the plug (C) to the push button (D).

ΕN

#### F1072009B

BASE

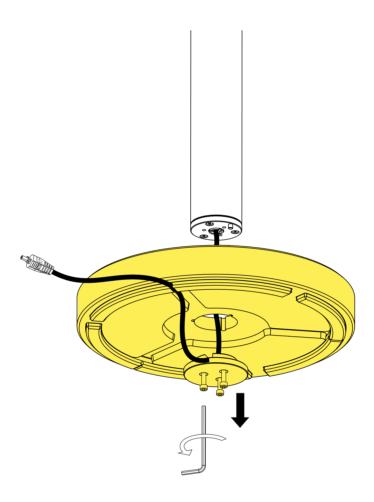


Fig.3

Unfasten the three screws under the old base (E). Disconnect it (F) from the body lamp (G).

Assemble now the new spare parts.
Install the new base to the body lamp and fast the screw under it.
Connect the plug to the push button switch locking it by turning it 90° clockwise.
(Fig.2)

Insert the plug into the power unit. (Fig.1)



ΕN

## RF30216

SWITCH DIMMER ASSEMBLY 700MA



ΕN

#### RF30216

SWITCH DIMMER ASSEMBLY 700MA

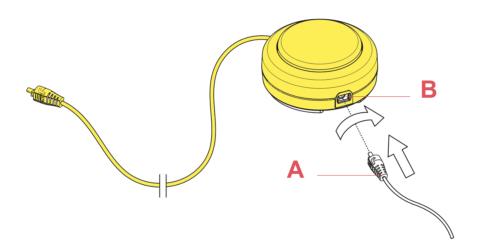


Fig.1

Connect the plug (A) to the push button switch (B) locking it by turning it 90° clockwise.

ΕN

#### RF30216

SWITCH DIMMER ASSEMBLY 700MA

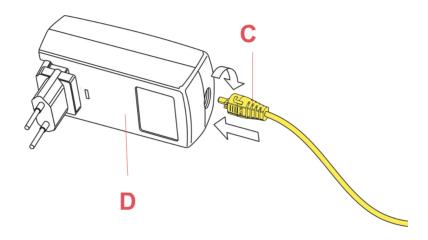


Fig.2

Connect the plug (C) to the power unit (D) locking it in by rotating it 90° clockwise.



ΕN


# RF3320400

POWER SUPPLY UNIT WITH PLUG KIT







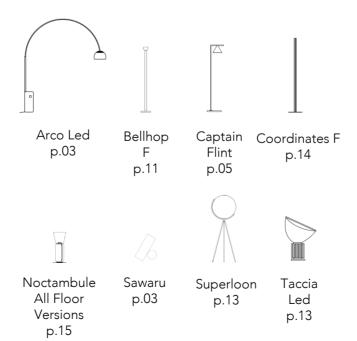

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

#### RF3320400

POWER SUPPLY UNIT WITH PLUG KIT

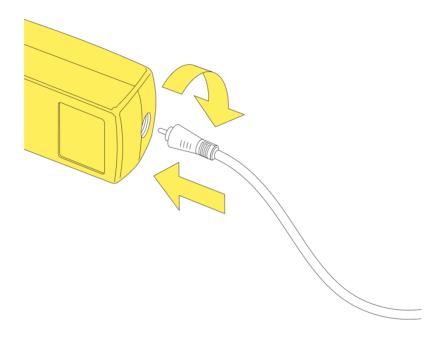


Fig.1

Insert the plug into the power unit. By using the guides, snap the plug inside its apposite slot (use the correct type of plug for the country in which the device must be installed).