
IC F1


Designed by Michael Anastassiades, 2014

F3173057

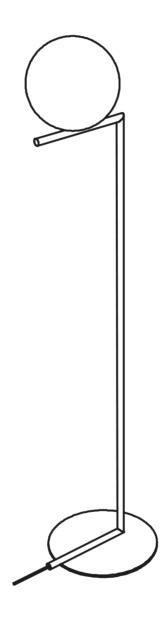

EN



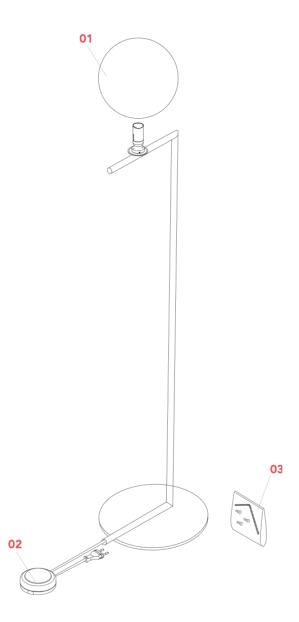

- 01. F3136057 Glass diffuser 1 assembly for chrome version
- 02. RF28045 Led 220-240V 40-250W 4-100W Rondò dimmer
- 03. RF3130100 Screw kit with Allen key for base assembly

REV. 1 DATE 25/06/2021


EN

IC F1 F3173057

F3136057

GLASS DIFFUSER 1 ASSEMBLY FOR CHROME VERSION



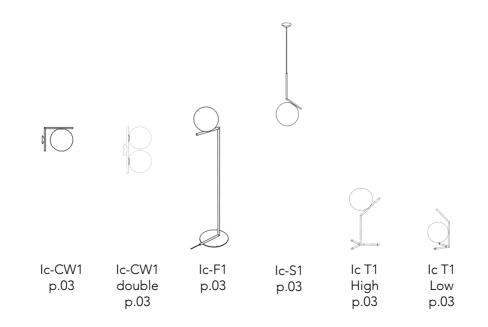

IC F1 F3173057

F3136057

GLASS DIFFUSER 1 ASSEMBLY FOR CHROME VERSION

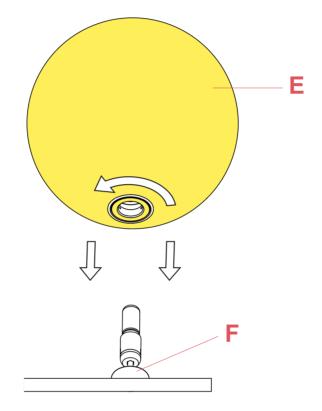


Fig.1

Assemble the glass diffuser (E) by fastening it delicately to the lamp body's ferrule (F).

REV. 2 DATE 21/04/2022


EN

IC F1 F3173057

RF28045

LED RONDÒ DIMMER 220-240V 40-250W 4-100W



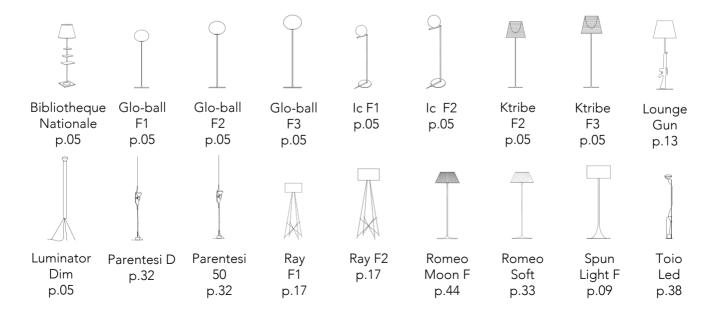

EΝ

IC F1 F3173057

RF28045

LED RONDÒ DIMMER 220-240V 40-250W 4-100W



Fig.1



Fig.2

Open the box of the damaged dimmer. For the opening, it is necessary to remove the rubber pad from underneath the dimmer box;

Unfasten the screw that locks the triangle terminal cover.

IC F1 F3173057

RF28045

LED RONDÒ DIMMER 220-240V 40-250W 4-100W



Fig.3



Fig.4

Turn the dimmer box and remove the terminal cover;

Unfasten the three screws of the cable clamps;

IC F1 F3173057

RF28045

LED RONDÒ DIMMER 220-240V 40-250W 4-100W



Fig.5



Fig.6

Remove the cable clamp and disconnect the cables from the green terminal box.

Assemble now the new dimmer: Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.

REV. 1 DATE 25/06/2021


EΝ

IC F1 F3173057

RF3130100

SCREW KIT WITH ALLEN KEY FOR BASE ASSEMBLY




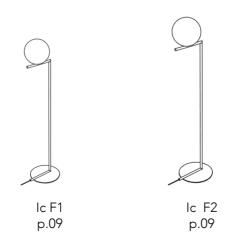

IC F1 F3173057

RF3130100

SCREW KIT WITH ALLEN KEY FOR BASE ASSEMBLY

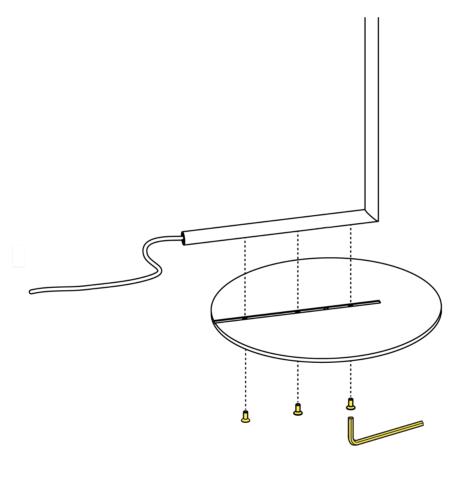



Assemble the base (C) onto the lamp body (B) by fastening the 3 screws (D) with the Allen key supplied with the kit.