


Designed by Achille & Pier Giacomo Castiglioni, 1962


F6607030

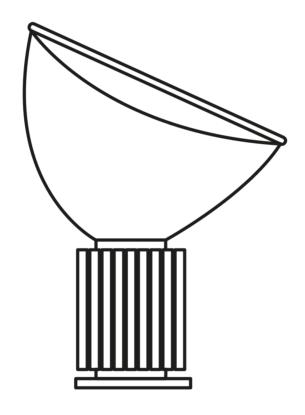



ΕN

F6607030

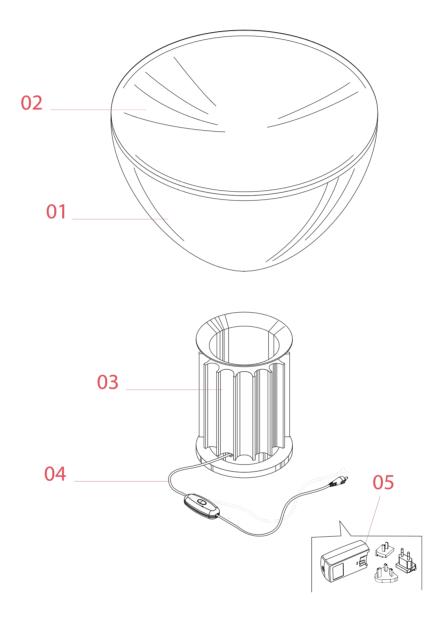

- 01. F6609000 Methacrylate diffuser with reflector
- 02. RF00780 White reflector
- **03. RF6608030** Black base
- **04. RF6608100** Jack plug with cable and push dimmer
- 05. RF3320400 Power supply unit with plug kit



ΕN

F6609000

METHACRYLATE DIFFUSER WITH REFLECTOR



ΕN

F6609000

METHACRYLATE DIFFUSER WITH REFLECTOR

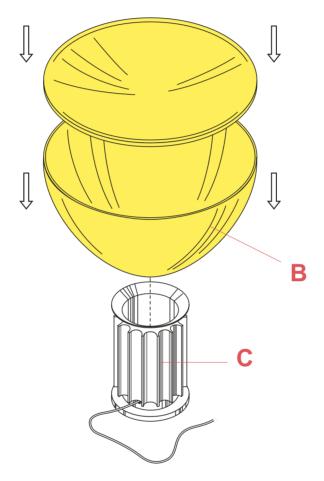


Fig.1

Position the diffuser (B) and the reflector (A) on the base (C).



ΕN

RF00780

WHITE REFLECTOR



ΕN

RF00780

WHITE REFLECTOR

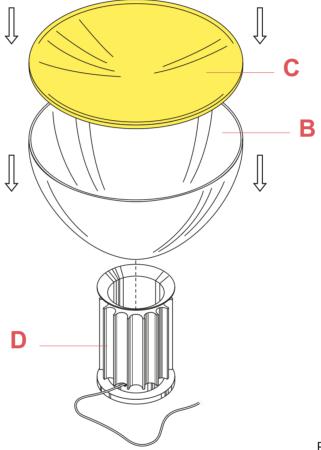


Fig.1

Position the reflector (C) on the diffuser (B).



ΕN

F6608030


BLACK BASE



ΕN

F6608030

BLACK BASE

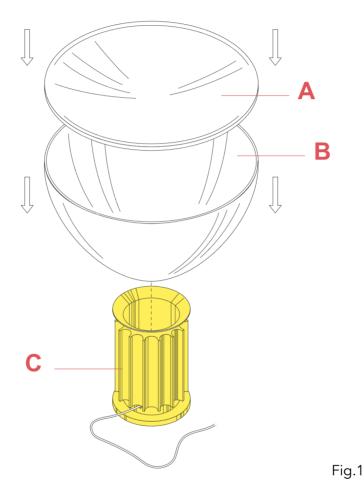

Position the diffuser (B) and the reflector (A) on the base (C).



ΕN

RF6608100

JACK PLUG WITH CABLE AND PUSH DIMMER



ΕN

RF6608100

JACK PLUG WITH CABLE AND PUSH DIMMER



Fig.1



Fig.2

Unfasten the 2 screws (A) from underneath the dimmer and remove the dimmer cover (B).

ΕN

RF6608100

JACK PLUG WITH CABLE AND PUSH DIMMER

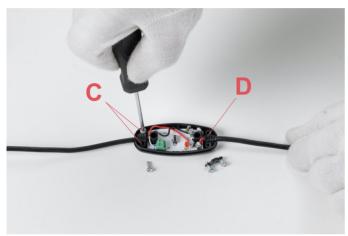


Fig.3

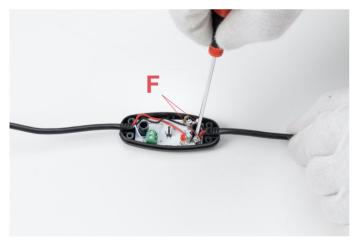


Fig.4

Unfasten the 2 screws (C) of the cable clamp (D) and disconnect the wires from the terminal box (F) through a tiny flat headed screw driver.

ΕN

RF6608100

JACK PLUG WITH CABLE AND PUSH DIMMER

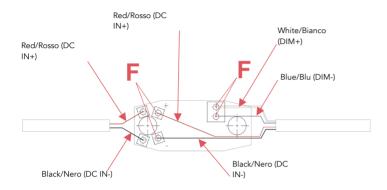


Fig.5

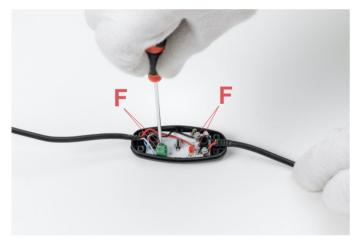


Fig.6

Connect the electrical wires to the terminal (F) respecting the polarities of the dimmer. Position the cable clamp (D) and fasten back the screws (C).

Close the dimmer by positioning the cover (B) and fastening the 2 screws (A)




ΕN

RF3320400

POWER SUPPLY UNIT WITH PLUG KIT





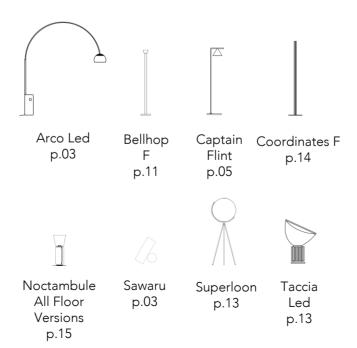


WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF3320400

POWER SUPPLY UNIT WITH PLUG KIT

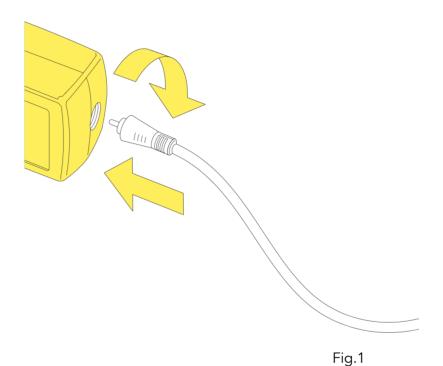

When installing and whenever acting on the appliance, ensure that the power supply has been switched off.

For the installation of the spare-part, it is necessary to consult a qualified electrician.

Insert the plug into the power unit. By using the guides, snap the plug inside its apposite slot (use the correct type of plug for the country in which the device must be installed).