


K TRIBE F1

Designed by Philippe Starck, 2007


F6265000

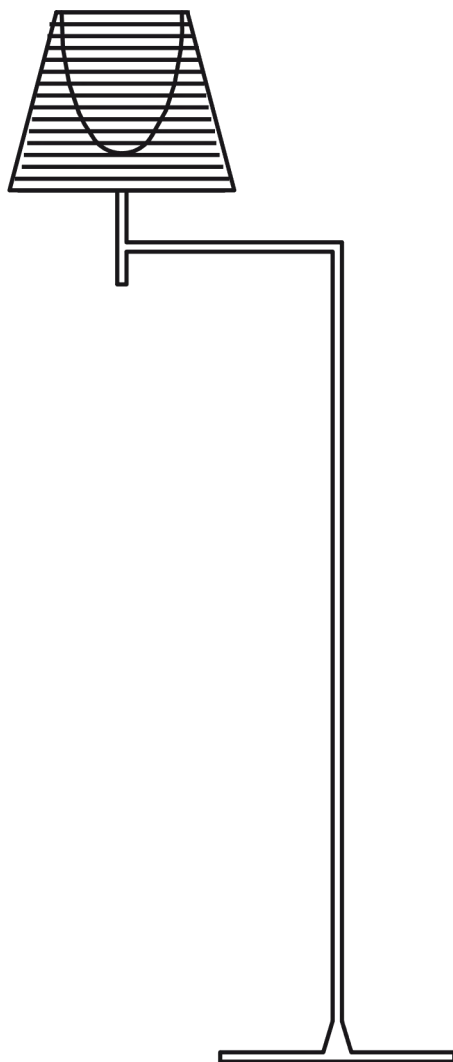

K TRIBE F1

F6265000

EN

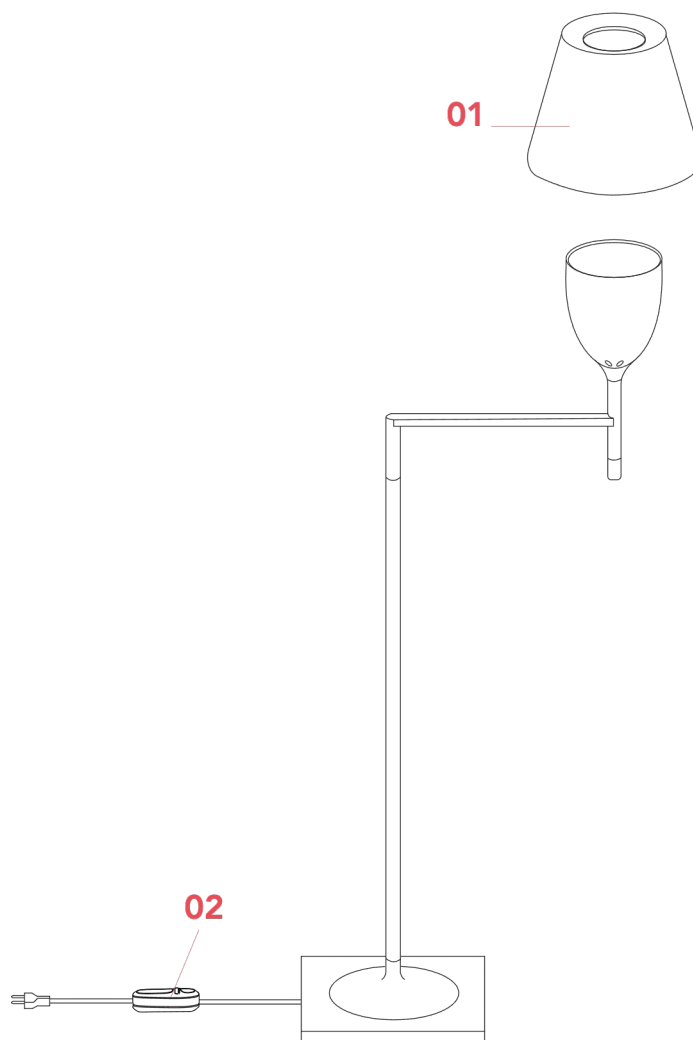

01. RF6255007 – Transparent diffuser assembly


02. RF16322 – Dimmer RT99 PCG 230V

K TRIBE F1 F6265000


EN

RF6255007


TRANSPARENT DIFFUSER ASSEMBLY



Ktribe
F1
p.03



Ktribe
W
p.03



Miss K
p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

K TRIBE F1 F6265000

EN

RF6255007

TRANSPARENT DIFFUSER ASSEMBLY

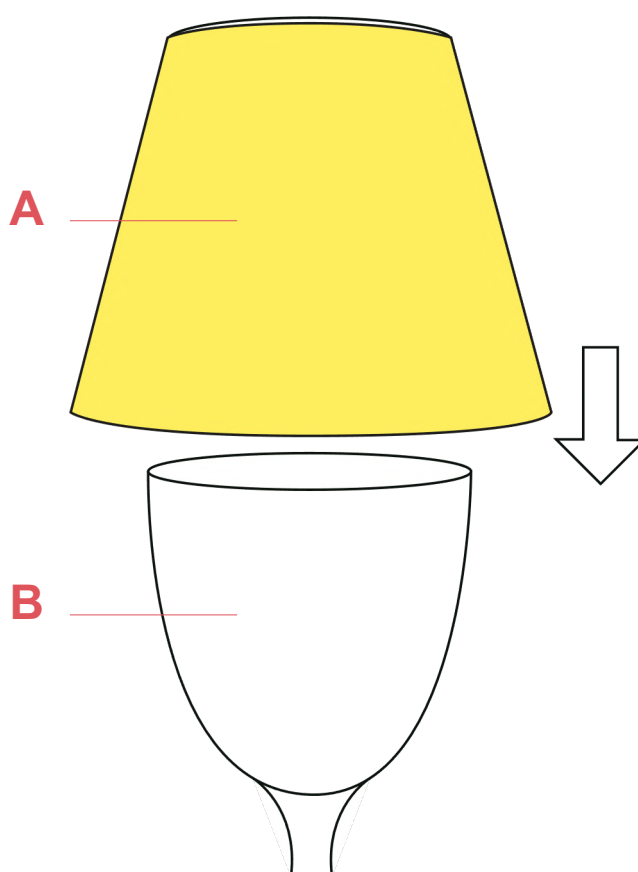


Fig.1

Lock the external diffuser (A) to the inner diffuser (B) by forcing (pushing) it to clicks-on.

To lock the Soft version diffusers, it is necessary to locate the diffuser (A) on top of the inner diffuser (B) and force it harder in way that it clips-on to the diffuser (B).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



Fig.1



Fig.2

Open the dimmer box of the damaged dimmer;
To open the box, it is necessary to Insert in one at a time in the openings (A) a tiny flat screw driver (B) and physically lever and force with your hand the dimmer box housing to open;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



Fig.3



Fig.4

Unfasten the 4 screws (C) of the cable clamps by utilizing a cross headed screw driver;

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



Fig.5



Fig.6

Disconnect the wires from the terminal box through a tiny flatheaded screw driver.

When connecting the wires It is necessary to respect the polarities (L= Brown and N= Blue). Connect the wires of the push-button (white and grey) and then the wires brown and blue (conductors of the lamp bulb).

Connect the transparent wires of the plug cable to the L&N terminal box.

Lock the electrical cables by fastening the screws of the cable clamps and make sure to block the isolation of the electrical cable.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



Fig.7



Fig.8

REMARKS: If you have a wall socket commanded through an ON-OFF switch, remove the red jumper present on the printed circuit board. This operation allows you to command the lamp through the remote wall ON-OFF switch.

N.B. The dimmer when commanded through the remote wall switch, it will switch ON-OFF the lamp to the maximum light intensity. The dimmer memorizes the last light intensity level set.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

K TRIBE F1 F6265000

EN

RF16322

DIMMER RT99 PCG 230V



Fig.9



Fig.10

Close the dimmer housing.
It is necessary to press on the lateral sides of the dimmer casing and make sure that it clicks-in.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off.
For the installation of the spare-part, it is necessary to consult a qualified electrician.

©2021 Flos - All rights reserved - www.flos.com
Flos reserves the right to introduce any changes to its own models, without prior notice.