


KTRIBE T2

Designed by Philippe Starck, 2007

F6303000

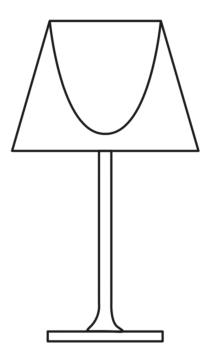




KTRIBE T2

ΕN

F6303000

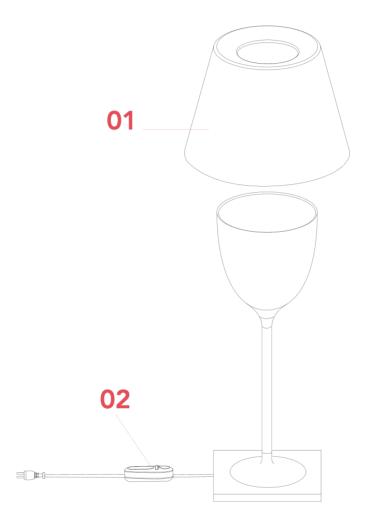

01. F6278000 – Transparent diffuser assembly

02. RF32262 – Led dimmer 1004P LFP100-240V 4-150WHL 4-25W



ΕN

F6278000

TRANSPARENT DIFFUSER ASSEMBLY





Bibliothequ e Nationale p.03



Ktribe T2 p.03



Ktribe F2 p.03

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

F6278000

TRANSPARENT DIFFUSER ASSEMBLY

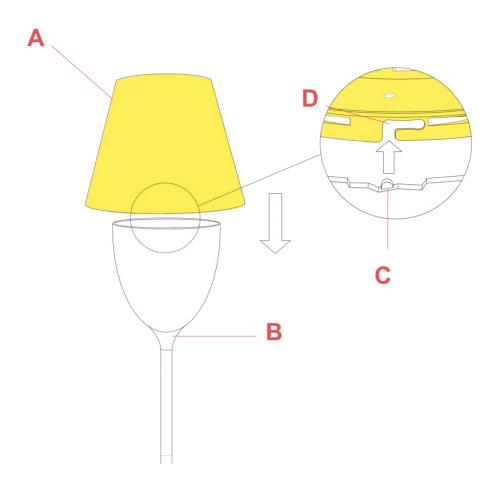


Fig.1

Install the external diffuser (A) onto the internal diffuser (B) being careful to make the three pins (C) in the internal diffuser correspond with the relative housings (D) in the external diffuser. Once carried out this operation it is necessary to lock the external diffuser by turning it slightly clockwise.




ΕN

RF32262

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



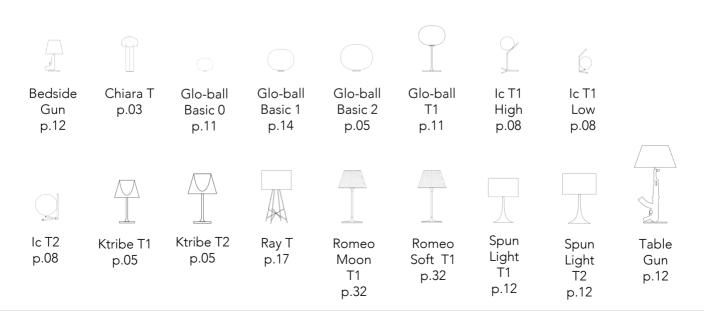

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF32262

LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



Fig.1



Fig.2

Open the dimmer box of the damaged dimmer.

For the opening, it is necessary to remove the n°2 screws using a star screw driver.

Lift-up the dimmer casing from the dimmer base;

ΕN

RF32262


LED DIMMER 1004P LFP100-240V 4-150WHL 4-25W



Fig.3



Fig.4



Remove the cable clamps by unfastening the 4 screws (A) and disconnect the wires from the terminal blocks through a tiny flat headed screw driver;

Replace the dimmer and connect the wires. When connecting the wires it is necessary to respect the polarities ($L = Brown \ and \ N = Blue$) to the terminal box.

Lock the electrical cables by fastening the screws (A) of the cable clamps and make sure to block the

isolation of the electrical cable.

Close the dimmer box.

It is necessary to place the casing on top and press down until it locks in.

it is necessary to insert the n°2 screws using a star screw driver