

ROMEO BABE S

Designed by Philippe Starck, 1997

F6124000






ROMEO BABE S

ΕN

F6124000

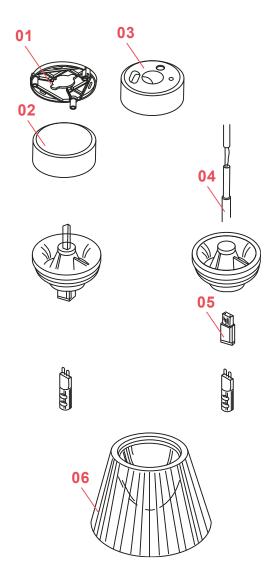

- **01. RF15657** S/K/Soft base wall mount
- 02. RF16160 S/K/Soft ceiling rose
- 03. RF3350300 Ceiling rose assembly
- **04. RF4190200** 5 meter Sil/Fep 2x0,75 transparent electrical cable
- **05. RF18861** Ceramics G9 lamp holder
- 06. RF6120100 Glass diffuser assembly



ROMEO BABE S F6124000

ΕN

RF15657

S/K/SOFT BASE WALL MOUNT










Romeo Babe Soft S p.03

ROMEO BABE S F6124000

RF15657

S/K/SOFT BASE WALL MOUNT

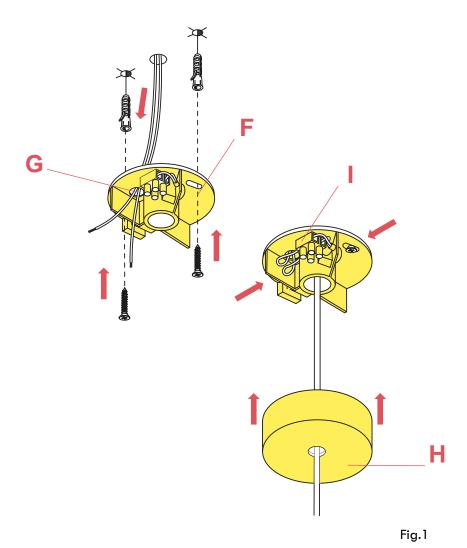

Fix the ceiling attachment (F) utilizing screws and plugs suitable for the surface where it needs to be installed on.

Ensure to insert the electrical wires from the ceiling through the hole (G). Insert the electrical cable of the lamp through the ceiling rose (H) and connect the cable wires to the terminal box (I) making sure that the cable of the lamp passes through the ceiling attachment holes like indicated in the diagram (L), hook the ceiling rose (H) to the wall attachment (F).

ROMEO BABE S F6124000

RF15657

S/K/SOFT BASE WALL MOUNT

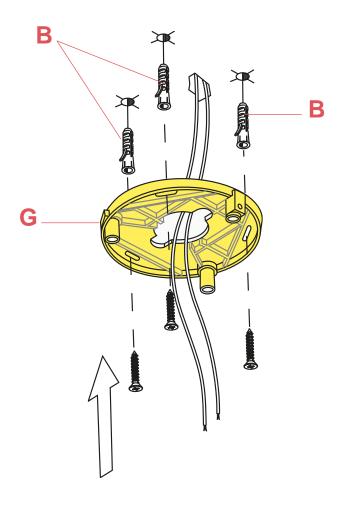


Fig.2

Secure the wall mount (A) to the wall using the screws and expansion plugs (B) and paying attention to insert the power cables coming from the wall through the hole.

NOTE: Select and utilize screw plugs which are suited to the surface where the appliance is to be installed.



ROMEO BABE S F6124000

ΕN

RF3350300

CEILING ROSE ASSEMBLY







Romeo Babe p.06




Romeo Babe Soft S p.06

ROMEO BABE S F6124000

RF3350300

CEILING ROSE ASSEMBLY

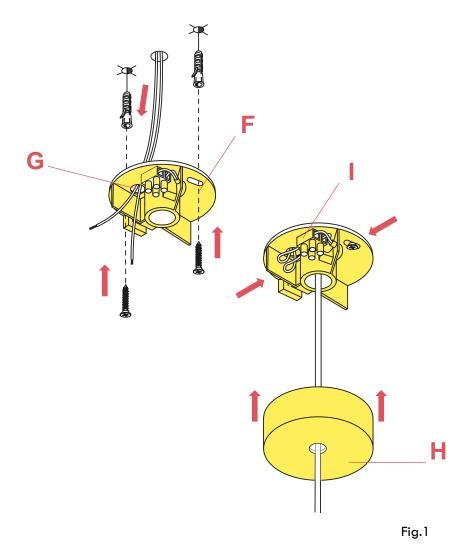

Fix the ceiling attachment (F) utilizing screws and plugs suitable for the surface where it needs to be installed on.

Ensure to insert the electrical wires from the ceiling through the hole (G). Insert the electrical cable of the lamp through the ceiling rose (H) and connect the cable wires to the terminal box (I) making sure that the cable of the lamp passes through the ceiling attachment holes like indicated in the diagram (L), hook the ceiling rose (H) to the wall attachment (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.


© 2021 Flos - All rights reserved - www.flos.com Flos reserves the right to introduce any changes to its own models, without prior notice.

ROMEO BABE S F6124000


RF4190200

5MT SIL/FEP 2X0,75 TRANSPARENT ELECTRICAL CABLE





Ktribe S2 p.06



Ktribe S3 p.06



Mini Glo-Ball S p.07



Ray S p.08



Romeo Babe

p.08



Romeo Babe Soft S p.08



ROMEO BABE S F6124000

RF18861

CERAMIC G9 LAMP HOLDER











Romeo Babe p.09 Romeo Babe Sosft S p.09 Romeo Babe W p.06 Romeo Babe Soft W p.06



ROMEO BABE S F6124000

RF6120100

GLASS DIFFUSER ASSEMBLY







Romeo Babe p.10 Romeo Babe W p.07

ROMEO BABE S F6124000

RF6120100

GLASS DIFFUSER ASSEMBLY

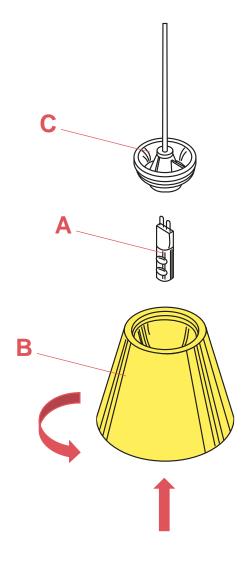


Fig.1

Fasten on the diffuser (A) onto the support (C) without forcing it.

REMARKS!!! Slightly loosen the diffuser (A) when it has reached the full extent of the screw thread. This will ensure that future removal will be easier.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN