


TATOU S2

Designed by Patricia Urquiola, 2012

F7766009




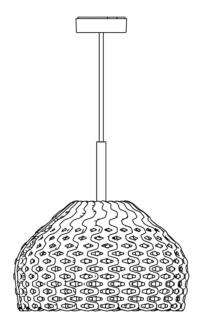

TATOU S2

ΕN

F7766009

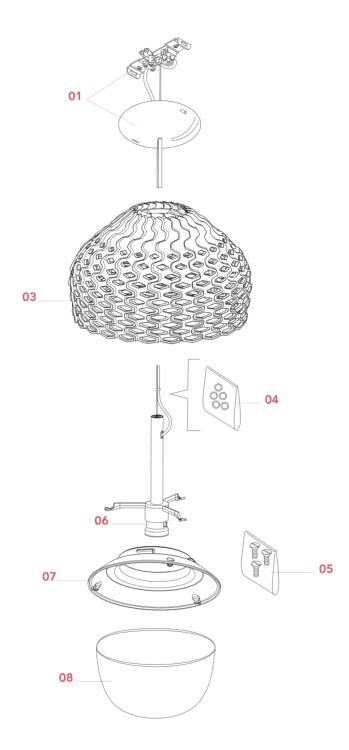

- 01. RF7756109 White ceiling rose assembly
- 03. F7755009 Tatou F-S2 white assembly diffuser
- **04. RF05382** Kit of n. 5 OR rings
- 05. RF7755100 Kit with screws for F-S2 opal reflector assembly
- 06. RF04487 Porcelain E27 lamp holder
- 07. RF7755200 Opal reflector assembly
- 08. RF21517 Opal internal S2 diffuser



ΕN

RF7756109

WHITE CEILING ROSE ASSEMBLY





ΕN

RF7756109

WHITE CEILING ROSE ASSEMBLY


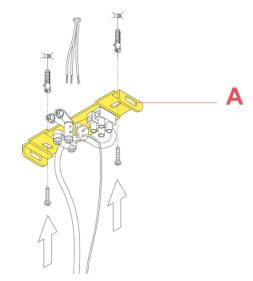


Fig.1

Fig.2

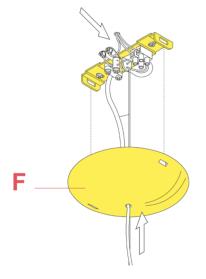

Fix the wall fixture (A) with the appropriate expansion bolts.

NOTE: Selected and employ screw anchors which are suited to the surface where the appliance is to be installed.

Connect the power cable to the terminal box (not supplied with the spare-part). Mount the ceiling-rose (F).



ΕN

F7755009

F-S2 WHITE ASSEMBLY DIFFUSER





WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

F7755009

F-S2 WHITE ASSEMBLY DIFFUSER

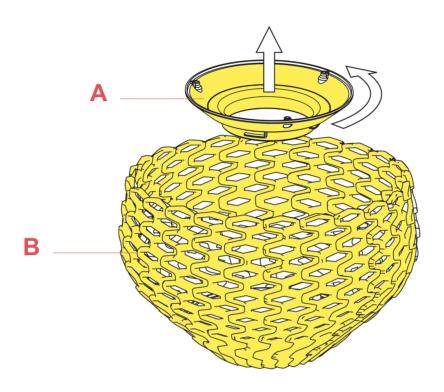


Fig.1

Disassemble the reflector ring (A) from the external diffuser (B) by rotating it slightly anticlockwise.

ΕN

F7755009

F-S2 WHITE ASSEMBLY DIFFUSER

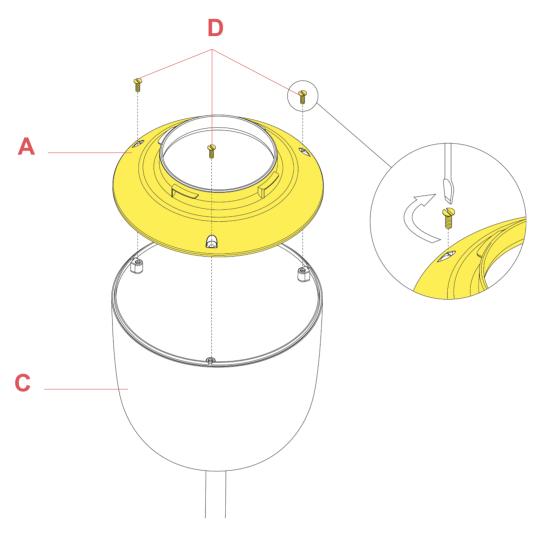


Fig.2

Assemble the reflector ring (A) on the internal diffuser (C) by fastening the three screws (D). Please utilize flat blade screwdriver.

ΕN

F7755009

F-S2 WHITE ASSEMBLY DIFFUSER

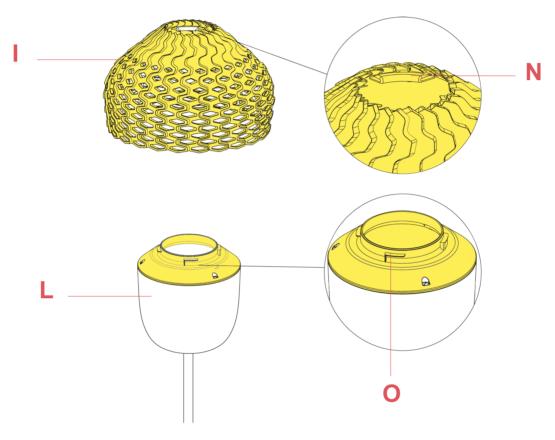


Fig.3

Assemble the external diffuser (I) onto the reflector ring (L) being careful to make the three hooks (O) present on the reflector ring (O) correspond with the relative housings (L) present on the external diffuser (I).

At this point, lock the external diffuser by rotating it slightly clockwise.

ΕN

F7755009

F-S2 WHITE ASSEMBLY DIFFUSER

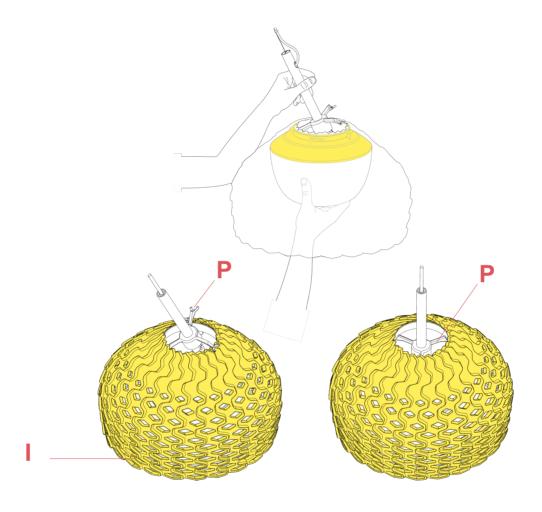


Fig.4

Fit the diffuser (I) onto the supports of the three arms (P), by tilting the supports as shown in the image, by inserting first the lamp-bulb and one arm through the lamp hole.




ΕN

RF05382

KIT OF N. 5 OR RINGS



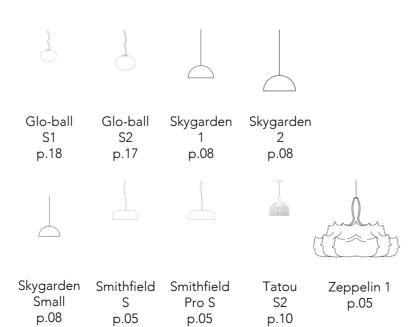

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.




ΕN

RF7755100

KIT WITH SCREWS FOR F-S2 OPAL REFLECTOR ASSEMBLY



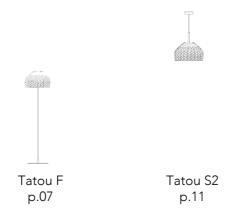

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF7755100

KIT WITH SCREWS FOR F-S2 OPAL REFLECTOR ASSEMBLY

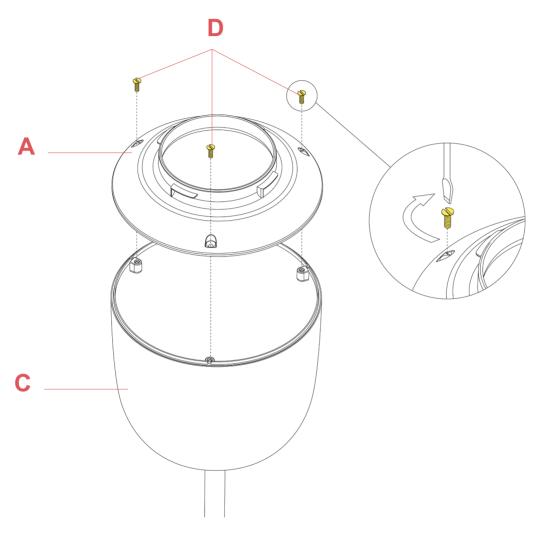


Fig.1

Assemble the reflector ring (A) on the internal diffuser (C) by fastening the three screws (D). Please utilize flat blade screwdriver.

ΕN

RF7755100

KIT WITH SCREWS FOR F-S2 OPAL REFLECTOR ASSEMBLY

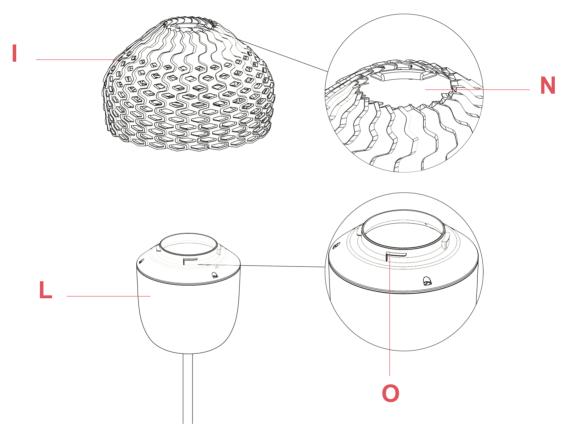


Fig.2

Assemble the external diffuser (I) onto the reflector ring (L) being careful to make the three hooks (O) present on the reflector ring (O) correspond with the relative housings (L) present on the external diffuser (I).

At this point, lock the external diffuser by rotating it slightly clockwise.

ΕN

RF7755100

KIT WITH SCREWS FOR F-S2 OPAL REFLECTOR ASSEMBLY

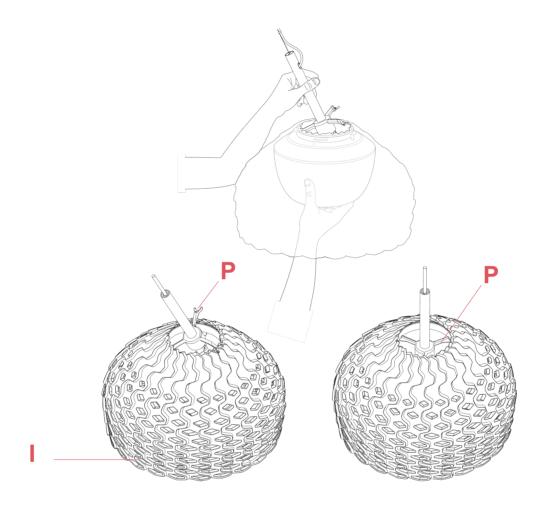


Fig.3

Fit the diffuser (I) onto the supports of the three arms (P), by tilting the supports as shown in the image, by inserting first the lamp-bulb and one arm through the lamp hole.




ΕN

RF04487

PORCELAIN E27 LAMP HOLDER



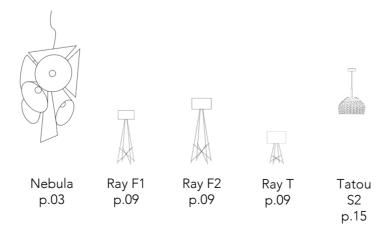

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF04487

PORCELAIN E27 LAMP HOLDER

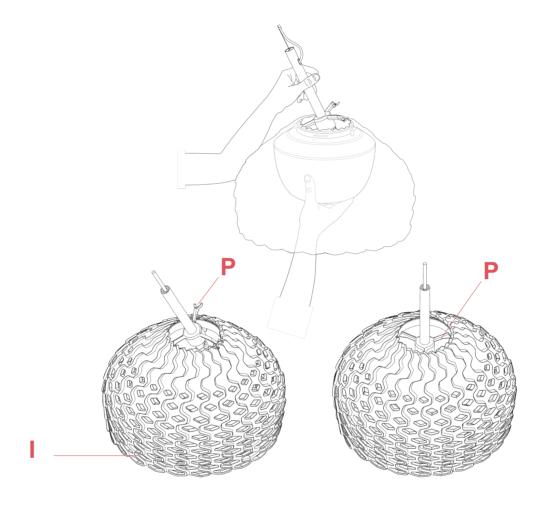


Fig.1

Remove the diffuser (I) by unhooking the three arms (P).

ΕN

RF04487

PORCELAIN E27 LAMP HOLDER



Fig.2

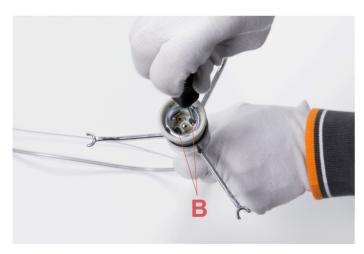


Fig.3

Unfasten the two screws (B) of the lamp holder (A).

ΕN

RF04487

PORCELAIN E27 LAMP HOLDER

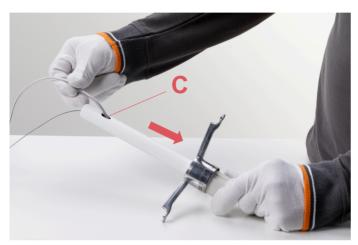


Fig.4

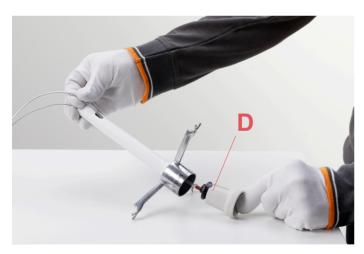


Fig.5

Push the electrical cable (C) downwards, in away to have access to the lamp holder terminals (D).

ΕN

RF04487

PORCELAIN E27 LAMP HOLDER



Fig.6



Fig.7

Loosen the locking screw of the cable clamp (E) and push it backwards, in away to have access to the electrical connections. Disconnect the electrical wires (F) by unfastening the terminal (D) screws and remove the damaged lamp holder (A).

Assemble now the new spare-part:

Install the new lamp holder (A) by connecting the electrical wires (F) to the terminals (D). **REMARKS!** Please respect the polarities of the electrical conductors.

Position back the cable clamp (E) and proceed by tightening back the locking screw. (do not force to hard).

Pull up the electrical cable (C).(Fig.4 page 18) Assemble the lamp holder (D) back to the lamp body by fastening the two screws (B).(Fig.3 page 17)

Fit the diffuser (I) onto the supports of the three arms (P), by tilting the supports as shown in the image, by inserting first the lamp-bulb and one arm through the lamp hole. (Fig. 1 page 16)



ΕN

RF7755200

F-S2 OPAL REFLECTOR ASSEMBLY





WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF7755200

F-S2 OPAL REFLECTOR ASSEMBLY

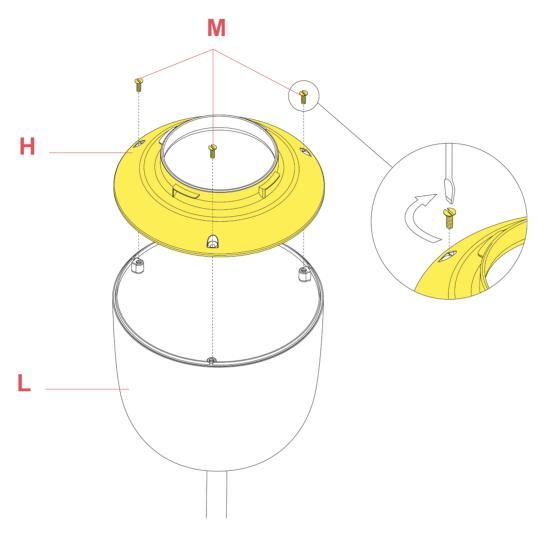


Fig.1

Assemble the reflector ring (H) onto the internal diffuser (L) by fastening the three screws (M). Please utilize flat blade screwdriver.

ΕN

RF7755200

F-S2 OPAL REFLECTOR ASSEMBLY

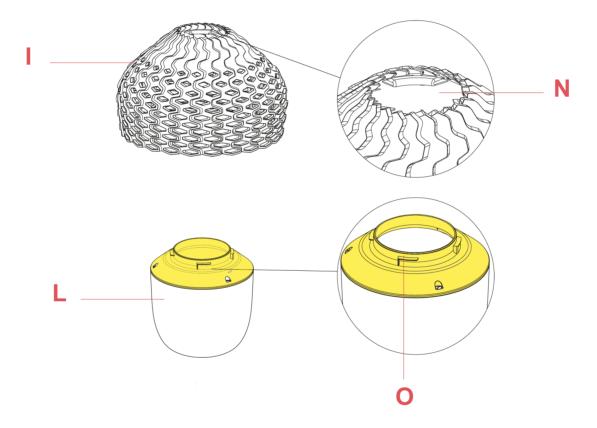


Fig.2

Assemble the external diffuser (I) onto the reflector ring (L) being careful to make the three hooks (O) present on the reflector ring (O) correspond with the relative housings (L) present on the external diffuser (I).

At this point, lock the external diffuser by rotating it slightly clockwise.

ΕN

RF7755200

F-S2 OPAL REFLECTOR ASSEMBLY

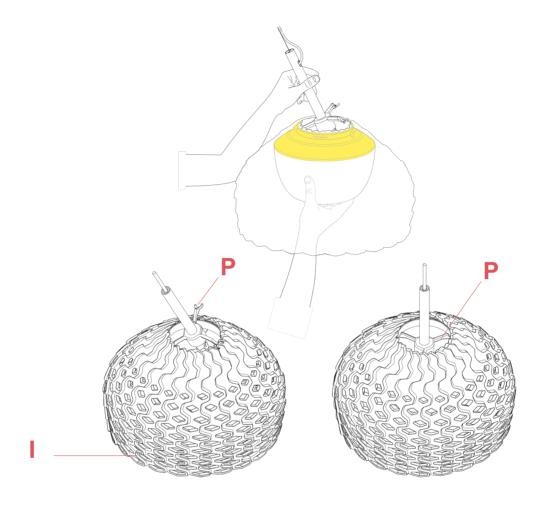


Fig.3

Fit the diffuser (I) onto the supports of the three arms (P), by tilting the supports as shown in the image, by inserting first the lamp-bulb and one arm through the lamp hole.



ΕN

RF21517

OPAL INTERNAL S2 DIFFUSER



ΕN

RF21517

OPAL INTERNAL S2 DIFFUSER

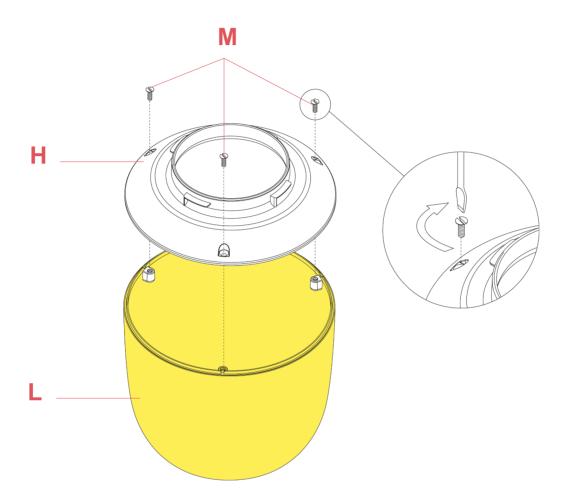


Fig.1

Assemble the reflector ring (H) onto the internal diffuser (L) by fastening the three screws (M). Please utilize flat blade screwdriver.

ΕN

RF21517

OPAL INTERNAL S2 DIFFUSER

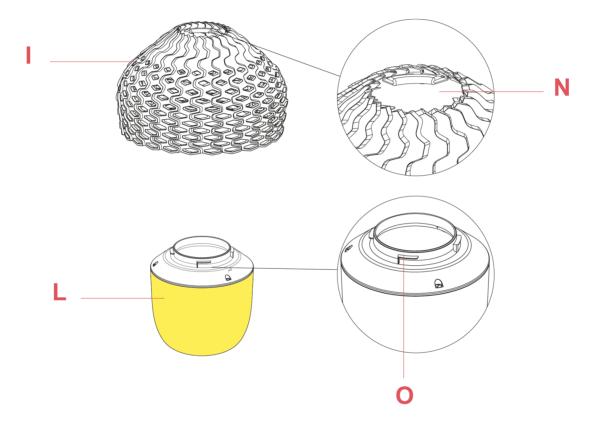


Fig.2

Assemble the external diffuser (I) into the reflector ring (L) being careful to make the three hooks (O) present on the reflector ring (O) correspond with the relative housings (L) present on the external diffuser (I).

At this point, lock the external diffuser by rotating it slightly clockwise.

ΕN

RF21517

OPAL INTERNAL S2 DIFFUSER

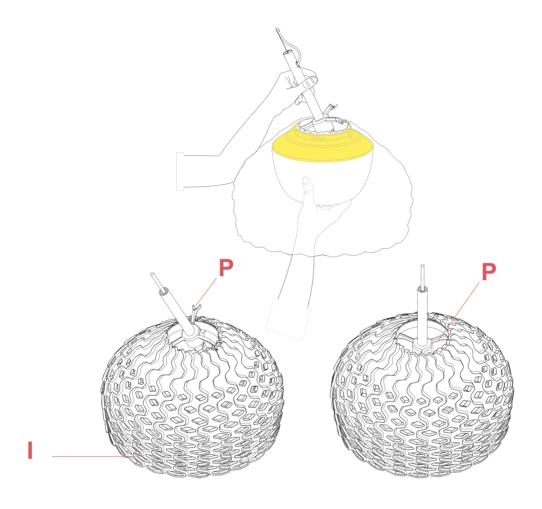


Fig.3

Fit the diffuser (I) onto the supports of the three arms (P), by tilting the supports as shown in the image, by inserting first the lamp-bulb and one arm through the lamp hole.