
FLOS

ROMEO MOON S2

Designed by Philippe Starck, 1996

F0003000

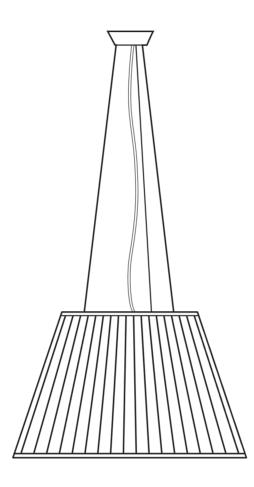


FLOS

REV. 1 DATE 08/07/2021

ΕN

ROMEO MOON S2

F0003000

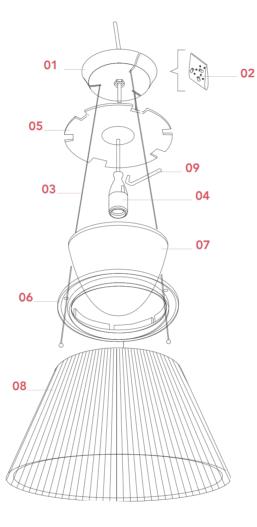

01. RF81836 – Ceiling rose assembly

- 02. RF6110800 Kit with brass wire clamps and screws
- 03. RF29875 Steel cable pack (3 cables) 3mt.
- 04. RF85863 Lamp holder assembly
- 05. RF05985 Anti-dust screen
- 06. RF6110700 Moon S2 safety support ring assembly
- 07. RF03171 Acid-etched diffuser
- 08. RF6110300 Romeo Moon S2 crown
- 09. RF02783 Lamp holder support

EN

RF81836 CEILING ATTACHMENT ASSEMBLY






EN

RF81836

CEILING ATTACHMENT ASSEMBLY

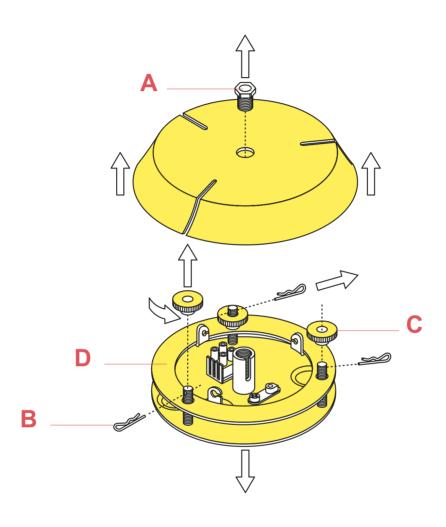




Disassemble the cable stopper (A), remove the safety split pins (B), unscrew the knurled nuts (C) and adjustment ring (D).

EN

RF81836

CEILING ATTACHMENT ASSEMBLY

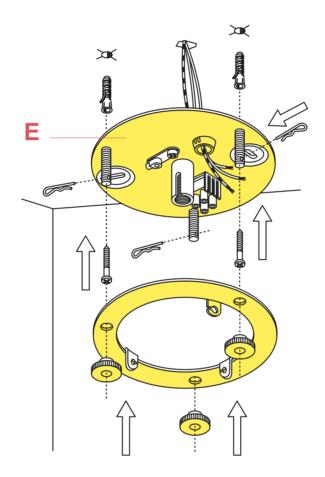




Fix the wall attachment (E) utilizing appropriate expansion bolts. **REMARKS!** Select and utilize screw plugs which are suitable for the surface where the assembly is to be installed. Assemble the adjustment balance ring by tightening the milled bolts and insert the safety cotter pins.

EN

RF6110800

KIT WITH BRASS WIRE CLAMPS AND SCREWS



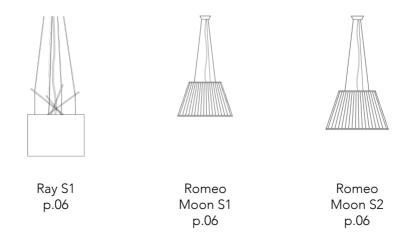

EN

RF6110800

KIT WITH BRASS WIRE CLAMPS AND SCREWS

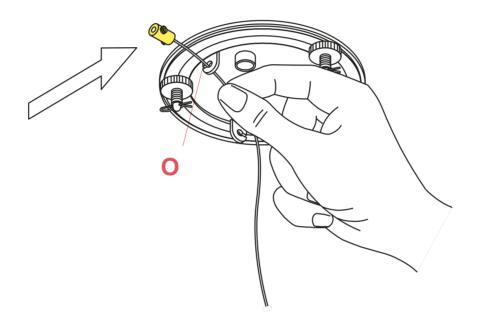


Fig.1

Insert the steel wires (L) through the relevant cable-clamps of the control ring, as shown in the image. Adjust them to the desired length and cut off any excess. Fix in place by tightening the screws.

EN

RF29875 STEEL CABLE PACKED 3 PIECES MT.3



EN

RF29875 STEEL CABLE PACKED 3 PIECES MT.3

F H G

Fig.1

Let the suspension cables (F) go through the steel ring (G) thereafter into the supporting ring (H).

EN

RF29875 STEEL CABLE PACKED 3 PIECES MT.3

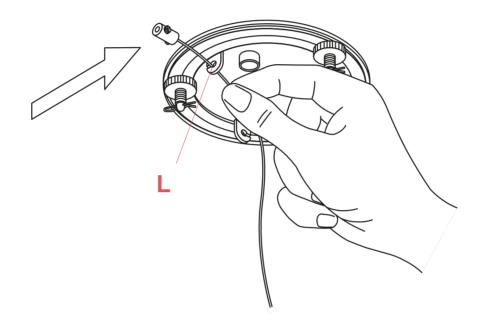


Fig.2

Position the ends of the suspension cables into the holes (L) of the adjusting ring, paying attention to keep the cable stoppers outside the said ring.

EN

RF29875

STEEL CABLE PACKED 3 PIECES MT.3

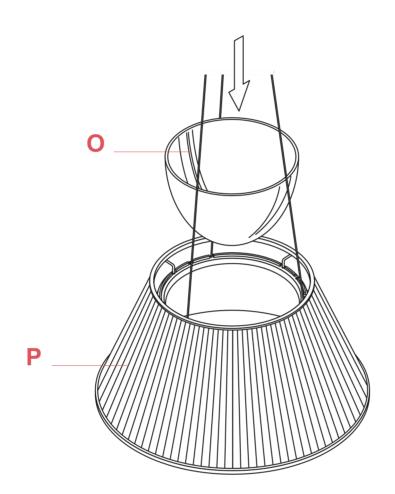


Fig.3

Insert the diffusor (O) in the crown (P).

EN

RF29875

STEEL CABLE PACKED 3 PIECES MT.3


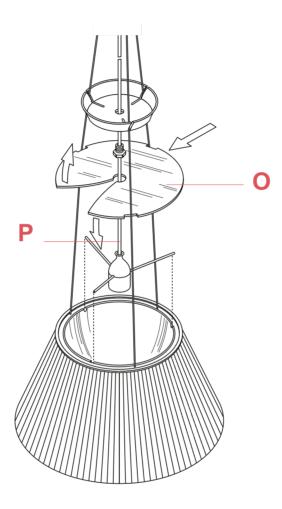


Fig.4

To adjust the length of the power cord (P), disconnect it from the terminal board and cut it to the desired length. Reconnect to the terminal board. Insert the dust shield (Q).

EN

RF29875 STEEL CABLE PACKED 3 PIECES MT.3

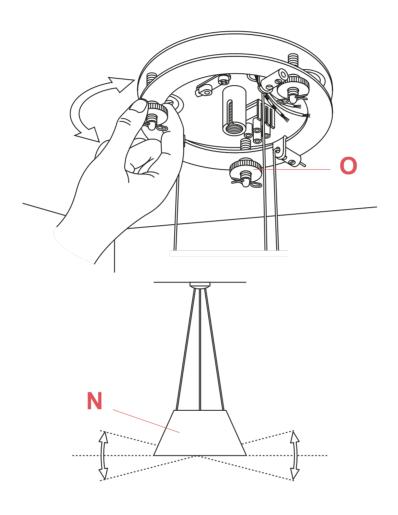



To balance the crown (N), act on the knurled nuts (O).

EN

RF29875

STEEL CABLE PACKED 3 PIECES MT.3

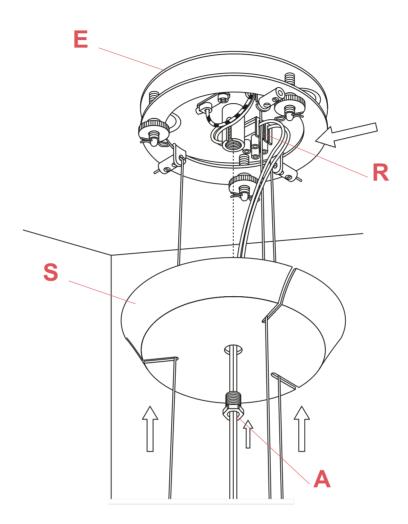


Fig.6

Attach the wires to the terminal board (R). Close the rosette (S) to the wall attachment (E) by fixing with nipple (A).

EΝ




LAMP HOLDER ASSEMBLY





EΝ

RF85863 LAMP HOLDER ASSEMBLY

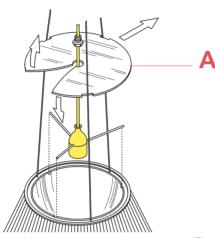

Remove the anti-dust screen (A) by bending the sides of the screen and removing it from the electrical cable.





Fig.2

Pull-out the damaged lamp holder assembly (B) from the appliance. Unhook the three lamp supports (C) from the lamp holder assembly (B).

EΝ

RF85863

LAMP HOLDER ASSEMBLY

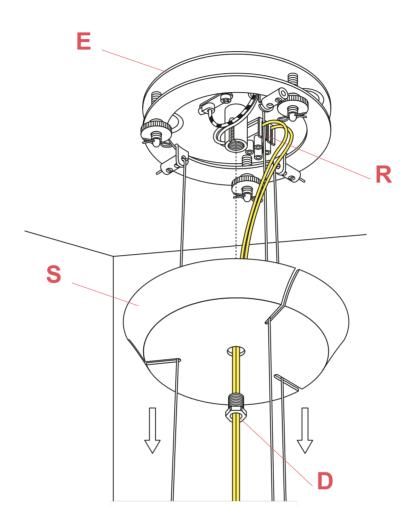


Fig.3

Unfasten the plastic nut (D) and lower down the ceiling coupling (S) from the ceiling attachment (E). Disconnect the electrical conductors from the terminal box (R). Free the electrical wire by sliding it out from the ceiling coupling (S) and from the plastic nut (D).

EΝ

RF85863

LAMP HOLDER ASSEMBLY

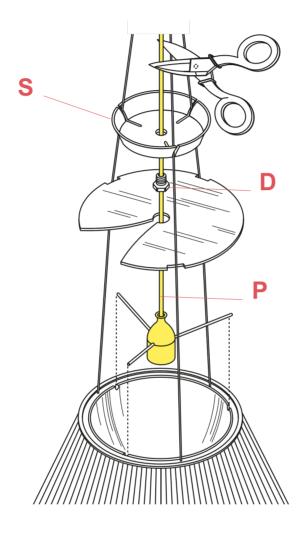


Fig.4


Assemble now the new spare-part:

Insert the electrical cable (P) through the plastic nut (D) and then through the ceiling coupling (S). Adjust the length of the electrical cable (P).

EN

RF85863

LAMP HOLDER ASSEMBLY

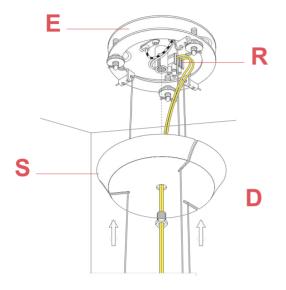

Remove the anti-dust screen (A) by bending the sides of the screen and removing it from the electrical cable.

Fig.5

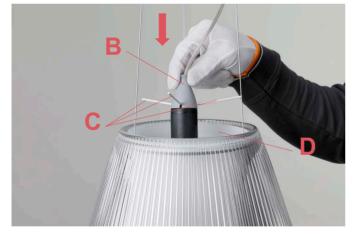


Fig.6

Hook the three supports (C) to the lampholder assembly (B). Collocate the electrical assembly (B) inside the internal glass diffuser (C), ensuring that the three lampholder supports are hooked on the three openings (D) present on the glass

diffuser (C).

EN

RF85863

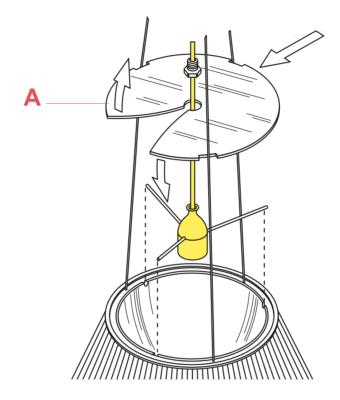


Fig.7

Insert the anti-dust screen (A) by bending the sides of the screen and inserting it through the electrical cable.

EN



EN



Fig.1

Insert the anti-dust screen (A) by bending the sides of the screen and inserting it through the electrical cable.

EN

RF6110700

SAFETY RING ASSEMBLY



EΝ

RF6110700 SAFETY RING ASSEMBLY



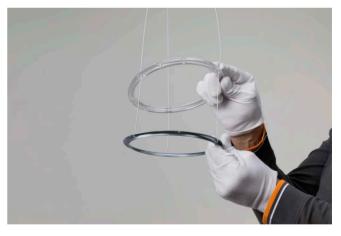




Fig.2



Fig.3





EN

RF6110700 SAFETY RING ASSEMBLY

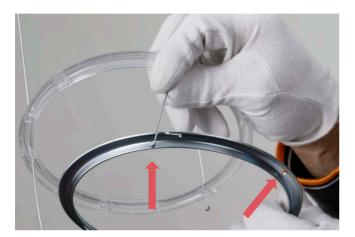


Fig.5



Fig.6



Fig.7



Fig.8

EN

RF6110700 SAFETY RING ASSEMBLY



EN

RF03171 ACID-ETCHED DIFFUSER



EN

RF03171 ACID-ETCHED DIFFUSER

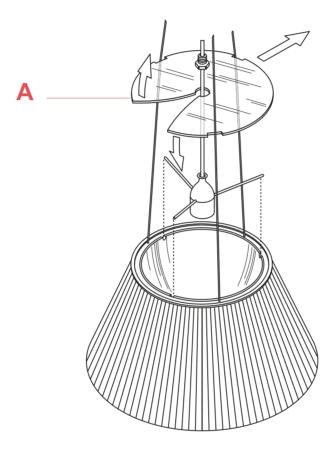


Fig.1

Remove the anti-dust screen (A) by bending the sides of the screen and removing it from the electrical cable.

EN

RF03171 ACID-ETCHED DIFFUSER



Fig.2



Fig.3

Pull-out the electrical assembly (B) from the appliance.

Insert the new internal glass diffuser (C).

EΝ

RF03171 ACID-ETCHED DIFFUSER



Fig.4

diffuser (C).

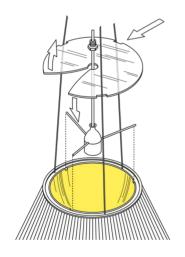


Fig.5

Insert the anti-dust screen (A) by bending the sides of the screen and inserting it through the electrical cable.

Collocate the electrical assembly (B) inside the internal glass diffuser (C), ensuring that the

three lamp holder supports are hooked on the three openings (D) present on the glass

EN

RF6110300 ROMEO MOON CROWN





EN

RF6110300

ROMEO MOON CROWN

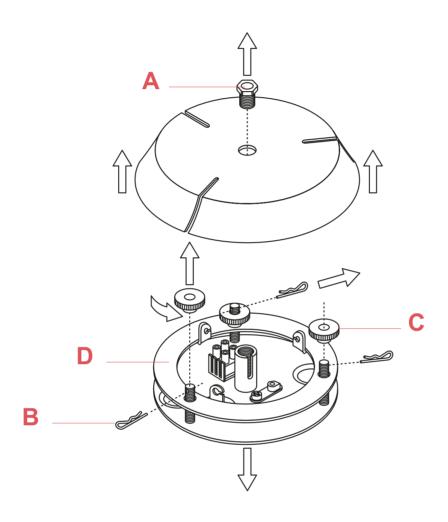


Fig.1

Disassemble the cable stopper (A), remove the safety split pins (B), unscrew the knurled nuts (C) and adjustment ring (D).

EΝ

RF6110300 ROMEO MOON CROWN


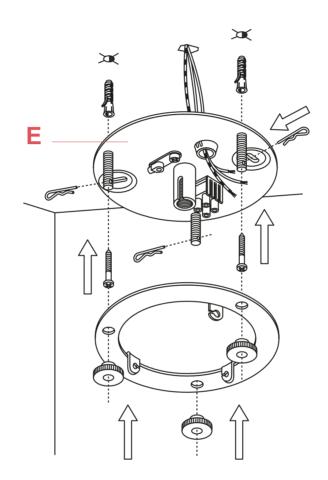


Fig.2


Fix the wall attachment (E) utilizing appropriate expansion bolts. **REMARKS!** Select and utilize screw plugs which are suitable for the surface where the assembly is to be installed. Assemble the adjustment balance ring by tightening the milled bolts and insert the safety cotter pins.

EN

RF6110300 ROMEO MOON CROWN

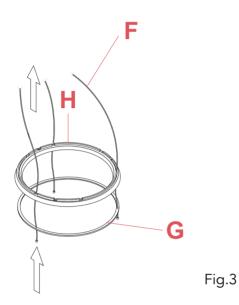


Let the suspension cables (F) go through the steel ring (G) thereafter into the supporting ring (H).

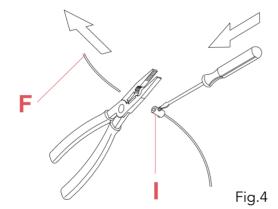

Cut the steel cables (F) to the required length and attach them with the cable grips (I) provided.

EN

RF6110300 ROMEO MOON CROWN

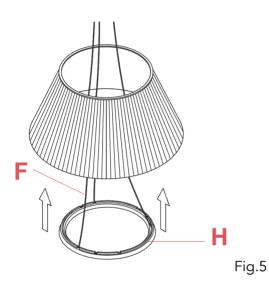

Insert the suspension cables (F) and the supporting ring (H) inside the crown as shown in the picture.

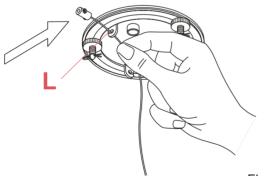
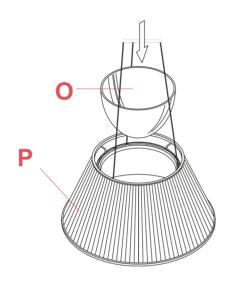


Fig.6

Position the ends of the suspension cables into the holes (L) of the adjusting ring, paying attention to keep the cable stoppers outside the said ring.

EN

RF6110300 ROMEO MOON CROWN



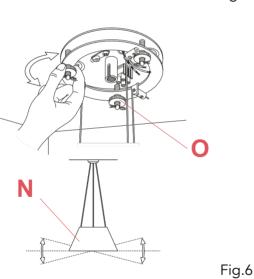



Fig.5

Insert the diffusor (O) in the crown (P).

To balance the crown (N), act on the knurled nuts (O).

EN

RF6110300 ROMEO MOON CROWN

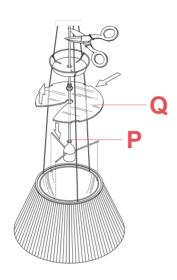

R S A Fig.5

Fig.6

To adjust the length of the power cord (P), disconnect it from the terminal board and cut it to the desired length. Reconnect to the terminal board. Insert the dust shield (Q).

Attach the wires to the terminal board (R). Close the rosette (S) to the wall attachment (E) by fixing with nipple (A).

FLOS

ROMEO MOON S2 F0003000

EN

RF02783 LAMP HOLDER SUPPORT



EN




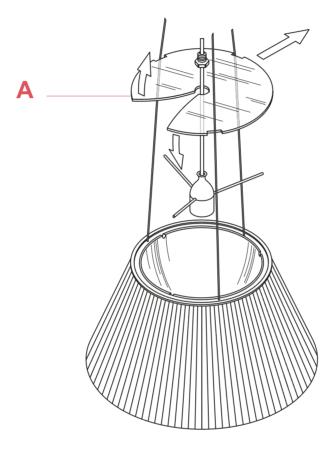


Fig.1

Remove the anti-dust screen (A) by bending the sides of the screen and removing it from the electrical cable.

EΝ

RF02783 LAMP HOLDER SUPPORT

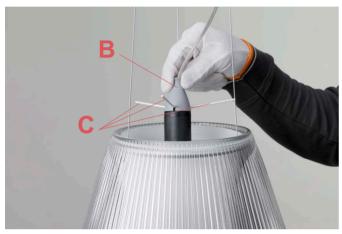

```
Fig.2
```

Pull-out the electrical assembly (B) from the appliance. Hook the three supports (C) to the lamp holder assembly (B).

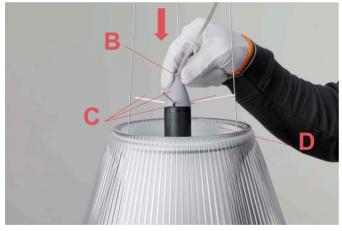


Fig.3

Collocate the electrical assembly (B) inside the internal glass diffuser (C), ensuring that the three lamp holder supports are hooked on the three openings (D) present on the glass diffuser (C).

Insert the anti-dust screen (A) by bending the sides of the screen and inserting it through the electrical cable.(Fig.1 page 43)