


## **WAN C/W**

Designed by Johanna Grawunder, 2005

F9550009




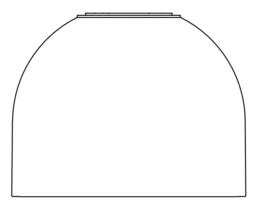

## WAN C/W

ΕN

F9550009

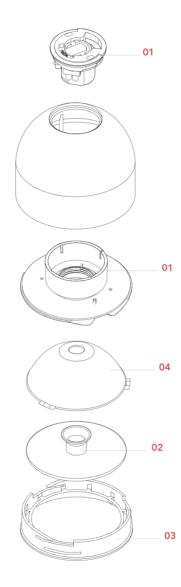

- 01. RF9550300 N.T attach. ass. with G9 lamp holder and safety ring
- **02. RF9550200** Wan glass assembly
- 03. RF13990 Black external ring
- 04. RF9550130 Reflector with external black ring



ΕN

## RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING



#### ΕN

## RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING

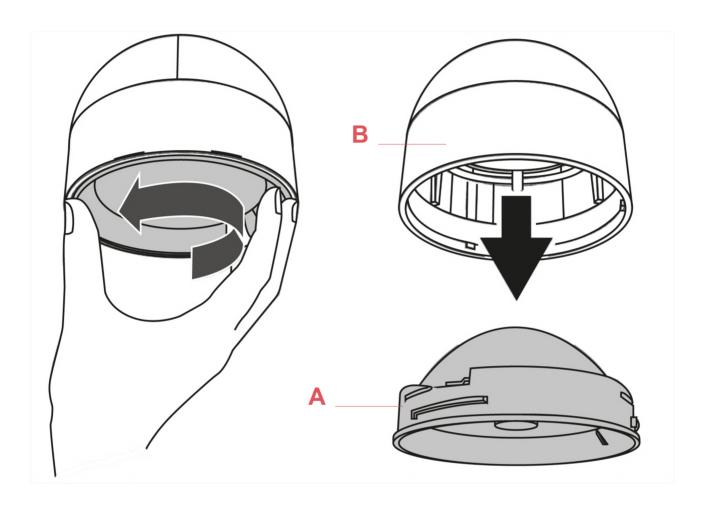


Fig.1

Remove the reflector/diffuser (A) from the lamp body (B) by slight rotating it anticlockwise.

ΕN

## RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING

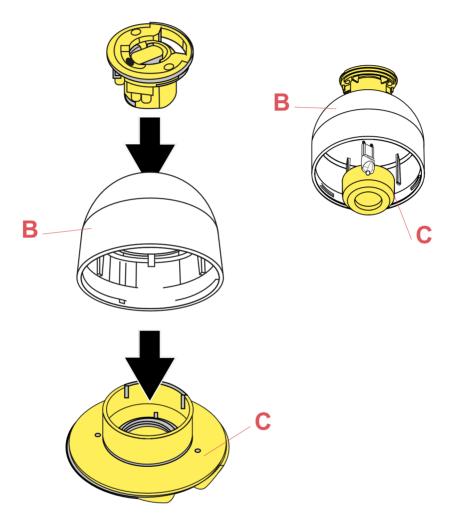


Fig.2

Remove the lamp bulb, unfasten the safety ring (C) and remove the lamp body (B).

ΕN

#### RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING

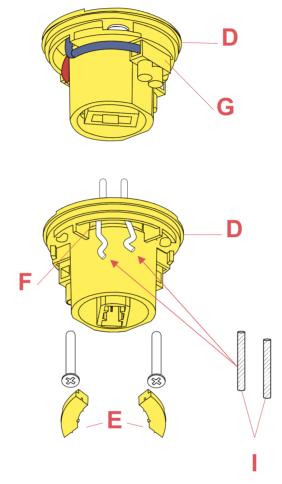


Fig.3

From the attachment (D) disconnect the electrical wires from the terminal box (G). Disassemble the screw covers (E), then remove the ceiling attachment (D) from the ceiling by unfastening using the screws and ensuring that the electric supply wires slide out of the hole (F).

#### Assemble now the new spare-part:

Disassemble the screw covers (E) and then fix the ceiling attachment (D) to the ceiling by utilizing the screws and plugs, ensuring that the electric supply wires pass through the hole (F).

**REMARK**: Select and employ screw anchors and plugs which are suited to the surface where the appliance is to be installed.

Cover the screws with there appropriate covers (E).

Slide the sheaths (I) onto the electric wires.

Connect the electrical wires to the terminal box (G) present on the ceiling attachment (D).

ΕN

## RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING

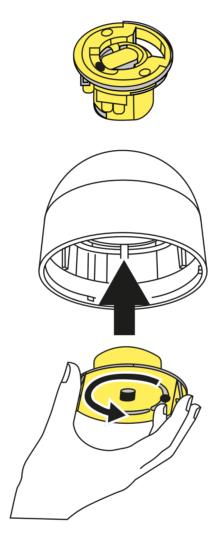



Fig.4

Re-assemble the device by inserting the lamp-bulb, then positioning the lamp body (B) and locking it through the safety ring (C).

ΕN

## RF9550300

NEW TYPE ATTACHMENT ASSEMBLY WITH G9 LAMP HOLDER AND SAFETY RING

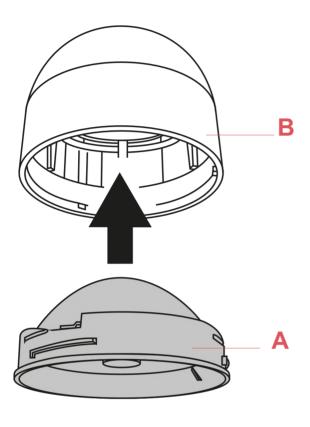

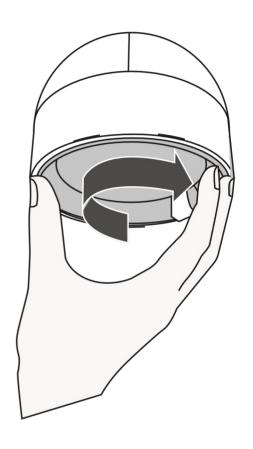


Fig.5

Remove the reflector/diffuser (A) from the lamp body (B) by slight rotating it anticlockwise.




ΕN

## RF9550200

WAN GLASS ASSEMBLY



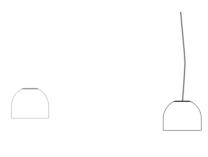

Wan C/W p.09

Wan S p.13

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

## RF9550200

WAN GLASS ASSEMBLY

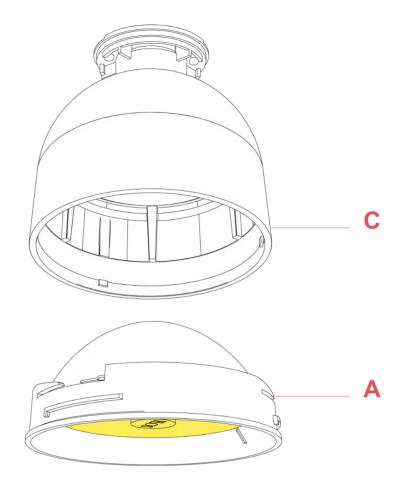


Fig.1

Remove the reflector/diffuser (A), unhooking it from the body (C) by slight rotating it anticlockwise.

ΕN

# RF9550200

WAN GLASS ASSEMBLY



Fig.2



Fig.3

Remove the Reflector (B) from the damaged external ring (D).
Unlock the reflector (B) out from the safety

locks (E).

ΕN

## RF9550200

WAN GLASS ASSEMBLY



Fig.4



Fig.5

Remove the Reflector (B) from the damaged external ring (D).

Assemble now the new spare-part:

Position the glass diffuser (F) on top of the external ring (D).

ΕN

### RF9550200

WAN GLASS ASSEMBLY



Fig.6



Fig.7

Position the reflector (B) on top of the external ring (D).

Lock the reflector (B) inside the safety lock system (E).

Assemble the reflector/diffuser assembly (A), by hooking it on the lamp body (C) rotating it clockwise. (Fig.1 page 10)




ΕN

## RF13990

**EXTERNAL RING** 



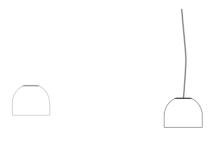

Wan C/W p.14

Wan S p.18

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

## RF13990

**EXTERNAL RING** 

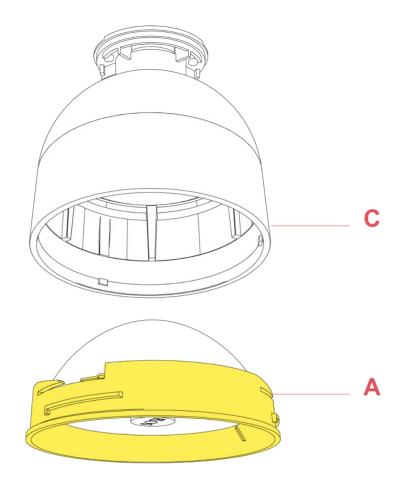


Fig.1

Remove the reflector/diffuser (A), unhooking it from the body (C) by slight rotating it anticlockwise.

ΕN

## RF13990

EXTERNAL RING



Fig.2



Fig.3

Remove the Reflector (B) from the damaged external ring (D).
Unlock the reflector (B) out from the safety

locks (E).

ΕN

## RF13990

**EXTERNAL RING** 



Fig.4



Fig.5

Remove the glass diffuser (F) from the damaged external ring (D).

Assemble now the new spare-part:

Position the glass diffuser (F) on top of the external ring (D).

ΕN

## RF13990

**EXTERNAL RING** 



Fig.6



Fig.7

Position the reflector (B) on top of the external ring (D).

Lock the reflector (B) inside the safety lock system (E).

Assemble the reflector/diffuser assembly (A), by hooking it on the lamp body (C) rotating it clockwise. (Fig. 1 page 15).



ΕN

## RF9550130

REFLECTOR / RING ASSEMBLY





Wan C/W p.19 Wan S p.23

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

## RF9550130

REFLECTOR / RING ASSEMBLY

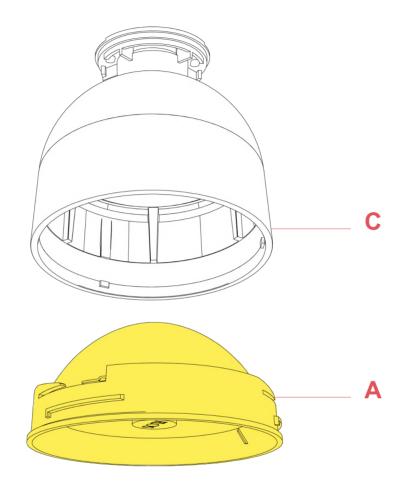


Fig.1

Assemble the reflector/diffuser assembly (A), by hooking it on the lamp body (C) rotating it clockwise.