
# FLOS

# **SPUN LIGHT F**

Designed by Sebastian Wrong, 2003


F6612030

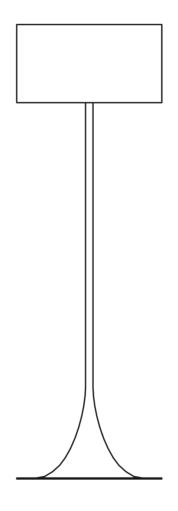

# FLOS

EN



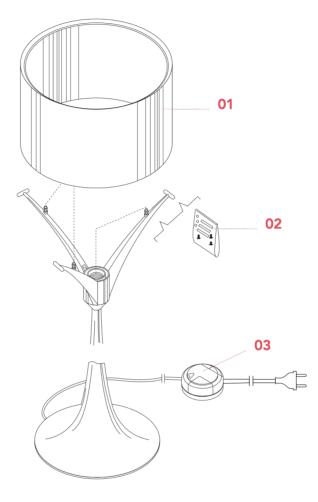

01. RF12147 – F black diffuser

- 02. RF6610100 Bag with diffuser supports and O-rings
- 03. RF28045 Led 220/240V 40-250W 4-100W Rondò dimmer

EΝ

**RF12147** F BLACK DIFFUSER



EN

**RF12147** F BLACK DIFFUSER

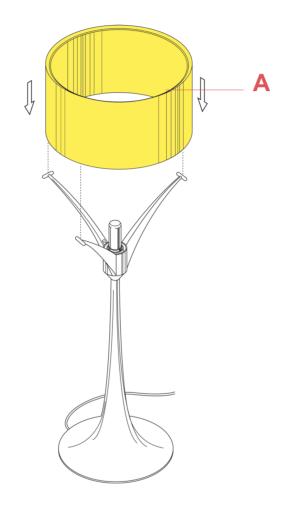


Fig.1

Place the diffuser (A) on the lamp body.

EΝ

# RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING





EN

### SPUN LIGHT F F6612030

## RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

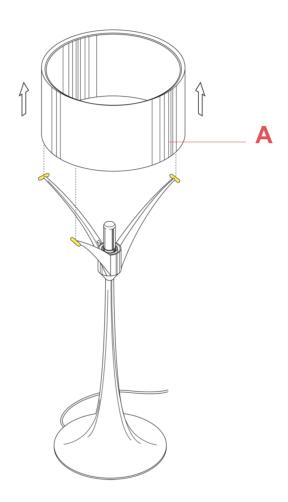


Fig.1

Remove delicately the diffuser (A) from the lamp body.

EN

### SPUN LIGHT F F6612030

# RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

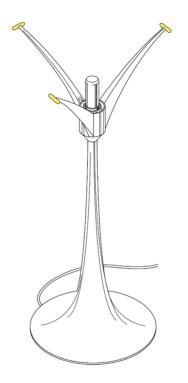


Fig.2


# Collocate and insert the white rubber diffuser supports on the tips of the lamp spokes.

EΝ

### SPUN LIGHT F F6612030

## RF6610100

BAG WITH DIFFUSER SUPPORTS AND O-RING

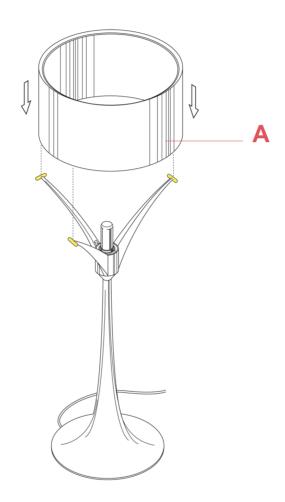



Place the diffuser (A) on the lamp body.

REV. 1 DATE 03/08/2021


SPUN LIGHT F F6612030

EΝ

# RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER



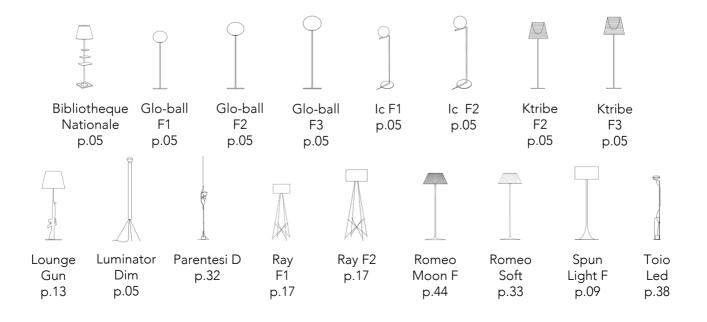

EN

# RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER







Fig.2

Open the box of the damaged dimmer.

For the opening, it is necessary to remove the rubber pad from underneath the dimmer box (refer to fig.1); Unfasten the screw that locks the triangle terminal cover (refer to fig.2);

EN

# RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER







Fig.4

Turn the dimmer box and remove the terminal cover (refer to fig. 3);

Unfasten the three screws of the cable clamps (refer to fig. 4);

EN

# RF28045

LED 220/240V 40-250W 4-100W RONDÒ DIMMER



Fig.5



Fig.6

Remove the cable clamp (refer to fig. 5) and disconnect the cables from the green terminal box (refer to fig. 6).

Assemble now the new dimmer:

Connect the cables respecting the polarities, lock the wires by positioning the cable clamp and then fasten the three screws, cover the green terminal box with the triangle cover, turn the dimmer box, fasten the screw and stick-on the rubber pads.