


2097/18

Designed by Gino Sarfatti, 1958

A1352057




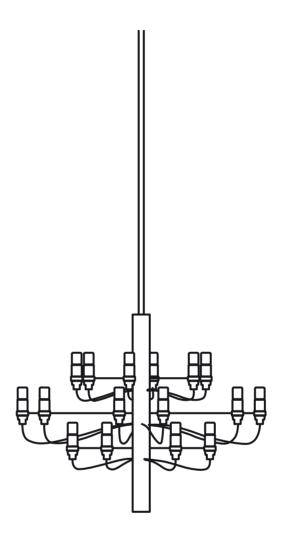

2097/18

ΕN

A1352057

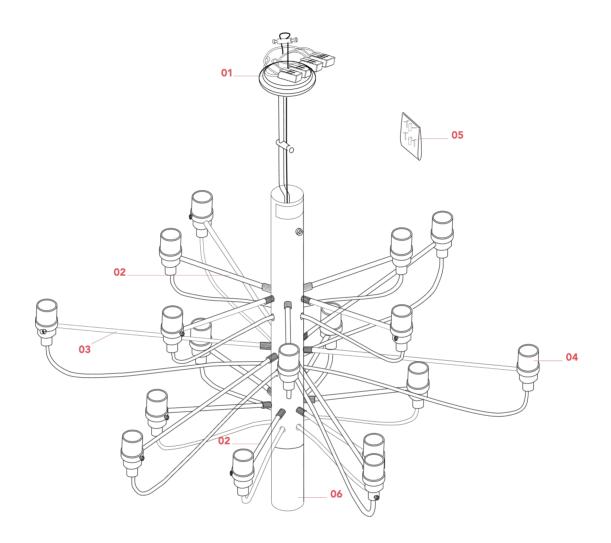

01. RL7060800 – Ceiling rose

02. RL7060457 – Chrome short arm (200mm)

03. RF33863 – Chrome medium arm (310mm)

04. RL7050100 – 2097 E14 lamp holder

05. RL7050757 – 2097 chrome screw kit

06. RL7050900 – Chrome lower cap





ΕN

RL7060800

CEILING ROSE



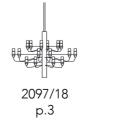






ΕN

RL7060800

CEILING ROSE

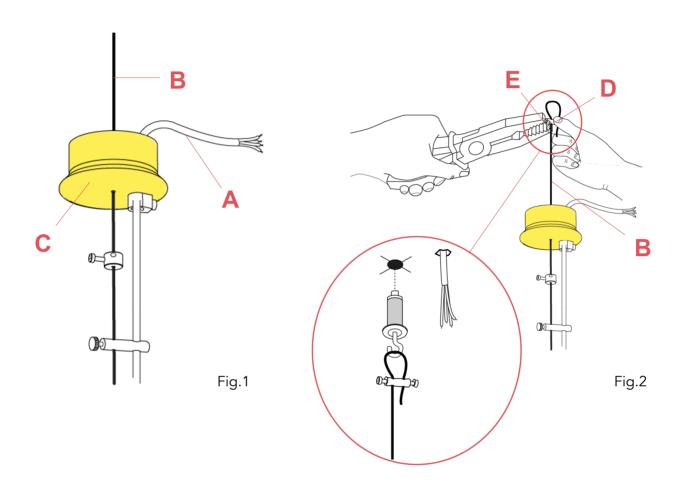

Insert the power supply cable (A) and the steel wire (C) through the ceiling rose (C).

Adjust and then cut the steel wire (B) to the length desired.

Insert the steel wire (B) through the clamp (D) so as to form a loop. Tighten screw (E).

ΕN

RL7060800

CEILING ROSE

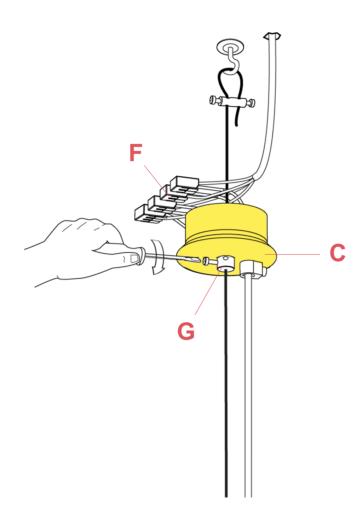


Fig.3

Connect the power supply cord to the terminal block (F). The apparatus has been designed for double wall switch:

Neutral wire = BLUE.

1st phase wire for 1st wall switch = BROWN.

2nd phase 2nd wall switch = BLACK.

If you choose to utilize only on single wall switch it is necessary to bridge the brown wire with the black wire

Push the ceiling rose (C) into position and lock it through the cable clamp (G).




ΕN

RL7060457

CHROME SHORT ARM (200mm)




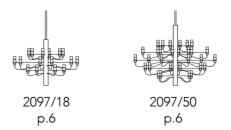

ΕN

RL7060457

CHROME SHORT ARM (200mm)

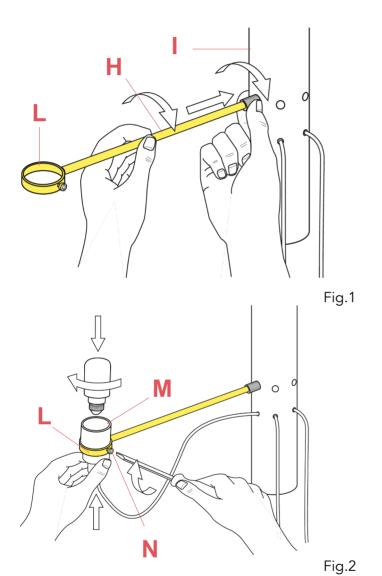

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).



ΕN

RF33863


CHROME MEDIUM ARM (310mm)



ΕN

RF33863

CHROME MEDIUM ARM (310mm)

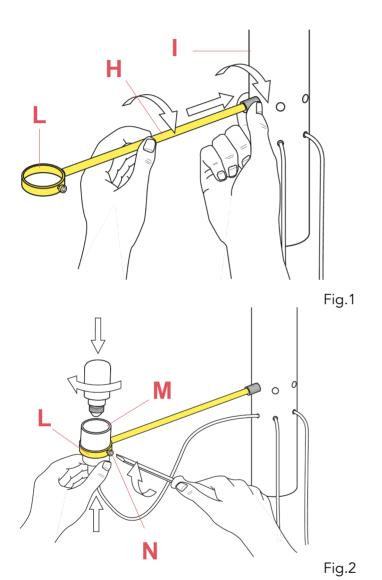

Screw the arms (H) to the lamp body (I), taking care not to bend on the rings (L). Insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N).





ΕN


RL7050100

2097 E14 LAMP HOLDER









p.12

ΕN

RL7050100

2097 E14 LAMP HOLDER

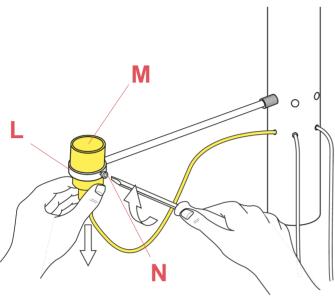


Fig.1

Unfasten the screw (N) and free the lamp holder (M) from the ring of the arm (L) present on the lamp fixture.

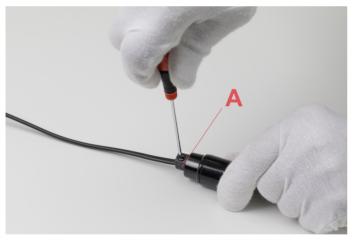


Fig.2

Loosen the screw (A) of the cable clamp on the spare-part kit and also the one present on the lamp fixture.

ΕN

RL7050100

2097 E14 LAMP HOLDER



Fig.3



Fig.4

Push down the brass central contact (B) of the fitting of the spare part kit and also on the fitting of the lamp fixture.

ΕN

RL7050100

2097 E14 LAMP HOLDER



Fig.5

Unfasten the sleeve (C) from the support (D) of the spare-part kit and also on the lamp fixture.

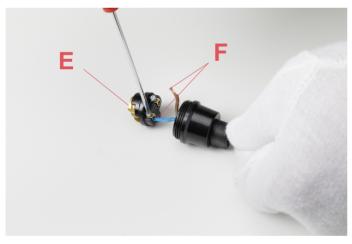


Fig.6

Disconnect the electrical wires (F) from the fitting (E) on the spare-part kit and also on the lamp fixture.

Remove all the components from the electrical cable.

ΕN

RL7050100

2097 E14 LAMP HOLDER

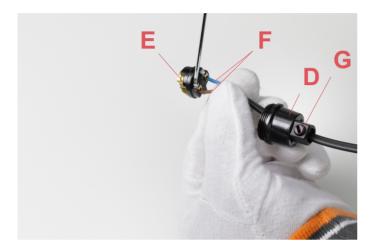




Fig.7 Fig.8



Fig.9

Assemble now the new spare-part:

Insert through the electrical cable the cable clamp (G) and the support (D).
Connect the wires (F) on the fitting (E) respecting the polarities.(Fig.7)

Insert the fitting (E) inside the support (D).(Fig.8)

Lift-up the brass central contact (B) on the fitting (E). (Fig.9)

Fasten the sleeve (C) on the support (D).(Fig.5 page 13)

Lock the cable by fastening the screw (A) of the cable clamp.(Fig.2 page 11)

Once replaced the lamp holder it is necessary to insert the lamp holder (M) in the ring (L) and fasten them by locking the screw (N). (Fig.1 page 11)




ΕN


RL7050757

2097 CHROME SCREW KIT












ΕN

RL7050900

CHROME LOWER CAP







2097/30 p.18