

BELLHOP WALL UP

Designed by E. Barber & J. Osgerby, 2021

F1080019






BELLHOP WALL UP

ΕN

F1080019

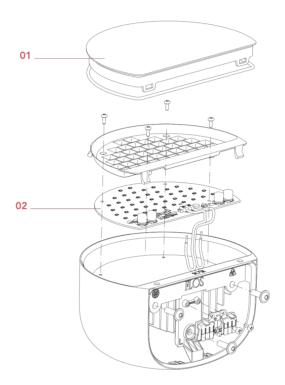

01. RF32828 – Transparent diffuser

02. RF1080100 – Led chip Board



BELLHOP WALL UP

F1080019

RF32828

TRANSPARENT DIFFUSER



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



BELLHOP WALL UP

F1080019


RF32828

TRANSPARENT DIFFUSER



Fig.1

Remove the diffuser assembly from the body lamp.

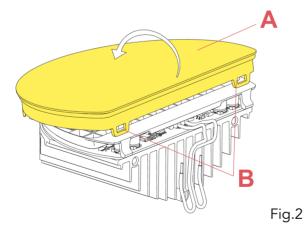

Release the diffuser (A) using the hooks (B).

Assemble now the new spare parts.



BELLHOP WALL UP

F1080019

RF1080100

LED CHIP BOARD



WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.



BELLHOP WALL UP

F1080019

RF1080100

LED CHIP BOARD

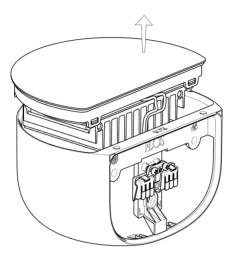


Fig.1

Remove the diffuser assembly from the body lamp.

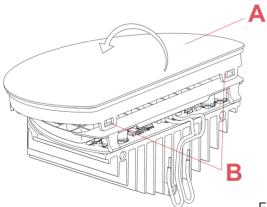


Fig.2

Release the diffuser (A) using the hooks (B).



BELLHOP WALL UP

F1080019

RF1080100

LED CHIP BOARD


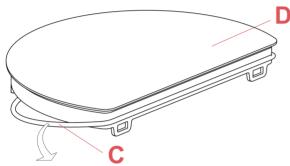


Fig.3

Remove the gasket (C) from the diffuser (D).



Remove the reflector (E) by unscrewing the 4 screws (F).

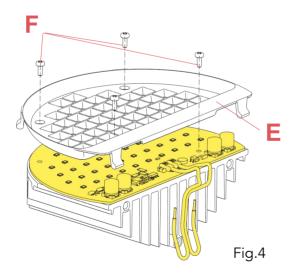

BELLHOP WALL UP

F1080019

RF1080100

LED CHIP BOARD

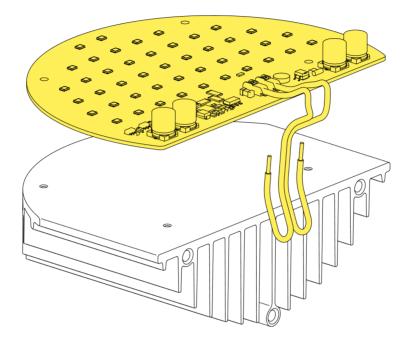


Fig.5

Remove the Led chip board.

Assemble now the new spare part.

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.