


## **GLO-BALL S1**

Designed by Jasper Morrison, 1998

F3005061




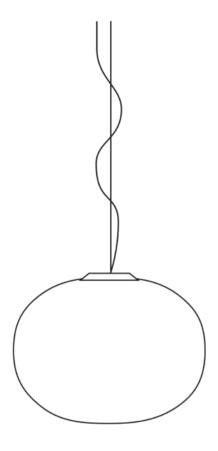

### **GLO-BALL S1**

ΕN

F3005061

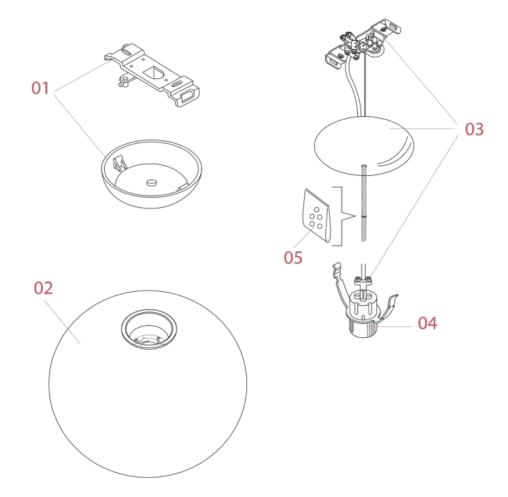

- 01. RA3690209 White ceiling rose Assembly
- **02. F3007061** White diffuser
- 03. F3006061 Electrical wiring assembly
- 04. RF2500200 Lamp holder assembly
- 05. RF05382 Kit of quantity 5 OR rings




ΕN

### RA3690209

WHITE CEILING ROSE ASSEMBLY




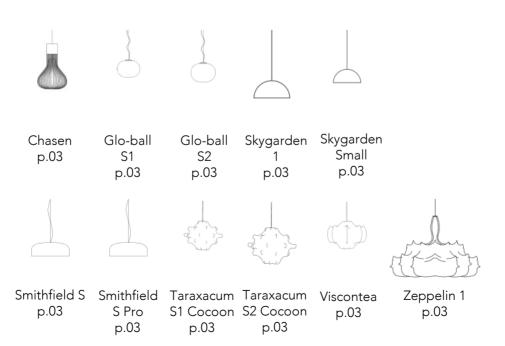


ΕN

### RA3690209

WHITE CEILING ROSE ASSEMBLY

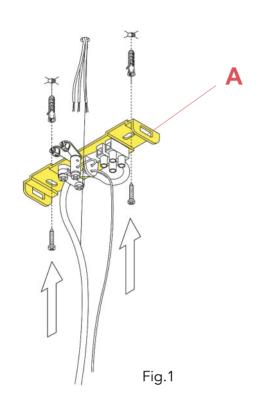

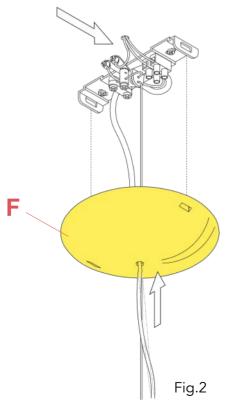

Fix the wall fixture (A) with the appropriate expansion bolts. **NOTE**: Select and employ screw anchors which are suited to the surface where the appliance is to be installed.

Connect the power cable to the terminal box (not supplied with the spare-part). Mount the ceiling-rose (F).



ΕN

# F3007061

WHITE DIFFUSER



ΕN

### F3007061

WHITE DIFFUSER


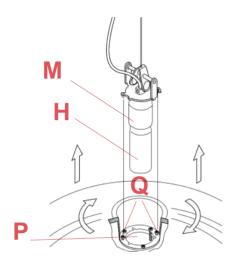


Fig.1

Insert the bulb (H) into the bulb socket (M). Insert the bulb socket and bulb into the correct seat (P) of the diffuser, fasten the bulb socket by tightening the screws (Q).



To balance the diffuser (I), act on the spring (O).

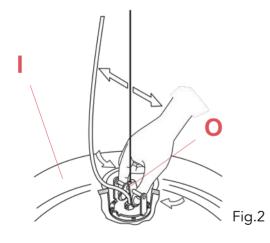

ΕN

## F3006061


ELECTRICAL WIRING ASSEMBLY



ΕN

### F3006061

**ELECTRICAL WIRING ASSEMBLY** 

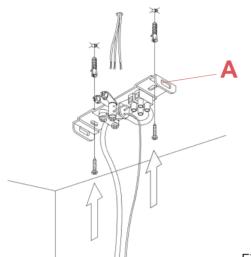



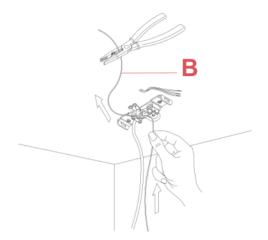


Fig.2

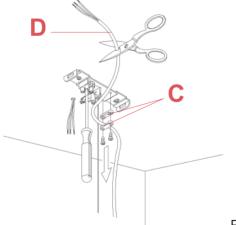


Fig.3

Fix the wall fixture (A) with the appropriate expansion bolts. **NOTE**: Select and employ screw anchors which are suited to the surface where the appliance is to be installed.(Fig.1)


Cut the steel cable (B) at the desired height.(Fig.2)

Detach the cable-block (C), disconnect the feed cable (D) and cut it at the height desired.(Fig.3)

ΕN

#### F3006061

**ELECTRICAL WIRING ASSEMBLY** 

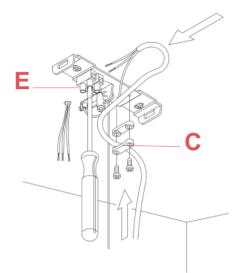



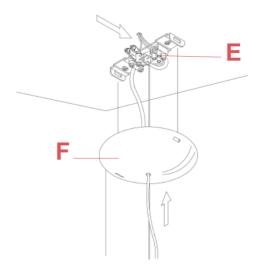


Fig.5

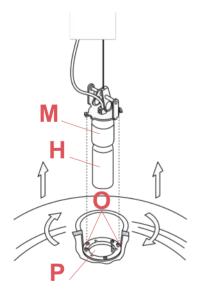


Fig.6

Mount the cable-block (C) and carry out the wiring to the terminal block (E).(Fig.4)

Connect the power cable to the terminal block (E) and earthing. Mount the ceilingrose (F).(Fig.5)


Insert the bulb (H) into the bulb socket (M). Insert the bulb socket and bulb into the correct seat (P) of the diffuser, fasten the bulb socket by tightening the screws (Q).(Fig.6)



ΕN

#### F3006061

**ELECTRICAL WIRING ASSEMBLY** 

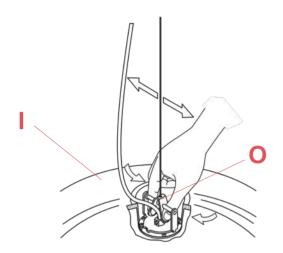



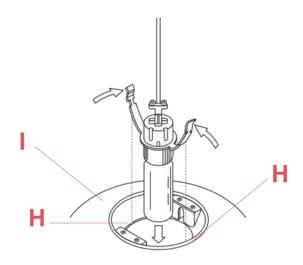


Fig.7



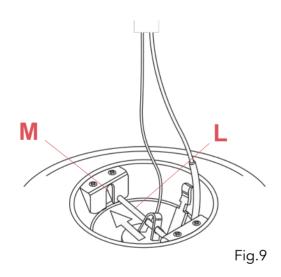

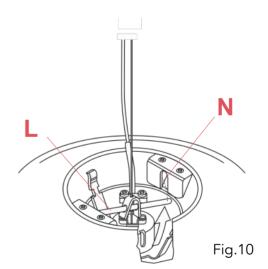

To balance the diffuser (I), act on the spring (O).(Fig.7)
Insert the bulb. Insert the bulb-holder in its housing (H) in the diffuser (I).(Fig.8)
Insert the rod (L) in the housing (M).(Fig.9)
Hook the rod (L) into the housing (N), up to the blocking "click".(Fig.10)
To balance the diffuser (I), act on the spring (O).(Fig.7)




ΕN

### RF2500200

LAMP HOLDER ASSEMBLY



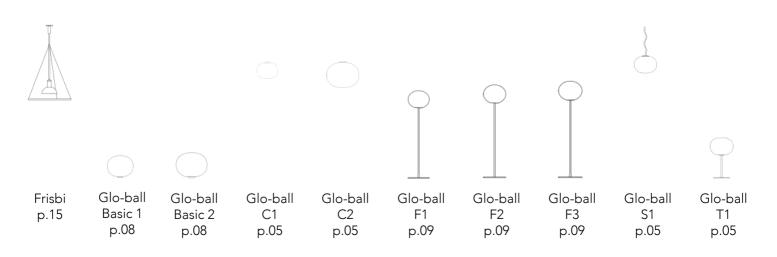

ΕN

### RF2500200

LAMP HOLDER ASSEMBLY

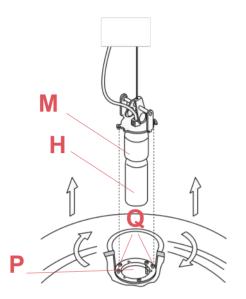


Fig.1

Remove the white glass diffuser.

It is necessary to ask somebody to hold the glass diffuser.

Loosen without removing the 2 screws (Q), unlock the lamp-holder assembly and the lamp-bulb (H) from the lamp holder (M).

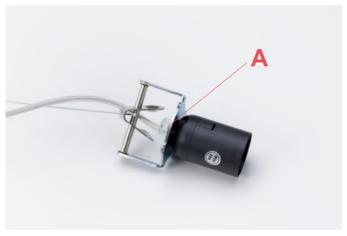


Fig.2

Loosen without removing the screw of the cable clamp (A).

ΕN

### RF2500200

LAMP HOLDER ASSEMBLY

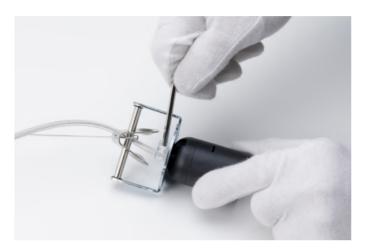


Fig.3

Remove the lamp holder.



Fig.4

Insert a flat headed screw driver inside the opening of the lateral clamp and unhook the lamp holder (M) from the support. Repeat the same operation also for the opposite side.

ΕN

## RF2500200

LAMP HOLDER ASSEMBLY

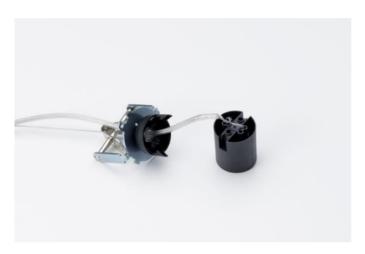


Fig.5

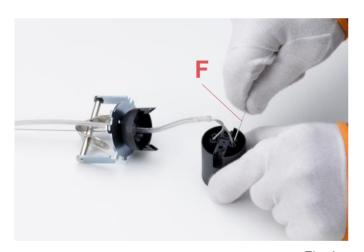


Fig.6

Remove the lamp holder from its support and disconnect the electrical wires by pressing the push terminals with a paper clip (F) or something similar.

ΕN

## RF2500200

LAMP HOLDER ASSEMBLY

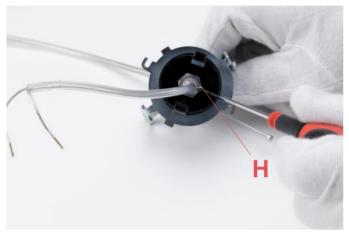


Fig.7

Unfasten the locking screw (H) by utilizing a tiny flat headed screw driver.



Fig.8

Remove the lamp holder support by unfastening it from the assembly.

ΕN

#### RF2500200

LAMP HOLDER ASSEMBLY



Fig.9

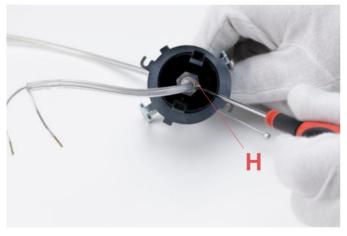


Fig.10

Assemble now the new spare-part:

Tighten the lamp holder support (I) onto the assembly and then fasten the locking screw (H) by utilizing a flat headed screw driver. Insert the isolator (F).

Connect the electrical wires to the lamp holder by utilizing always the paper clip. Connect the transparent Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the transparent Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

ΕN

### RF2500200

LAMP HOLDER ASSEMBLY



Fig.11

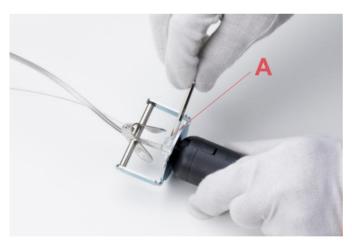


Fig.12

Hook the lamp holder (D) on the support (I).

Fasten the screw of the cable clamp (A).

Insert the lamp-bulb (H) into the lamp holder (M). Insert the lamp holder assembly with lamp-bulb in the diffuser opening (P), fasten the lamp holder assembly by tightening the screws (Q).(Fig.1 page 12)



ΕN

#### RF05382

KIT OF QUANTITY 5 OR RINGS



