


# **GLO-BALL C2**

Designed by Jasper Morrison, 1999

F3028000




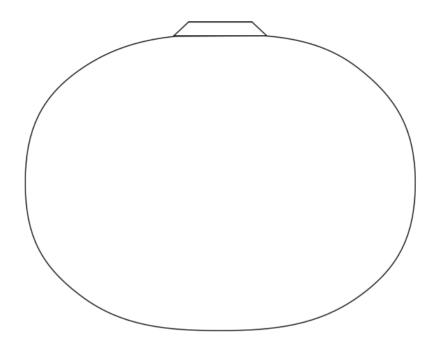

# **GLO-BALL C2**

ΕN

F3028000

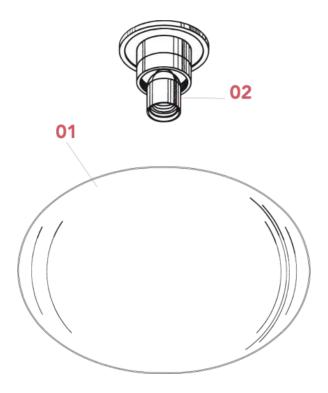

**01. F3055061** – White diffuser 2

02. RF2500200 – Lamp holder assembly




ΕN

# F3055061

WHITE/GREY DIFFUSER 2



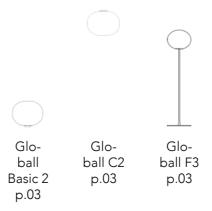

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

# F3055061

WHITE/GREY DIFFUSER 2

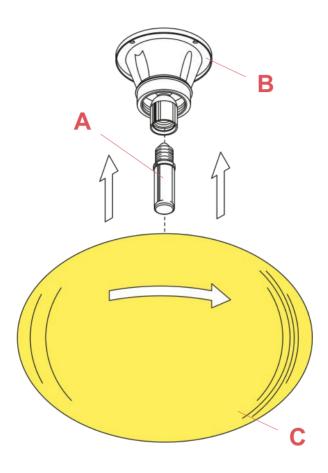


Fig.1

Insert the bulb (A). Position the diffuser (C) on the support (D) and secure it, turning it clockwise.




ΕN

### RF2500200

LAMP HOLDER ASSEMBLY



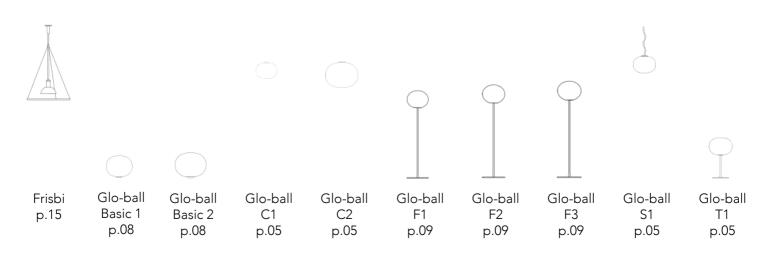

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

### RF2500200

LAMP HOLDER ASSEMBLY

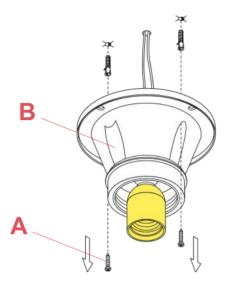


Fig.1

It is necessary to remove the lamp assembly (B) from the ceiling by unfasten the two fixing screws (A).

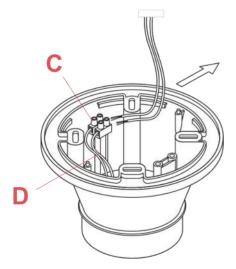


Fig.2

Cut-off the cable tie (D) and disconnect the wires from the terminal box (C).

ΕN

#### RF2500200

LAMP HOLDER ASSEMBLY



Fig.3

Turn the assembly around.

Remove the lamp holder.
Insert a flat headed screw of

Insert a flat headed screw driver inside the opening of the lateral clamp and unhook the lamp holder (D) from the support. Repeat the same operation also for the opposite side.



Fig.4

Remove the lamp holder from its support and disconnect the electrical wires by pressing the push terminals with a paper clip (E) or something similar.

ΕN

# RF2500200

LAMP HOLDER ASSEMBLY



Fig.5



Fig.6

Cut-off the cable tie (F) and remove the cable isolator (G) from the electrical cable.

ΕN

#### RF2500200

LAMP HOLDER ASSEMBLY





Fig.7

Fig.8





Fig.9

Fig.10

Unfasten the locking screw (H) by utilizing a tiny flat headed screw driver.

Remove the lamp holder support (I) by unfastening it from the assembly.

Assemble now the new spare-part:

Tighten the lamp holder support (I) onto the assembly and then fasten the locking screw (H) by utilizing a flat headed screw driver.

Insert the isolator (F).

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

#### RF2500200

LAMP HOLDER ASSEMBLY



Fig.11

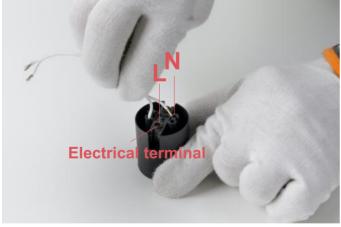


Fig.12

Connect the electrical wires to the lamp holder by utilizing always the paper clip. Connect the Brown "L" (live) wire in the terminal that corresponds (opposite side) to the centre brass contact of the lamp holder and then connect the Blue "N" (neutral) wire in the other terminal.

N.B. The electrical wires are connected by pushing the wires inside the terminals, therefore it is necessary to verify that they are connected properly.

Now reassembly the lamp:

Hook the lamp holder (D) on the support (I). Turn the assembly around and connect the electrical wires to the terminal box (C).(Fig.2 page 6)

Fix the lamp assembly (B) by fastening the screws (B). (Fig.1 page 6)