

Designed by Konstantin Grcic, 2019


F0268000





ΕN

F0268000

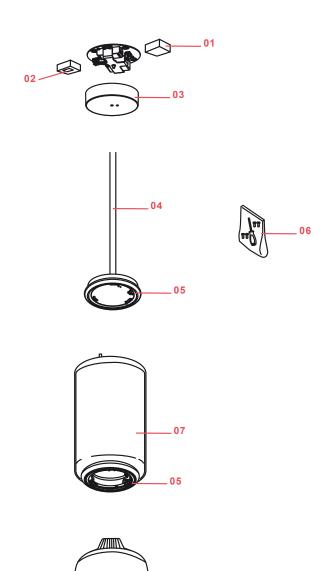

09

- $\textbf{01. RF0410500} \ \ \text{Power supply kit for Arrangements small \& Noctambule}$
- 02. RF0410300 Led dimmer kit
- **03. RF27422** Ceiling Rose cover Diameter. 185 H. 45
- **04. F0253030A** Suspension attack
- 05. RF27498 Ring led diffuser
- **06. RF0254100** Fixing screws kit
- **07. F0254000A** Low cylinder
- **09. F0260000A** Cone glass



NOCTAMBULE S F0268000

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE



NOCTAMBULE S F0268000

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE



Fig.1

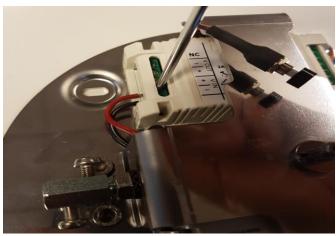


Fig.2

Remove the cover.

Disconnect the Vin and Vout terminals from the dimmer using a screwdriver.

NOCTAMBULE S F0268000

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE





Fig.4

Unscrew the screws (A & B) from the old Power Supply using a screwdriver.

Remove the old Power Supply.

Replace the old Power Supply with the new one.

Now Connect the Vin and Vout terminals to the dimmer using a screwdriver.(Fig.2 page 4)

Fasten back the screws (A & B) of the new Power Supply using a screwdriver.


Place the cover on the ceiling rose. (Fig.1 page 4)



ΕN

RF0410300

LED DIMMER KIT

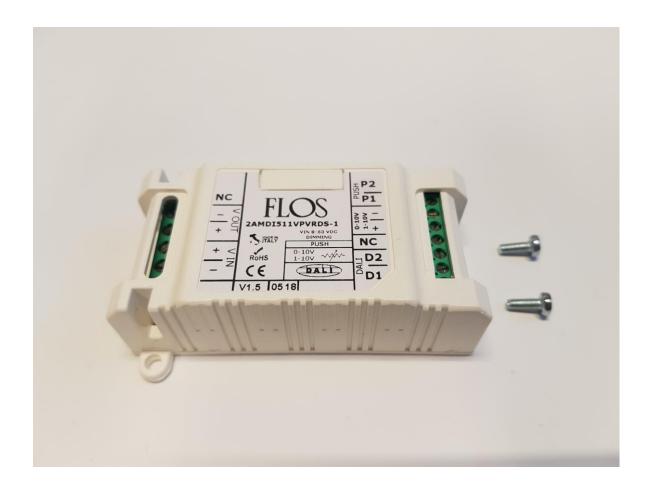

NOCTAMBULE S F0268000

RF0410300

LED DIMMER KIT

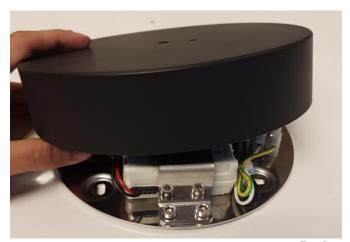


Fig.1



Fig.2

Remove the cover.

Disconnect the Vin and Vout terminals from the dimmer using a screwdriver.

NOCTAMBULE S F0268000

RF0410300

LED DIMMER KIT

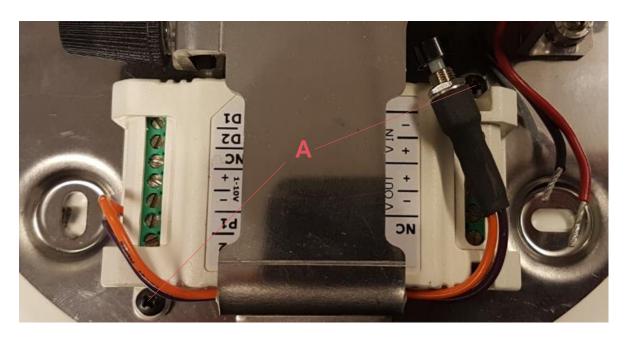


Fig.3

Unscrew the screws (A) from the old dimmer using a screwdriver.

Remove the old dimmer and replace it with the new one.

Fasten back the screws (A) of the new dimmer using a screwdriver.

Connect the Vin and Vout terminals of the new dimmer using a screwdriver. (Fig. 2 page 7)

Place the cover on the ceiling rose. (Fig.1 page 7)



ΕN

RF27422

CEILING ROSE COVER DIAMETER 185 H.45





ΕN

RF253030A

SUSPENSION ATTACK



ΕN

RF253030A

SUSPENSION ATTACK

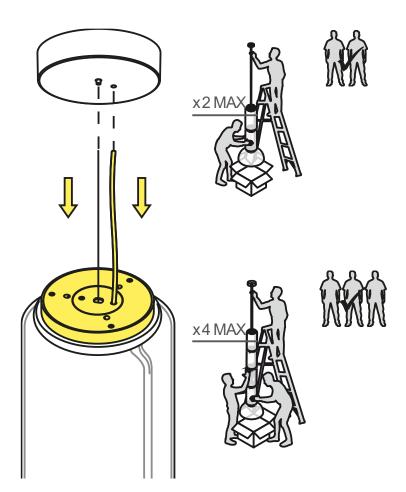


Fig.1

Disconnect the cylinders from the ceiling rose.

ΕN

RF253030A

SUSPENSION ATTACK


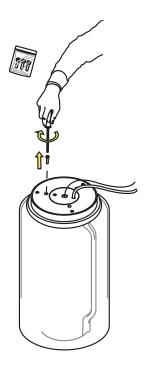


Fig.2

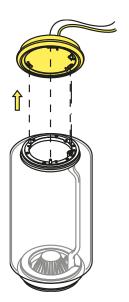

Unscrew the screws from the suspension attack.

Remove the suspension attack from the cylinder.

Connect the new suspension attack to the cylinder.

Tighten the screws to the suspension attack.

Fig.3 Connect the lamp to the ceiling rose.



ΕN

RF27498

RING LED DIFFUSER





NOCTAMBULE S F0268000

RF0254100

FIXING SCREWS KIT





NOCTAMBULE S F0268000

F0254000A

LOW CYLINDER



NOCTAMBULE S F0268000

F0254000A

LOW CYLINDER

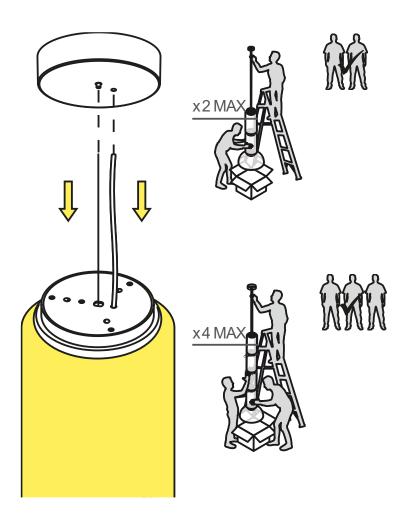


Fig.1

Disconnect the cylinders from the ceiling rose.

ΕN

F0254000A

LOW CYLINDER


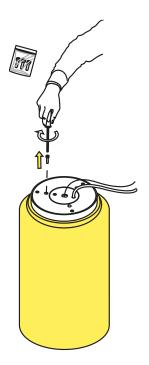


Fig.2

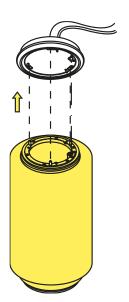

Unscrew the screws from the suspension attack.

Remove the suspension attack from the cylinder.

Connect the new suspension attack to the cylinder.

Tighten the screws to the suspension attack.

Fig.3 Connect the lamp to the ceiling rose.

NOCTAMBULE S F0268000

F0254000A

LOW CYLINDER




Fig.4 Figure 4 and 5 (only for 2/3/4 cylinders version)

Unscrew the screws from the cylinder (Fig. 4).

Disconnect the cylinder from the other one (Fig. 5).

Replace the old cylinder with the new one.




Connect the cylinders.

Tighten the screws to the cylinder.

Connect the suspension attack to the cylinder.

Tighten the screws to the suspension attack.

Fig.5 Connect the lamp to the ceiling rose.





NOCTAMBULE S F0268000

F0260000A

CONE GLASS



NOCTAMBULE S F0268000

F0260000A

CONE GLASS

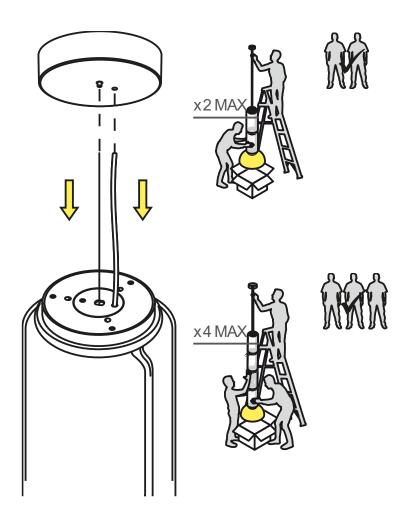


Fig.1

Disconnect the cylinders from the ceiling rose.

ΕN

F0260000A

CONE GLASS


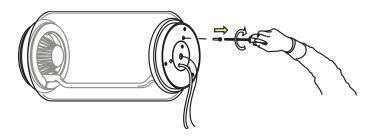


Fig.2

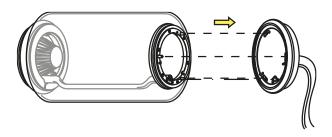

Carefully place the lamp in a horizontal position by resting it on the cylinder packages.

Unscrew the screws from the suspension attack.

Fig.3 Remove the suspension attack from the cylinder.

ΕN

F0260000A

CONE GLASS

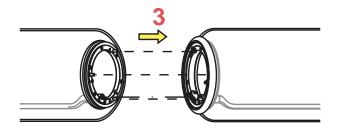


Fig.4

Fig.5

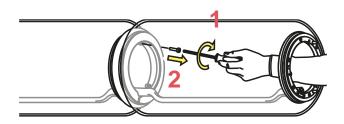




Figure 4 and 5 (only for 2/3/4 cylinders version)


Connect the cylinder to the other one (3).


Tighten the screws to the cylinder (1-2).

NOCTAMBULE S F0268000

F0260000A

CONE GLASS

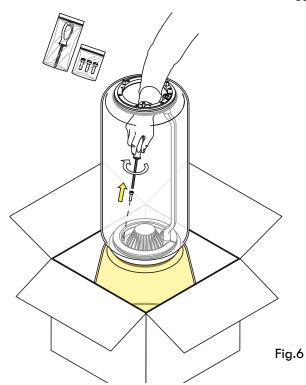

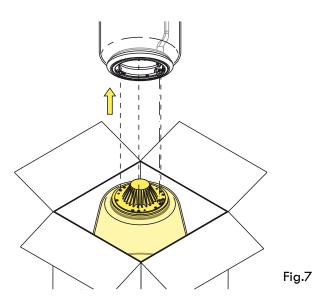

Unscrew the screws from the cone (Fig. 6).

Disconnect the cylinder from the cone (Fig. 7).

Remove the old cone and place the new one.

Connect the cylinder to the new cone.

Tighten the screws to the new cone.

Now assemble all the components, please proceed in reverse order.

Connect the suspension attack to the cylinder.

Tighten the screws to the suspension attack.

Connect the lamp to the ceiling rose.