FLOS

NOCTAMBULE S

Designed by Konstantin Grcic, 2019


F0276000



EN

NOCTAMBULE S

F0276000

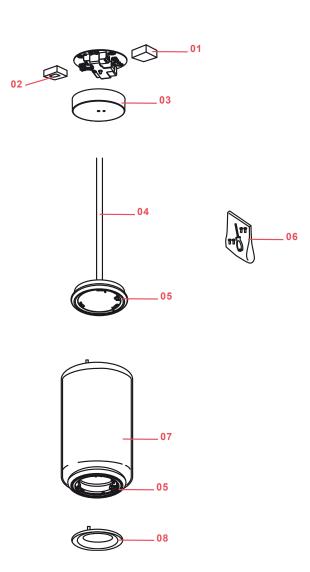

- 01. RF0410500 Power supply kit for Arrangements small & Noctambule
- 02. RF0410300 Led dimmer kit
- 03. RF27422 Ceiling Rose cover Diameter. 185 H. 45
- 04. F0253030A Suspension attack
- 05. RF27498 Ring led diffuser
- 06. RF0254100 Fixing screws kit
- 07. F0254000A Low cylinder
- 08. F0258030A Terminal ring

ΕN

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE



ΕN

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE

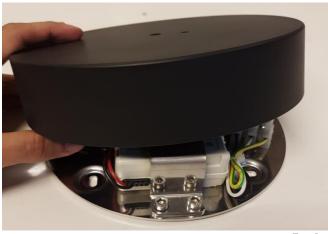


Fig.1



Fig.2

Remove the cover.

Disconnect the Vin and Vout terminals from the dimmer using a screwdriver.

EN

RF0410500

POWER SUPPLY KIT FOR ARRANGEMENTS SMALL & NOCTAMBULE





Fig.4

Unscrew the screws (A & B) from the old Power Supply using a screwdriver.

Remove the old Power Supply.


Replace the old Power Supply with the new one.

Now Connect the Vin and Vout terminals to the dimmer using a screwdriver.(Fig.2 page 4)

Fasten back the screws (A & B) of the new Power Supply using a screwdriver. Place the cover on the ceiling rose. (Fig.1 page 4)

EN



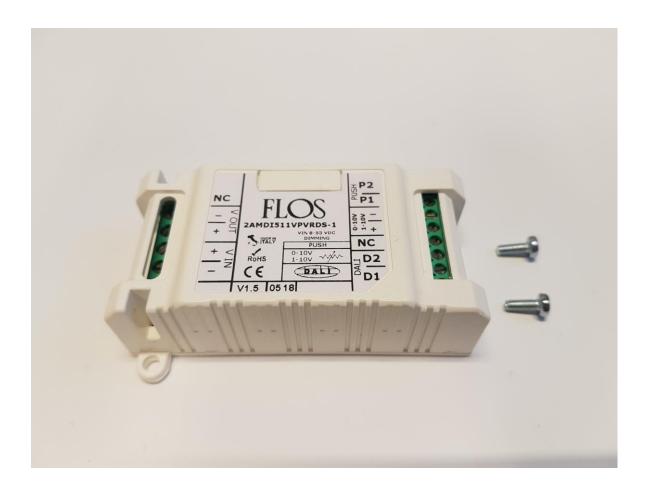

ΕN



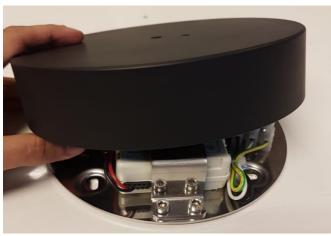


Fig.1



Fig.2

Remove the cover.

Disconnect the Vin and Vout terminals from the dimmer using a screwdriver.

EN



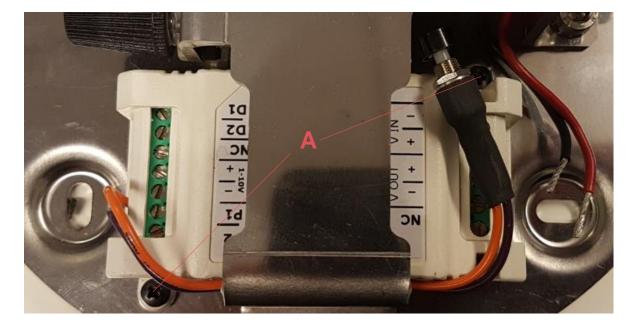


Fig.3

Unscrew the screws (A) from the old dimmer using a screwdriver.

Remove the old dimmer and replace it with the new one.

Fasten back the screws (A) of the new dimmer using a screwdriver.

Connect the Vin and Vout terminals of the new dimmer using a screwdriver. (Fig. 2 page 7)

Place the cover on the ceiling rose. (Fig.1 page 7)

WARNING! When installing and whenever acting on the appliance, ensure that the power supply has been switched off. For the installation of the spare-part, it is necessary to consult a qualified electrician.

ΕN

RF27422

CEILING ROSE COVER DIAMETER 185 H.45



ΕN





ΕN

RF253030A

SUSPENSION ATTACK

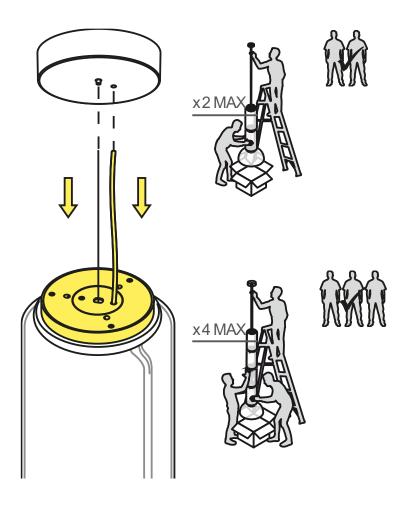


Fig.1

Disconnect the cylinders from the ceiling rose.

EN




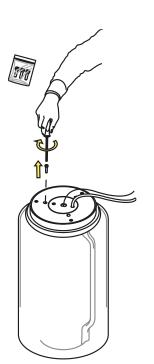


Fig.2

Fig.3



Unscrew the screws from the suspension attack. Remove the suspension attack from the cylinder. Connect the new suspension attack to the cylinder. Tighten the screws to the suspension attack. Connect the lamp to the ceiling rose.

ΕN





ΕN





ΕN





EN

F0254000A

LOW CYLINDER

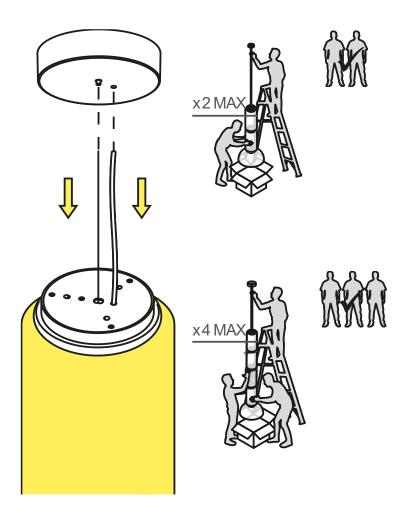


Fig.1

Disconnect the cylinders from the ceiling rose.

EN



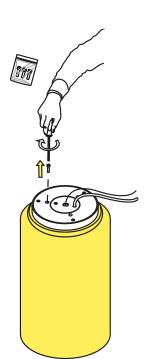


Fig.2


Fig.3



Unscrew the screws from the suspension attack. Remove the suspension attack from the cylinder. Connect the new suspension attack to the cylinder. Tighten the screws to the suspension attack. Connect the lamp to the ceiling rose.

ΕN



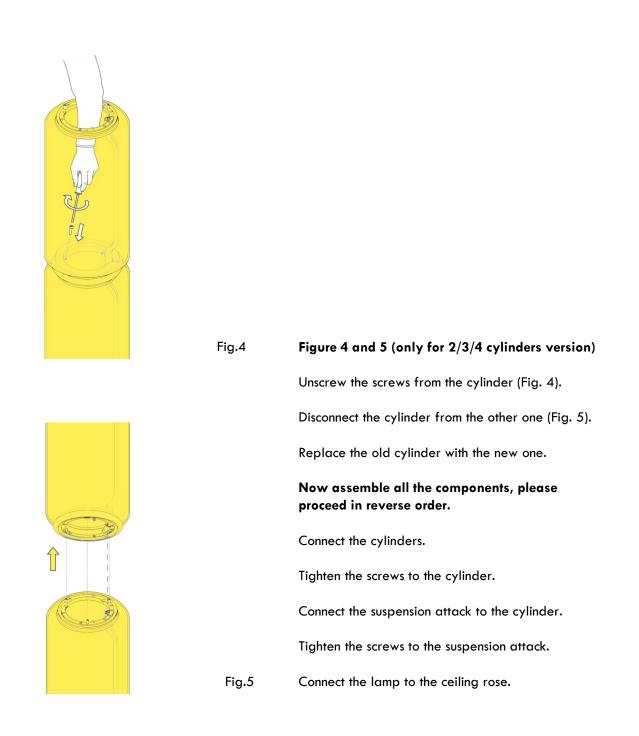

ΕN





ΕN



